



AltiWare™ OE

Version 4.6

**System Installation and
Administration Manual**

Revised 03/2003 4403-0001-4.6

WARNING!

Toll fraud is committed when individuals unlawfully gain access to customer telecommunication systems. This is a criminal offense. Currently, we do not know of any telecommunications system that is immune to this type of criminal activity. AltiGen Communications, Inc. will not accept liability for any damages, including long distance charges, which result from unauthorized and/or unlawful use. Although AltiGen Communications, Inc. has designed security features into its products, it is your sole responsibility to use the security features and to establish security practices within your company, including training, security awareness, and call auditing.

NOTICE

While every effort has been made to ensure accuracy, AltiGen Communications, Inc. will not be liable for technical or editorial errors or omissions contained within the documentation. The information contained in this documentation is subject to change without notice.

This documentation may be used only in accordance with the terms of the AltiGen Communications, Inc. License Agreement.

AltiGen Communications, Inc.
47427 Fremont Blvd.
Fremont, CA 94538
Telephone: 510-252-9712
Fax: 510-252-9738
E-mail: info@altigen.com
Web site: www.altigen.com

TRADEMARKS

AltiGen, AltiServ, AltiWare, AltiReach, AltiLink, AltiConsole, AltiAdmin, Zoomerang, and Dynamic Messaging are trademarks or registered trademarks of AltiGen Communications, Inc.

All other brand names mentioned are trademarks or registered trademarks of their respective manufacturers.

Copyright © AltiGen Communications, Inc. 1998-2003. All rights reserved.

Printed in U.S.A. 03/2003 4403-0001-4.6

Contents

Preface: About This Manual	1-xxxv
---	---------------

Chapter 1

Altiserv Office Solutions	1-1
--	------------

Altiserv Platforms.	1-4
--------------------------	-----

Overview	1-5
-----------------------	------------

Key Altiserv Characteristics	1-5
------------------------------------	-----

PBX Features	1-8
--------------------	-----

Automatic Call Distribution Features	1-13
--	------

Automated Attendant Features	1-17
------------------------------------	------

Altigen Voice Mail Features	1-18
-----------------------------------	------

Internet Integration Features	1-20
-------------------------------------	------

System Administration Features	1-21
--------------------------------------	------

T1/PRI/E1 Features	1-23
--------------------------	------

Voice over IP Features	1-23
------------------------------	------

Voice over IP Session Support Altiserv Features	1-26
---	------

Altiserv Tools	1-26
----------------------	------

Optional Add-On Software	1-27
--------------------------------	------

Optional Add-On Products	1-28
--------------------------------	------

Chapter 2

System Requirements	2-1
----------------------------------	------------

Hardware Requirements	2-1
-----------------------------	-----

System Key Requirement	2-1
------------------------------	-----

Selecting the Altiserv Platform	2-1
---------------------------------------	-----

Minimum System Requirements	2-1
-----------------------------------	-----

Proper Grounding and Loop Current	2-3
---	-----

Uninterruptible Power Supply (UPS)	2-3
--	-----

Operating Environment	2-3
-----------------------------	-----

Functional Specifications	2-4
---------------------------------	-----

Altigen Board Installation	2-8
----------------------------------	-----

Altigen Board Options/	2-9
------------------------------	-----

System Limitations	2-11
--------------------------	------

Power Requirements	2-12
--------------------------	------

Heat Factor	2-13
Installing a Cooling Fan	2-13
Proper Board Handling Procedures	2-14
Electrostatic Discharge (ESD) Warning	2-14
Operating Environment	2-15
Packaging for Shipment and Storage	2-17
AltiWare Conference Resource Limits	2-18

Chapter 3

Software Installation3-1

AltiWare as an NT Service	3-2
Preparing to Install AltiWare OE	3-2
Firewall Considerations	3-3
Licensing	3-5
Registration	3-6
Dealer Installation ID	3-7
Registration Methods	3-7
Upgrades	3-8
Lost Licenses	3-9
Before New Installation	3-10
To Begin New Installation	3-10
Before Upgrade	3-17
Backup Database	3-17
IP Extension Protocol Change	3-17
VoIP Board Upgrade	3-18
Shutting Down the AltiGen Switching Service	3-18
To Begin Upgrade	3-19
Online License Registration Procedures	3-28
Manual Online License Registration Procedure	3-37
Offline Registration Procedures	3-44
Windows Emergency Repair Disk	3-44
Installing AltiAdmin on Remote Systems	3-44
Shutting Down AltiServ when Changing or Adding Hardware	3-45
Transferring the AltiServ to Another Server Chassis	3-46
AltiWare Uninstall	3-47
Downgrade Procedure	3-47
Software Installation Troubleshooting	3-49

Chapter 4

Getting Around AltiAdmin4-1

AltiAdmin: the AltiWare OE Administrator	4-1
Logging in for the First Time	4-1
The Main Menu	4-3
Quick Access Toolbar	4-3
The View Windows	4-5
Boards View Window	4-5
Extension View Window	4-6
Trunk View Window	4-7
Workgroup View Window	4-8
Call Log View Window	4-9
IP Trunk Current Traffic Statistics Window	4-9
Status Bar	4-10
Logging In	4-10
Changing the Password	4-11
Stopping the AltiGen Switching Service	4-11

Chapter 5

System Configuration5-1

Setting General Parameters	5-2
Setting a System Number Plan	5-4
Assigning Trunk, Feature, IP Trunk, & Route Access	5-6
Setting Business Hours	5-8
Routing Calls on Holidays	5-9
Configuring System Speed Dialing	5-11
Adding Names and Comments	5-12
Defining System Call Restrictions	5-12
Blocking Calls to Area Codes from All Extensions	5-13
Setting Toll Call Prefixes	5-14
Setting Emergency Numbers	5-14
Locking Attacked Extensions	5-14
Blocking All Outgoing Calls.	5-14
Enabling Hop Off for Tie Trunks	5-15
Creating Account Codes	5-15
Adding and Deleting Account Codes	5-16
Setting up Call Reports	5-17
Internal (Local) Logging of Call Data	5-18
External (Remote) Logging of Call Data	5-20
Exporting Through a Local Port	5-22
Managing Messages	5-22

Setting Message Notification Retries	5-23
Setting Message Management Options.	5-24
Setting Message Recording Options.	5-24
Setting E-mail Messaging (SMTP/POP3) Options	5-25
Synchronizing E-mail with Exchange	5-26
Setting Area Code Toll Definitions	5-26
Defining an IP Dialing Table	5-27
About the Location ID Digit Length.	5-28
Defining the IP Dialing Table.	5-29
Setting the Location ID Digit Length	5-29
Defining Remote Locations	5-29
Configuring DNIS Routing	5-31
Adding and Deleting DNIS Route Entries	5-32
Defining the Routing	5-33
Using a Tenant Table	5-33
Configuring the Tenant Table.	5-34
Modifying the Tenant Table	5-35
Creating Distribution Lists	5-36
Defining a Distribution List	5-37
Setting Logout Reason Codes	5-38

Chapter 6

Board Configuration6-1

Using the Triton Resource Board	6-2
Configuring the Quantum Board	6-2
Configuring the Triton Analog Extension Board	6-4
Configuring the Triton Analog Trunk LS/GS and LS Boards	6-5
Configuring the Triton VoIP Board	6-7
Voice over IP for AltiWare OE	6-7
Triton VoIP Board	6-7
Network Configuration Guidelines for VoIP	6-8
Network Configuration Guidelines for the Alti-IP 600	6-10
Configuration Guidelines for NAT.	6-11
IP Phone Configuration	6-12
H.323 NAT	6-12
Firewall Considerations	6-23
Setting up H.323 Traffic Forwarding for H.323 NAT	6-24
Setting Up an AltiWare-to-AltiWare IP Network	6-25
Board Installation	6-26
Troubleshooting—Common Symptoms and Solutions	6-27

Configuring the Triton T1/PRI Board	6-29
Service Parameters for T1.....	6-29
Service Parameters for PRI.....	6-31
Board Configuration	6-32
Triton T1 Configuration - Triton T1/PRI Dialog Box	6-34
Setting up T1 or PRI Channels on the Triton T1/PRI Board	6-39
Installing a Channel Service Unit (CSU) to the Triton T1 or T1/E1/PRI Board	6-44
Troubleshooting—Common Symptoms	6-44

Chapter 7

Trunk Configuration	7-1
Selecting Trunks to Set Attributes	7-2
Setting General Trunk Attributes	7-3
Quantum Trunk Properties	7-6
Triton Analog Trunk Properties	7-9
Triton Analog Trunk LS/GS Properties	7-11
Triton VoIP Trunk Configuration.....	7-13
Triton T1/PRI Trunk Properties	7-15
Incoming Call Routing	7-20
Outgoing Call Blocking	7-21

Chapter 8

Extension and Group Configuration	8-1
Setting up Extensions	8-3
Adding New Extensions	8-5
Establishing Basic Extension Attributes.....	8-6
Agent Check Box	8-8
Forced Account Code	8-8
Call Recording Options.....	8-9
Setting Email Options	8-9
Changing the Extension Location or Type	8-10
Setting an IP Extension.....	8-11
Setting the Line Properties	8-15
Phone Display Options	8-19
Setting up Groups	8-20
Establishing Group Membership	8-21
Adding Extensions to Groups	8-23
Assigning Groups to Extensions.....	8-26

Operation Notes	8-28
Setting up Station Speed Dialing	8-28
Setting the Mailbox Options	8-30
Setting an Information-Only Mailbox	8-31
Disabling a Mailbox	8-32
Synchronizing with Exchange Server	8-32
Setting Mailbox Playback Options	8-32
Setting Mailbox Capacities	8-33
Setting Message Notification Options	8-33
Setting the Message Types for Notification	8-34
Setting the Type of Notification	8-35
Setting Notification Timing	8-36
Setting Notification Business Hours	8-36
Enabling Message Notification	8-36
Configuring Calling Restrictions	8-36
Setting Call Restriction Options	8-37
Setting Other Call Restrictions	8-38
Setting Answering Options	8-39
Forwarding All Calls	8-41
Handling Busy Calls	8-43
Setting Call Waiting Options	8-43
Enabling “Do Not Disturb”	8-44
Handling Unanswered Calls	8-44
Setting Huntgroup Handling	8-45
Setting Workgroup Handling	8-46
Configuring One Number Access	8-48
Enabling One Number Access	8-49
Setting Caller ID Verification	8-49
Specifying Forwarding Numbers	8-50
Setting Up Monitor Lists	8-51
Configuring a Monitor List	8-52

Chapter 9

Out Call Routing Configuration9-1

Working with Route Definitions	9-2
Setting Default Routes	9-4
About Call Routing and 911 Calls	9-5
Setting Dialing Pattern Routing	9-6

Chapter 10

Auto Attendant Configuration	10-1
Planning is Essential	10-1
Example: Auto Attendant Planning	10-3
Adding Auto Attendants	10-4
Editing Auto Attendants	10-5
Configuring Menu Items.....	10-7
Making Auto Attendant Assignments.....	10-11
Phrase Management	10-11
Using Pre-Recorded Prompts	10-11
Recording Custom Phrases	10-12
Using Professionally Recorded Phrases	10-13

Chapter 11

Additional Setup	11-1
Audio Peripheral Configuration	11-1
Configuring Music On Hold and Recorded Announcements	11-2
Setting Greeting and Update Prompts.....	11-3
Configuring Overhead Paging	11-3
MVIP Clock Configuration	11-4
Feature Tips	11-5

Chapter 12

System Data Management	12-1
Using Backup and Restore	12-1
Backing up Files	12-2
Scheduling Backups	12-3
Restoring Backed up Files	12-4

Chapter 13

System Report Management	13-1
System Summary Report	13-1
System Log	13-2
IP Cumulative Traffic Statistics	13-3

Chapter 14

Data and Internet Integration	14-1
Network Protocol and Addressing	14-1

Network	14-1
Protocol	14-1
Transport Protocols	14-1
Network Address	14-2
Local Address	14-3
Mixed-Media Messaging	14-3
Setting Up Email Service	14-4
Before You Begin	14-4
Setting Up LAN and Internet Email on the Server	14-4
Setting Up LAN and Internet Email on the Client	14-9
Setting up an Exchange Server	14-10
Exchange Server Windows NT 4.0 Integration	14-10
Prerequisites	14-11
Exchange Server Prerequisites	14-13
Exchange Server Configuration	14-15
Microsoft Exchange Administrator Configuration	14-16
Installing Outlook 2000 Client on the Altiserv System ..	14-17
Enabling the Exchange Server	14-22
Testing the Exchange Server Setup	14-25
Troubleshooting Tips	14-26
Notes	14-27
Prerequisites	14-28
Exchange Server Prerequisites	14-30
Microsoft Exchange Administrator Configuration	14-33
Installing Outlook 2000 Client on the Altiserv System ..	14-35
Enabling the Exchange Server	14-35
Testing the Exchange Server Setup	14-35
Troubleshooting Tips	14-35
Notes	14-35
Exchange on Windows 2000	14-35
About Altireach Configuration	14-37

Chapter 15

Using TAPI	15-1
System Requirements	15-1
Installing TAPI Services	15-2
Changing TAPI Configuration Parameters	15-3

Chapter 16

Setting Up IP Extensions	16-1
AltiGen IP Phone Service	16-1
Intercom with IP Phones	16-1
System Requirements	16-2
Configuration	16-2
AltiAdmin	16-3
Clients	16-4

Chapter 17

Alti-IP 600 Phone Configuration	17-1
--	-------------

Chapter 18

AltiWeb	18-1
System Requirements	18-1
AltiWeb Components	18-1
AltiWeb Directory Structure	18-3
Tagging Pages for URL History	18-5
Configuring Auto Attendant	18-17
Troubleshooting	18-20
AltiWeb Security	18-21
Symantec Norton AntiVirus Corporate Edition 7.5	18-21
Enable Real-Time scan	18-22
Schedule Daily Full Scan on all drives	18-23

Chapter 19

Tools	19-1
Configuration Reader	19-1
Extension Checker	19-1
MVIP Test Tool	19-4
AltiDBReader	19-4
DINA Manager	19-9

Chapter 20

Basic Call Router & Call Router Advanced	20-1
Basic Call Router	20-1
Call Router Advanced	20-9
Additional Call Router Advanced Features	20-21

Testing Call Router	20-27
Testing SQL Server Database.....	20-30

APPENDIX A

Call Accounting Report Formats	A-1
RTM Data Schema	A-9
SMDR Reporting Format	A-15
Trunk Calls In Format:	A-15
Extension Calls Out Format:	A-16
From Extension A.....	A-16
From Trunk B	A-17

APPENDIX B

E1 R2 CAS Installation	B-1
-------------------------------------	------------

APPENDIX C

Product Repair Services & Technical Support	C-1
Technical Support	C-1
Repair and Replacement	C-2
RMA Form	C-7

Glossary.....	G-1
----------------------	------------

Index	I-1
--------------------	------------

Readers Comment Form.....	R-i
----------------------------------	------------

Liability & Warranty

Limitation of Liability

Except for personal injury, direct damages to tangible personal property proximately caused by Altigen products and liability otherwise expressly assumed in a written agreement signed by Altigen, the liability of Altigen, its affiliates, suppliers, and authorized resellers for any claims, losses, damages, or expenses from any cause whatsoever (including acts of omission of third parties), regardless of the form of action, whether in contract, tort or otherwise, shall not exceed an amount equal to the lesser of the direct damages proven or the purchase price of the product. In no event shall Altigen or its affiliates, suppliers, or authorized resellers be liable for incidental, consequential, or any other indirect loss or damage (including lost profits or revenues) incurred in connection with the product. This limitation of liability shall survive failure of the exclusive remedy set forth in the limited warranty referred to in this book under "Warranty."

FCC and Industry Canada Compliance

This section describes the requirements for compliance with Federal Communications (FCC) Rules and Industry Canada CS-03 standard.

Statement

This equipment has been tested and found to be in compliance with the limits for a Class B digital device pursuant to Part 15 and Part 68 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial or residential environment. This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

This Class B digital apparatus meets all requirements of the Canadian interference-causing Equipment Regulations. Cet appareil numérique de la Classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

FCC Requirements

1. The Federal Communications Commission (FCC) has established Rules which permit this device to be directly connected to the telephone network. Standardized jacks are used for these connections. This equipment should not be used on party lines or coin phones.
2. If this device is malfunctioning, it may also be causing harm to the telephone network; this device should be disconnected until the source of the problem can be determined and until repair has been made. If this is not done, the telephone company may temporarily disconnect service.
3. The telephone company may make changes in its technical operations and procedures; if such changes affect the compatibility or use of this device, the telephone company is required to give adequate notice of the changes. You will be advised of your rights to file a complaint with the FCC.
4. If the telephone company requests information on what equipment is connected to their lines, inform them of:

- a. The telephone number to which this unit is connected.
- b. The ringer equivalence number. [0.0B]
- c. The USOC jack required. [RJ11C]
- d. The FCC Registration Number. [see label on board]
- e. Industry Canada (Industrie Canada) Certification Number.
[see label on board]

Items (b) and (d) are indicated on the label. The Ringer Equivalence Number (REN) is used to determine how many devices can be connected to your telephone line. In most areas, the sum of the RENs of all devices on any one line should not exceed five (5.0). If too many devices are attached, they may not ring properly.

Service Requirements

In the event of equipment malfunction, all repairs should be performed by our Company or an authorized agent. It is the responsibility of users requiring service to report the need for service to AltiGen or to one of our authorized agents. Service can be obtained at your Authorized AltiGen Dealer.

Equipment Attachment Limitations - Industry Canada

NOTICE: The Canadian Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational, and safety requirements. The Department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the company's inside wiring associated with the single line individual service may be extended by means of a certified connector assembly (telephone extension cord). The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to the certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines, and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

Caution: Users should not attempt to make such connections themselves, but should contact the appropriate electrical inspection authority, or electrician, as appropriate.

The **Load Number** (LN) assigned to each terminal device denotes the percentage of the total load to be connected to a telephone loop that is used by the device, to prevent overloading. The termination on a loop may consist of any combination of devices subject only to the requirement that the total of the Load Number of all the devices does not exceed 100.

WARNING: Changes or modifications to this unit not expressly approved in writing by AltiGen Communications, Inc. could void the user's authority to operate this equipment.

Port Identification, Facility Interface, and Service Order Codes

The following tables list the manufacturer's network interface port designations, Facility Interface Codes (FIC), Ringer Equivalence Number (REN), or Service Codes and the network jacks for the required facilities. The facility interface and service order codes are with reference to the codes specified in Table 5 of Appendix D of FCC Form 730 Application Guide of January 1998.

Table 1. Quantum Network Trunk Interfaces for Loop Start, Ground Start and DID Services

Manufacturer Port Identifier	Facility Interface Code (FIC)	REN	Network Jack (USOC)
ALTI-CD0408UD	02LS2	0.0B	RJ-11C
ALTI-CD0804UD	02LS2	0.0B	RJ-11C
ALTI-CD0408UD	02GS2	0.0B	RJ-11C
ALTI-CD0804UD	02GS2	0.0B	RJ-11C
ALTI-DID0408UD	02RV2-T	0.0B	RJ-11C

Table 2. Network Digital Trunk Interfaces for Digital Services

Triton T1/E1 PRI FCC Registration No., Part 68 55MUSA-25184-PF-E

Manufacturer Port Identifier	Facility Interface Code (FIC)	Service Order Code (SOC)	Network Jack (USOC)
ALTI-T1E1-1	04DU9-BN	6.0P/AS.2	RJ-48C*
ALTI-TTT1-1	04DU9-DN	6.0P/AS.2	RJ-48C*
ALTI-TTT1-1	04DU9-1KN	6.0P/AS.2	RJ-48C*
ALTI-TTT1-1	04DU9-1SN	6.0P/AS.2	RJ-48C*

*The Triton T1/PRI interface connects to the Public Switched Telephone Network through an FCC registered NCTE which specifies the type of network jack to be used.

Table 3. Triton Analog Trunk Interfaces for Loop Start/Ground Start and Loop Start Services

Manufacturer Port Identifier	Facility Interface Code (FIC)	REN	Network Jack (USOC)
ALTI-TTAT-12GS	02GS2	0.5B	RJ21X, RJ11
ALTI-TTAT-12	02LS2	0.5B	RJ21X, RJ11

Disruption of Network

If any Quantum or Triton boards disrupt the telephone network, the telephone company can discontinue your service temporarily. If possible, the telephone company will notify you in advance. If advance notice is not practical, they will notify you as soon as possible. You are also informed of your right to file a complaint with the FCC.

Direct Inward Dialing (DID) Answering Supervision

Customers allowing Triton T1/PRI, Quantum, or Triton Analog Station Analog DID to be operated in such a manner as to not provide for proper answer supervision is a violation of Part 68 of the FCC rules.

Proper answer supervision occurs when:

1. The AltiServ system returns answer supervision to the PSTN when DID calls are:
 - Answered by the called station.
 - Answered by the attendant.
 - Routed to a recorded announcement that can be administered by the customer.
2. The AltiServ system returns answering supervision on all DID calls forwarded to the PSTN.

Class A Equipment

This is a Class A product. In a domestic environment, this product may cause radio interference, in which case, the user may be required to take adequate measures.

Safety

(Seguridad/Sicherheit)

The following information is included in this publication for the use and safety of installation and maintenance personnel.

Important Safety Instructions

- Read all of the instructions before attempting to operate the equipment and before connecting the power supply.
- Always follow basic safety precautions to reduce the risk of fire, electrical shock, and injury to persons.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture, or install this product near water. Never spill liquid of any kind on this product.
- Never push objects of any kind into this product through module openings or expansion slots, as they may touch dangerous voltage points or short out parts, which could result in the risk of fire or electrical shock.
- Refrain from opening the cabinet as there are high voltage components inside. Refer servicing to qualified service personnel. If you are a qualified service personnel, power down everything before opening.
- Do not attach the power supply cord to building surfaces. Do not allow anything to rest on the power cord or allow the cord to be abused by persons walking on it.
- To protect this equipment from overheating, do not block the slots and openings in the module housings that are provided for ventilation.

Seguridad

La siguiente información se incluye en la presente publicación para la utilización y seguridad del personal instalador y de mantenimiento.

Información de Seguridad de Importancia

- Lea todas las instrucciones antes de que intente operar el equipo y antes de conectar la fuente de alimentación.
- Observe siempre las precauciones básicas de seguridad, a fin de reducir el riesgo de incendio, electrochoque y de lesiones al personal.
- Con objeto de evitar incendios o el riesgo de electrochoque, no exponga la unidad a la lluvia, humedad, ni tampoco instale este producto cerca del agua. Jamás derrame ninguna clase de líquido sobre el producto.
- Jamás inserte objeto alguno, de ninguna clase, a través de las aberturas del módulo o de las ranuras de expansión de este producto, ya que podrían establecer contacto con puntos de voltaje peligrosos, o provocar cortos circuitos en los componentes del producto, y esto a su vez podría originar el riesgo de incendio o de electrochoque.
- Absténgase de abrir el gabinete ya que éste contiene componentes de alto voltaje. Asígnele el mantenimiento únicamente a personal capacitado. Si usted forma parte de dicho personal capacitado, corte absolutamente toda la energía eléctrica antes de que abra el gabinete.
- No sujete el cordón del suministro eléctrico a las superficies del edificio. No permita que objeto alguno descansa sobre el cordón del suministro eléctrico, ni que la gente lo maltrate al caminar sobre él.
- A fin de evitar el sobrecalentamiento del equipo, no obstruya las ranuras y aberturas que se encuentran sobre las cubiertas del módulo, ya que éstas se suministran para su ventilación. Read all of the instructions before attempting to operate the equipment and before connecting the power supply.

Sicherheit

Die in dieser Veröffentlichung enthaltene Information befaßt sich mit der Sicherheit von Personal sowohl beim Einbau als auch bei der Wartung des Geräts.

Wichtige Sicherheitsbestimmungen

- Vor Einschaltung der Stromversorgung und der Inbetriebnahme des Geräts mit allen Bestimmungen sorgfältig vertraut machen.
- Um die Gefahr von Feuer, elektrischem Schlag und anderen persönlichen Verletzungen zu verhüten, sind grundsätzliche Vorsichtsmaßnahmen zu beachten.
- Zur Vermeidung von Feuer oder elektrischem Schlag muß verhütet werden, das Gerät Regen oder Feuchtigkeit auszusetzen, oder aber es in Wassernähe zu installieren. Es darf auf keinen Fall Flüssigkeit auf das Gerät verschüttet werden.
- Um die Gefahr von Feuer oder elektrischem Schlag auszuschalten, die durch Berührung mit Spannungsteilen oder einem elektrischen Kurzschluß entstehen kann, dürfen auf keinen Fall Objekte irgendeiner Art durch Modulöffnungen oder Erweiterungsschlitze in das Gerät eingeführt werden.
- Das Gehäuse enthält Hochspannungsteile und sollte deshalb nicht geöffnet werden. Wartung ist von qualifiziertem Wartungspersonal durchzuführen. Im Wartungsfalle ist vor der Öffnung des Gehäuses sämtliche Stromzufuhr abzuschalten.

- Stromversorgungskabel nicht an Gebäudeteilen befestigen. Keine Gegenstände auf das Stromversorgungskabel legen oder auf das Kabel treten.
- Zur Verhütung der Überhitzung des Gerätes ist die Verschließung von Ventilations-schlitzten und -öffnungen im Modulgehäuse zu vermeiden.

Safety with Electricity



DANGER

Do not take chances with your life. Follow these safety guidelines carefully.

High Voltages

- Observe all safety regulations and read the warnings, cautions, and notes posted on the equipment.
- Find the switch to power off the cabinet. Read the posted instructions.
- Ensure that equipment can not be powered from another source or controlled from a different circuit breaker or disconnecting switch.
- When a procedure requires that you power off the system:
 - Lock the wall box-switch in the off position.
 - Attach a DO NOT OPERATE tag to the wall box-switch.
- **Never assume** that the power is turned off. Always check to ensure that a circuit does not have power.
 - Note:** Unit must have ground wire attached if trunks are attached and system is unplugged.
- Do not work alone. Work with another person who knows the locations of the power-off switches, especially if you are working with *exposed* electrical circuits. (See note above.)
- Follow the instructions in the manual carefully, especially when working with circuits that are powered. Disconnect power when instructed to do so in the procedures.
- Disconnect all power before working near power supplies unless otherwise instructed by a maintenance procedure.
- Disconnect all power before installing changes in machine circuits unless otherwise instructed by a maintenance procedure.
- High voltages capable of causing shock are used in this equipment. Be extremely careful when measuring high voltages and when servicing cards, panels, and boards while the system is powered on.
- Do not wear jewelry or other metal objects when working on the equipment.
- When possible, work with one hand so that a circuit is not created.
- Use caution when installing or modifying telephone lines. Never install telephone wiring during an electrical storm.
- Never install a telephone jack where it can get wet unless the jack is specifically designed for wet conditions.

- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.

Seguridad en El Manejo de La Electricidad



DANGER/PELIGRO

Do No ponga en riesgo su vida. Siga estos lineamientos de seguridad al pie de la letra.

Alto Voltaje

- Observe todas las normas de seguridad y lea las advertencias, avisos de precaución y notas que se encuentran adheridos al equipo.
- Encuentre el interruptor que corta la corriente eléctrica del gabinete. Lea las instrucciones que se encuentran adheridas.
- Cerciérese de que la corriente eléctrica del equipo no pueda encenderse desde otra fuente, ni controlares desde ningún otro interruptor de circuitos o interruptor de desconexión.
- Cuando alguno de los procedimientos requiera que corte usted la corriente eléctrica del sistema:

— Fije el interruptor del centro de carga que se encuentra empotrado en la pared, en la posición de apagado (off).

— Pegue una etiqueta de NO OPERAR sobre el interruptor del centro de carga.

- **Jamás presuponga** que la energía eléctrica se encuentra apagada. Cerciérese siempre de que el circuito no tiene energía eléctrica.

Nota: Cuando existan troncales conectadas a la unidad y el sistema se encuentre desenchufado, la unidad deberá tener instalado el cable de conexión a tierra.

- No trabaje sólo. Trabaje con alguna otra persona que conozca las ubicaciones de los interruptores de apagado de la corriente eléctrica, particularmente, si está usted trabajando con circuitos eléctricos descubiertos. (Lea la nota anterior).
- Siga al pie de la letra las instrucciones contenidas en el manual, particularmente, cuando trabaje con circuitos que tengan energía eléctrica. Desconecte la energía cuando las instrucciones del procedimiento se lo indiquen.
- Desconecte toda la energía eléctrica antes de trabajar cerca de cualquier fuente de alimentación, salvo que el procedimiento de mantenimiento le instruya lo contrario.
- Desconecte toda la energía eléctrica antes de efectuar cualquier cambio en los circuitos de la máquina, salvo que el procedimiento de mantenimiento le instruya lo contrario.
- El alto voltaje que utiliza este equipo puede ocasionar electrochoques. Tenga sumo cuidado al medir los altos voltajes y al darle mantenimiento a las tarjetas, paneles y placas cuando la energía eléctrica del equipo se encuentre encendida.
- No use alhajas u otros objetos de metal cuando trabaje en el equipo.
- Cuando le sea posible, trabaje con una sola mano, a fin de no producir un circuito.
- Tenga cuidado cuando instale o modifique líneas telefónicas. Jamás instale cableado telefónico durante una tormenta eléctrica.

- Nunca instale un conector telefónico en donde pueda mojarse, salvo cuando el conector se encuentre especialmente diseñado para funcionar en condiciones de humedad.
- Jamás toque cables o terminales telefónicas que no tengan aislante, a menos que haya desconectado la línea telefónica desde la interfase de la red.

Elektrosicherheit



DANGER/GEFAHR

Nicht mit dem Leben spielen. Sicherheitsrichtlinien sorgfältig beachten.

Hochspannung

- Alle Sicherheitsregeln beachten und am Gerät angebrachte Warnungen und Hinweise lesen.
- Stellen Sie fest, wo sich der Gehäuseschalter befindet. Anleitung lesen.
- Stellen Sie sicher, daß das Gerät weder durch eine andere Stromquelle versorgt noch durch eine andere Sicherung oder Trennschalter kontrolliert werden kann.
- Sollte ein Verfahren die Abschaltung der Anlage erfordern:
 - Wandschalter in der "AUS" - Position sperren
 - Kennzeichen "NICHT BETÄTIGEN" am Wandschalter anbringen
- Gehen Sie NIE davon aus, daß der Strom abgeschaltet ist, sondern überprüfen Sie es.
Note: Anmerkung: Gerät muß geerdet sein, wenn Kabel angeschlossen und die Anlage abgeschaltet ist.
- Nicht alleine arbeiten. Arbeiten Sie mit jemandem, der weiß, wo sich der AUS-Schalter befindet, besonders dann, wenn an freiliegenden Schaltkreisen gearbeitet wird. (Siehe obige Anmerkung).
- Beachten Sie die Anleitungen im Handbuch sorgfältig, besonders dann, wenn an eingeschalteten Schaltkreisen gearbeitet wird. Strom abschalten, wenn ein Verfahren das vorsieht.
- Falls nicht anderweitig durch ein Wartungsverfahren bestimmt, ist der Strom bei Arbeiten nahe der Stromversorgung abzuschalten.
- Falls nicht anderweitig durch ein Wartungsverfahren bestimmt, ist der Strom bei Änderungen am Maschinenstromkreis abzuschalten.
- Dieses Gerät enthält Hochspannungen, die elektrischen Schlag verursachen können. Äußerste Vorsicht ist geboten beim Messen von Hochspannung und beim Warten von Schalttafeln und Steckkarten solange der Strom eingeschaltet ist.
- Bei Arbeiten am Gerät keinen Schmuck oder metallische Gegenstände tragen.
- Möglichst mit einer Hand arbeiten, um keinen Stromkreislauf entstehen zu lassen.
- Vorsicht bei der Installation oder Modifizierung von Telefonleitungen. Keine Telefonleitungen bei Gewittern legen.
- Keine Telefonbuchse installieren, wo die Gefahr besteht, daß sie angefeuchtet wird, es sei denn die Buchse ist für Feuchtigkeit besonders ausgelegt.


- Vermeiden Sie das Berühren von nichtisolierten Telefonkabeln oder Terminals, wenn die Telefonleitung an den Netzschnittstellen nicht abgeschaltet ist.

UL Regulatory Safety Requirements

(Requisitos Reglamentarios de Seguridad de La Asociación de Aseguradores (UL)/Sicherheitserfordernisse gemäß UL (Underwriter's Laboratories, Inc.))

Host Computer

1. Model Altigen/Altiserv apparatus is approved for connection to Telecommunications Systems specified in these instructions for use subject to the conditions set out in them. Any other usage will INVALIDATE this approval.
2. The host machine shall be "CE" marked, with the internal ISA and PCI slots operating at SELV in accordance with EN60950, 1992, issue 2, +A4.
3. This apparatus MUST be professionally installed.
4. The host machine MUST be hardwired earthed in accordance with EN60950, 1992, issue 2, +A4, 1997, cl. 6.2.1.2 with an earth wire from the host machine earthing terminal to the building earth.
5. The host machine SELV circuit is connected to the protective earthing terminal in accordance with EN60950 cl. 2.5.
6. The host machine ISA bus pins B1, B10, or B31 (edge connectors on CPU motherboard/backplane) MUST be less than 0.1 Ohms to host machine earthing terminal.

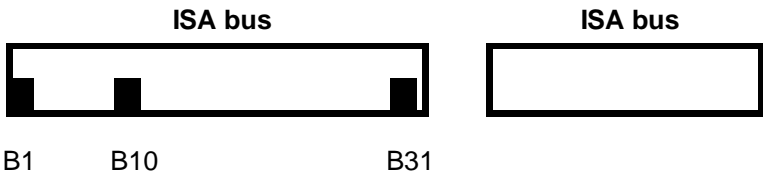

7. Altigen complies with PCI Board specifications Rev. 2.1 (5V 32-bit).
8. The power required by the host machine and the total of all adapter cards installed within the host environment, together with any ancillary apparatus, shall not exceed the power specification of the host machine.
9. It is essential that, when other option cards are introduced that use or generate a hazardous voltage, the minimum creepages and clearances specified in the following table are maintained. A hazardous voltage is one that exceeds 42.4V peak AC or 60V DC. If you have any doubt, seek advice from a competent engineer before installing other adapters into the host machine.

Clearance (mm)	Creepage (mm)	Voltage used or generated by host or other cards
2.0	2.4 (3.8)	Up to 50 Vrms or Vdc

Clearance (mm)	Creepage (mm)	Voltage used or generated by host or other cards
2.6	3.0 (4.8)	Up to 125 Vrms or Vdc
4.0	5.0 (8.0)	Up to 250 Vrms or Vdc
4.0	6.4 (10.0)	Up to 300 Vrms or Vdc


For a host or other expansion card fitted in the host, using or generating voltages greater than 300V (rms or dc), advice from a competent safety engineer must be obtained before installation of the relevant equipment.

Any other usage will **INVALIDATE** the approval of the apparatus, if as a result, it then ceases to conform to the standards against which approval was granted.

Requisitos Reglamentarios de Seguridad de La Asociación de Aseguradores (UL)

Computadora Principal

1. El aparato modelo Altigen/Altiserv se encuentra aprobado para conectarse a los Sistemas de Telecomunicaciones que se especifican en estas instrucciones y para emplearse bajo las condiciones que se indican en las mismas. Cualquier utilización distinta INVALIDA esta aprobación.
2. La computadora principal deberá encontrarse marcada con "CE", y sus ranuras internas ISA y PCI deberán estar operando en SELV, conforme lo indica el EN60950, 1992, edición 2, +A4.
3. La instalación de este aparato la DEBEN ejecutar profesionales.
4. La máquina principal DEBE conectarse a tierra conforme lo dispone el EN60950, 1992, edición 2, +A4, 1997, cl. 6.2.1.2, utilizando cable de conexión a tierra desde la terminal a masa de la máquina principal a la conexión a tierra del edificio.
5. El circuito SELV de la máquina principal debe conectarse a la terminal protectora de aterrizada de conformidad con el EN60950 cl. 2.5.
6. Las clavijas de los canales de distribución ISA B1, B10, o B31 de la máquina principal (conectores planos de entrada lateral de la placa matriz/panel de fondo (motherboard/ back plane)) de la unidad central de proceso (CPU), DEBEN tener menos de 0.1 ohmios en la conexión a tierra de la máquina principal.

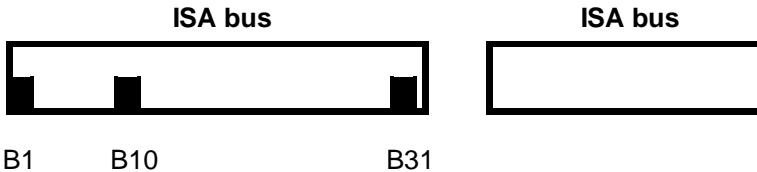

7. El Altigen debe cumplir con las especificaciones de las Placas PCI, Rev. 2.1 (5V 32-bit).

8. La energía eléctrica que requiere la máquina principal y el total del conjunto de tarjetas de los adaptadores instalados dentro del ámbito de la máquina principal, junto con cualquier aparato auxiliar adicional, no deberá exceder las especificaciones de energía eléctrica de la máquina principal.
9. Es esencial que, cuando se introduzcan tarjetas opcionales que utilicen o generen voltajes peligrosos, también se mantengan las distancias y longitudes de frotamiento mínimas y máximas que se especifican en la tabla que aparece a continuación. Voltaje peligroso es aquel que excede de 42.4 voltios, en su valor máximo de cresta en la corriente alterna o, de 60 voltios, en su valor máximo de cresta en la corriente directa. Si tiene usted alguna duda, obtenga asesoría de un ingeniero competente, antes de instalar otros adaptadores en la máquina principal.

Distancia (mm)	Longitud de Frotamiento (mm)	Voltaje empleado o generado por la tarjeta madre u otras tarjetas
2.0	2.4 (3.8)	Hasta 50 Vrms o Vdc
2.6	3.0 (4.8)	Hasta 125 Vrms o Vdc
4.0	5.0 (8.0)	Hasta 250 Vrms o Vdc
4.0	6.4 (10.0)	Hasta 300 Vrms o Vdc


Para la tarjeta de la computadora principal o para las demás tarjetas de ampliación que se inserten en la principal y que utilicen o generen voltajes superiores a los 300 voltios (rms o dc), deberá obtener asesoría de un ingeniero competente en materia de seguridad, antes de proceder a instalar el equipo en cuestión.

Cualquier uso distinto INVALIDARÁ la aprobación otorgada al aparato, si como resultado de dicho uso, éste deja de cumplir con los estándares para los cuales se otorgó la aprobación.

Sicherheitserfordernisse gemäß UL (Underwriter's Laboratories, Inc.)

Host Computer/Wirtsrechner

1. Das Gerät Model AltiGen/AltiServ ist nur in Verbindung mit Telekommunikationssystemen zugelassen, die den gegebenen Anleitungen gemäß den darin geforderten Bedingungen entsprechen. Anderweitige Verwendung setzt diese Zulassung außer Kraft.
2. Das Hauptgerät ist mit "CE" zu bezeichnen, wobei die internen ISA und PSI Steckplätze bei SELV gemäß EN60950, 1992, Ausgabe 2, +A4, fungieren.
3. Das Gerät darf nur von ausgebildetem Personal installiert werden.
4. Das Hauptgerät ist festzuverdrahten und gemäß EN60950, 1992, Ausgabe 2, +A4, 1997, cl. 6.2.1.2 mit einem Erdleiter vom Hauptgeräterdanschluß zum Gebäude zu erden.
5. Der Hauptgerätschaltkreis SELVist mit dem Sicherungserdanschluß gemäß EN60950 cl. 2.5. verbunden
6. Die Hauptgerät ISA Bus Kontaktanschlüsse B1, B10, oder B31 (Randstecker auf CPU Grundplatine/Hauptplatine) MÜSSEN weniger als 0.1 Ohm zum Hauptgeräterdanschluß haben.

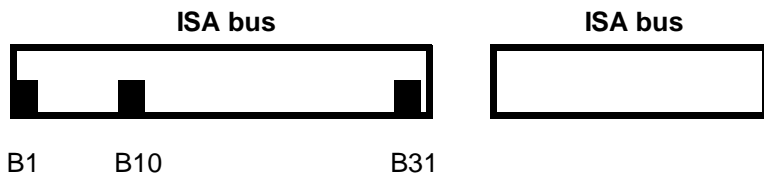

7. Altigen entspricht den PCI Board Anforderungen Rev. 2.1 (5V 32-bit).
8. Der Energiebedarf für das Hauptgerät sowie aller Anschlußkarten im Hauptrechner, einschließlich von Zusatzgerät, darf die für das Hauptgerät spezifizierte Leistung nicht überschreiten.
9. Die in der folgenden Tabelle vorgesehenen Minimalwerte müssen für den Fall beachtet werden, daß mit der Einführung von zusätzlichen Karten riskante Stromspannungen entweder benötigt oder verursacht werden. Dabei gilt als riskant eine Spannung, die Spitzenwerte von 42.4V AC (Wechselstrom) oder 60V DC (Gleichstrom) überschreitet. Im Zweifelsfalle ist ein zuständiger Ingenieur zu Rate zu ziehen.

Abstand (mm)	Schlupf (mm)	Spannungseinheit für Gerät oder Zusatzkarten
2.0	2.4 (3.8)	Bis zu 50 Vrms oder Vdc
2.6	3.0 (4.8)	Bis zu 125 Vrms oder Vdc
4.0	5.0 (8.0)	Bis zu 250 Vrms oder Vdc
4.0	6.4 (10.0)	Bis zu 300 Vrms oder Vdc

Vor dem Einbau einer Haupt- oder Erweiterungskarte in den Hauptrechner, die Werte von 300V (rms or dc) überschreiten, ist der zuständige Sicherheitsingenieur zu Rate zu ziehen.

Anderweitige Benutzung des Geräts, deren Ergebnis die Außerkraftsetzung der erteilten Genehmigung zum Betrieb des Geräts zur Folge hat, macht diese Genehmigung ungültig.

Power Failure

(Fallas en La Energía Eléctrica/Netzausfall)

In the event of a power failure, the first telephone extension on each card (except for the CD0012UD) is connected directly to the first exchange line, thus permitting access to dial the emergency services. This telephone must be powered from the PSTN or have local battery backup capable of calling the emergency services four hours after the power failure event occurs.

En caso de ocurrir una falla en la energía eléctrica, la primera extensión telefónica de cada tarjeta (salvo en lo que respecta a la CD0012UD), se conecta directamente a la primera línea de la central, para así permitir el acceso a la marcación de los servicios de emergencia. Este equipo debe alimentarse a partir del PSTN, o contar con un respaldo de batería local con capacidad suficiente para llamar a los servicios de emergencia, durante cuatro horas después de que ocurra la falla en la energía eléctrica.

Bei Netzausfall wird der erste Telefonanschluß jeder Karte (mit der Ausnahme von CD0012UD) direkt mit der Vermittlung verbunden und garantiert dadurch Zugang zu Notdiensten. Der Anschluß muß von PSTN, betrieben werden oder aber eine örtliche Notstromversorgung haben, die es ermöglicht, Notdienste bis zu vier Stunden nach dem Netzausfall anzurufen.

Wiring

(Cableado/Schaltung)

All wiring must conform to National Telecommunications Wiring Regulations and the National Electrical Wiring Regulations.

Todo el cableado deberá cumplir con las Normas Nacionales del Cableado para Telecomunicaciones y con las Normas Nacionales del Cableado Eléctrico.

Alle Schaltungen müssen den Nationalen Vorschriften für Fernmeldeschaltungen ("National Telecommunications Wiring Regulations") und den Nationalen Vorschriften für Elektroschaltungen ("National Electrical Wiring Regulations") entsprechen.

Additional Requirements for Australia

(Requisitos Adicionales para Australia/Zusätzliche Bestimmungen für Australien)

1. **Warning:** For safety reasons, connect only ACA or AUSTEL permitted or certified equipment to the telephone ports (RJ11) of the patch panel or the audio in/out jacks on the Altiserv card.
 2. **Warning:** THIS EQUIPMENT MUST ONLY BE INSTALLED AND MAINTAINED BY SERVICE PERSONNEL
-
1. **Advertencia:** Por razones de seguridad, conecte solamente equipo permitido o certificado de ACA o AUSTEL a los puertos telefónicos (RJ11) del tablero de conexiones o a los conectores de entrada y salida de la tarjeta de sonido Altiserv.
 2. **Advertencia:** ÚNICAMENTE EL PERSONAL DE MANTENIMIENTO DEBERÁ INSTALAR Y SUMINISTRAR MANTENIMIENTO A ESTE EQUIPO.
 1. **Warning:** Aus Sicherheitsgründen darf nur von ACA oder AUSTEL genehmigtes oder beglaubigtes Gerät an Telefonanschlüsse (RJ11) des Schaltplans oder die Audio EIN/AUS Buchsen der Altiserv Karte geschaltet werden.
 2. **Warning:** DIESES GERÄT DARF NUR VON WARTUNGSPERSONAL EINGEBAUT UND GEWARTET WERDEN.

Additional Requirements for USA and Canada

(Requisitos Adicionales para Los Estados Unidos y Canadá/Zusätzliche Bestimmungen für USA und Kanada)

1. The interconnecting trunk line cord should be at least size 26AWG.
2. This trunk card must be fitted in host equipment with fire enclosures complying with the flammability requirements of sub-clause UL1950/CSA C22: 1995 4.4.3. In addition, the card must be separated from internal materials of flammability class or lower by at least

25 mm of air Class V-1 or better. Also, the card must be separated from openings in the top or sides of the enclosure by at least 25 mm of air or by a barrier of flammability Class V-1 or better unless the openings comply with one of the following:

- not exceed 5 mm in any direction, or
 - not exceed 1 mm in width, regardless of length
3. Any holes in the chassis not conforming to the above should be covered with a metal perforated screen, with holes not exceeding 5 mm diameter, fixed internally.
-
1. El cordón de la línea troncal de interconexión debe ser, por lo menos, calibre 26 AWG.
2. El armazón del equipo principal en el que se instale esta tarjeta troncal debe estar diseñado a prueba de incendios y cumplir con los requisitos de inflamabilidad que dispone el Párrafo 4.4.3 del Artículo 1995 del Código 22 de la UL1950/CSA5. Además, la tarjeta debe encontrarse alejada de materiales internos de clase inflamable, o por debajo, de por lo menos 25 mm de aire de la Clase V-1 o superior. También, la tarjeta debe encontrarse alejada de cualquier abertura superior o lateral de la cubierta, por lo menos mediante 25 mm de aire o a través de una barrera de inflamabilidad Clase V-1 o superior, salvo cuando las aberturas se apeguen a cualesquiera de los siguientes criterios:
- No excedan de 5 mm en cualquier dirección, o
 - No excedan de 1 mm de ancho sin importar su longitud.
3. Cualquier orificio del chasis que no cumpla con las especificaciones anteriores deberá cubrirse con una malla metálica perforada, fija por dentro, cuyas perforaciones no deberán exceder de 5 mm de diámetro.
-
1. Das Kabel für die Hauptverbindungsleitung muß mindestens 26AWG entsprechen.
2. Der Einbau der Hauptkarte im Hauptgerät muß feuerfest sein und den Entflammbarkeitserfordernissen des Untertitels UL1950/CSA C22: 1995 4.4.3 entsprechen. Zusätzlich muß ein Abstand von mindestens 25 mm und der Luftklasse V-1 zwischen der Karte und internen Materialien mit mindestens Entflammbarkeitsklasse bestehen. Weiterhin muß zwischen der Karte und Öffnungen auf der Oberseite und an den Seiten des Gehäuses ein Luftabstand von mindestens 25 mm oder aber eine Sperre von mindestens der Entflammbarkeitsklasse V-1 bestehen, es sei denn, die Öffnungen entsprechen folgenden Ansprüchen:
- in allen Richtungen nicht größer als 5 mm, oder
 - nicht breiter als 1 mm, ungeachtet der Länge.
3. Alle Öffnungen im Gehäuse, die nicht den obigen Anforderungen entsprechen, sind mit einem perforierten Deckel zu schließen, dessen Löcher nicht größer sind als 5 mm im Durchmesser. Der Deckel muß von innen am Gehäuse angebracht werden. The interconnecting trunk line cord should be at least size 26AWG.

Instructions for Hardwired Earth Connection

(Instrucciones para El Cableado de La Conexión a Tierra/Anleitungen für festverdrahtete Erdanschlüsse)

1. A supplementary equipment earthing conductor is to be installed between the product or system and earth, that is, in addition to the equipment earthing conductor in the power supply cord.
2. The supplementary equipment earthing conductor may not be smaller in size (8 AWG minimum, recommend 6 AWG) than the unearthed branch-circuit supply conductors. The supplementary equipment earthing conductor is to be connected to the product at the terminal provided, and connected to earth in a manner that will retain the earth connection when the power supply cord is unplugged. The connection to earth of the supplementary earthing conductor shall be in compliance with the appropriate rules for terminating bonding jumpers in Part K of Article 250 the National Electrical Code, ANSI/NFPA 70, and Article 10 of Part I of the Canadian Electrical Code, Part I, C22.1. Termination of the supplementary equipment earthing conductor is permitted to be made to building steel, to a metal electrical raceway system or to any earthed item that is permanently and reliably connected to the electrical service equipment earthed.
3. Bare, covered or insulating earthing conductors are acceptable. A covered or insulating earth conductor must have a continuous outer finish that is either green, or green with one or more yellow stripes.
4. Earthing conductor shall not run through steel conduit.

1. Deberá instalarse equipo complementario de conducción a tierra entre el producto o sistema y la tierra misma, esto es, además del conductor a tierra que el equipo tiene en el cordón de la fuente de alimentación.
2. El conductor de conexión a tierra del equipo complementario no podrá ser de dimensiones inferiores (mínimo calibre 8 AWG, se recomienda el calibre 6 AWG) a la dimensión de los conductores de alimentación sin conexión a tierra del circuito de la derivación. El conductor de conexión a tierra del equipo complementario deberá conectarse a los productos en la terminal que se proporciona y, conectarse a tierra, de tal manera que la conexión a tierra se mantenga cuando el cordón de la fuente de alimentación se encuentre desconectada. La aterrizada del conductor a tierra complementario deberá cumplir con las reglas conducentes para la terminación de los conductores de empalme de conexión a tierra que señalan el Apartado K del Artículo 250 del Código Nacional Eléctrico; el Artículo 70 del ANSI/NFPA, y Artículo 10, apartado I del Código Eléctrico Canadiense, Apartado I, C22.1. Está permitido que la terminación del conductor a tierra del equipo complementario se realice al acero del edificio, a un sistema de conductos eléctricos o a cualquier artículo con tierra que se encuentre conectado en forma permanente y confiable al equipo de servicio eléctrico que se aterriza.
3. Se consideran aceptables los conductores sin aislante, recubiertos o con aislante. Los conductores revestidos o con material aislante deberán contar con un acabado exterior continuo de color verde, o verde con una o más franjas amarillas.
4. Los conductores de conexión a tierra no deberán tenderse a través de conductos de acero.

1. Sowohl Stromversorgungskabel als auch Gerät oder Anlage müssen geerdet sein.
2. Das Zusatz-Geräteerdungskabel darf nicht dünner sein als die ungeerdete Verzweigungsleitung (8 AWG minimum, empfohlen 6 AWG). Es ist mit dem dafür vorgesehenen Anschluß derartig zu verbinden, daß eine Erdung auch dann weiter

besteht, wenn das Stromversorgungskabel aus dem Stecker gezogen ist. Die Erdung des Zusatzkabels muß den geltenden Bestimmungen für den Endanschluß von Metallbrücken im Teil K, Artikel 250 des Nationalen Elektrokodex, [in Part (?) K of Article 250 the National Electric Code], ANSI/NFPA 70, und Artikel 10, Teil I des Kanadischen Elektrokodex, Teil I, [and Article 10, Part I of the Canadian Electrical Code, Part I] C22.1 entsprechen. Der Endanschluß des Zusatz-Geräteerdungskabels ist erlaubt sowohl an Baustahl, an Zuführungsbahnen oder an jedem Gegenstand, der auf Dauer und verläßlich mit geerdetem elektrischem Gerät verbunden ist.

3. Bланke, umhüllte oder isolierte Erdungskabel sind zulässig. Ein umhülltes oder isoliertes Erdungskabel muß eine durchgehend grüne Oberfläche, oder eine grüne mit einem oder mehreren gelben Streifen,
4. Erdleitungen dürfen nicht durch Stahlrohre führen.

UL Hardware Preparation

(Preparación del Equipo UL/Gerätevorbereitung gemäß UL (Underwriter's Laboratories, Inc.))

Prepare the hardware as follows ensuring that the relevant manufacturer's installation instructions are complied with. *If you have doubts about any of these, call your supplier.*

1. This apparatus must be professionally installed.
2. Select a "CE" computer chassis according to the Safety Requirements above, ensuring that it has an external marked earth point.
3. The host machine ISA bus pins B1, B10 or B13 MUST be tested to ensure that there is less than 0.1 Ohms to the earthing terminal.
4. The host machine PCI bus pins complies with PCI Board specifications Rev. 2.1 (5V 32-bit).
5. Prepare the chassis, in accordance with the PC manufacturers instructions, to receive the necessary PC cards, ensuring the installation of extension cards does not result in non-conformance to the Safety Requirements above.
6. When installing a system using AltiGen's cards, note that the continued compliance to the LVD and EMC EU Directives at the system level is the responsibility of the system supplier.
7. Prepare above cards ensuring all jumpers are set according to the manufacturer's instructions.
8. Attach suitable grounded ESD wrist strap between wrist and earth.
9. Follow the manufacturer's instruction and install above cards into PC.

Note: If more than three cards are using the MVIP, ensure that the Quantum or Triton board set as board zero is installed at one end of the MVIP cable and the board at the far end of the MVIP cable has its switch set to terminated (switch closed).

10. Replace PC outer case.
11. Connect a fixed earth from the PC to a suitable premises fixed earthing point. Note that the earth cable must be at least the same gauge as the live wire of the main cord and fixed to the earth terminal and the rear of the PC. (6 AWG recommended, 8 AWG minimum.)
12. Connect cable supplied with AltiServ to the "D-type sub-miniature" (25 pin) connector on the AltiServ card and the connector to the Modular RJ-11 Patch Panel.

13. Connect the building telecommunication wiring to the RJ-11 sockets.
14. Building telecommunication wiring should be installed according to the National Wiring Regulations for Telecommunications.

UL File No. E179719

Preparación del Equipo UL

Prepare el equipo de la manera que se indica a continuación. Cerciórese de antemano de que se observan todas las instrucciones aplicables del fabricante. *Si tiene usted alguna duda acerca de cualesquiera de ellas, llame a su proveedor.*

1. La instalación de este aparato la deben realizar profesionales.
2. Seleccione el chasis "CE" de la computadora tomando en consideración los Requisitos de Seguridad que se indican anteriormente, además, cerciórese de que cuenta con un punto de conexión a tierra marcado en el exterior.
3. Las clavijas ISA de los canales de distribución B1, B10 o B13 DEBEN someterse a prueba, a fin de verificar que la corriente sea inferior de 0.1 ohmios hacia la terminal de la conexión a tierra.
4. Cerciórese de que las clavijas PCI de los canales de distribución cumplen con las especificaciones de los tableros PCI, Rev. 2.1 (5 voltios 32-bit).
5. Prepare el chasis de acuerdo con las instrucciones del fabricante de la computadora personal, para efectos de que reciba las tarjetas de PC que necesita, y se cerciore así de que la instalación de las tarjetas de extensión no redundará en la infracción de los Requisitos de Seguridad que se indican con anterioridad.
6. Observe que cuando instala un sistema que utiliza tarjetas AltıGen, el acatamiento continuo de las Directivas LD y EMC EU a nivel sistema, son responsabilidad del proveedor del sistema.
7. Prepare las tarjetas mencionadas con anterioridad y cerciórese de que todos los puentes de salto se encuentran posicionados conforme a las instrucciones del fabricante.
8. Coloque una pulsera antiestática ESD adecuadamente aterrizada entre la muñeca y la tierra.
9. Siga las instrucciones del fabricante e instale las tarjetas que se mencionan con anterioridad en la computadora.

Nota: Cuando más de tres tarjetas utilicen el MVIP, cerciórese de que la placa de Cuanto o de Tritón establecida como placa cero se encuentre instalada en uno de los extremos del cable MVIP, y de que la placa en el otro extremo del cable MVIP tiene su interruptor en la posición de terminado (interruptor cerrado).

10. Reemplace la cubierta externa de la computadora.
11. Instale una conexión a tierra fija desde la computadora hasta un punto apropiado de conexión a tierra dentro de las instalaciones. Observe que el cable de puesta a tierra debe de ser, por lo menos, del mismo calibre que el cable con corriente viva del cordón principal y, que el mismo debe de encontrarse conectado a la terminal de aterrizada y a la parte posterior de la computadora. (Se recomienda el cable calibre 6 AWG, u 8 AWG, como mínimo).

12. Conecte el cable que se le suministra con la tarjeta AltiServ al conector sub-miniatura tipo D (25 clavijas) de la tarjeta AltiServ y el conector al Tablero de Conexiones del Modular RJ-11.
13. Conecte el cableado de telecomunicación del edificio a los enchufes del RJ-11.
14. El cableado de telecomunicación del edificio debe instalarse de conformidad con las Normas Nacionales de Cableado para Telecomunicaciones.

Archivo de la Asociación de Aseguradores No. E179719

Gerätevorbereitung gemäß UL (Underwriter's Laboratories, Inc.)

Entsprechend den gegebenen Anleitungen des Herstellers ist das Gerät wie folgt vorzubereiten. *Im Zweifelsfalle ist der Lieferant zu benachrichtigen.*

1. Gerät darf nur von qualifiziertem Personal eingebaut werden.
2. Wählen Sie ein "CE" (communication electronics) Komputergehäuse entsprechend den oben angeführten Sicherheitsanforderungen mit einem an der Außenseite markiertem "Erd" Punkt.
3. Die ISA (International Standard Atmosphere) Kontaktanschlüsse B1, B10 oder B13 auf der Sammelschiene des Hauptgerätes sind zu testen um sicherzustellen, daß weniger als 0.1 Ohms zum Erdanschluß führen.
4. Die PCI (Program Controlled Interrupt) Kontaktanschlüsse auf der Sammelschiene des Hauptgerätes entsprechen den PCI Steckkartenanforderungen (PCI Board specifications) Rev. 2.1 (5V 32-bit).
5. Vor dem Einbau der entsprechenden PC (Personal Computer) Karten in das Gehäuse gemäß den PC Herstelleranweisungen ist sicherzustellen, daß durch den Einbau zusätzlicher Karten die oben genannten Sicherheitsansprüche nicht verletzt werden.
6. Beim Einbau einer Anlage mit AltiGen's Karten ist zu beachten, daß die ständige Übereinstimmung mit den LVD (Low Voltage -DC) und EMC (Electromagnetic Compatibility) EU Regeln auf Anlagenebene in den Verantwortungsbereich des Anlagenherstellers fällt.
7. Alle Drahtbrücken auf oben erwähnten Karten müssen den Anforderungen des Herstellers entsprechen.
8. Geeignetes geerdetes ESD (Electrostatic Device) Gelenkband zwischen Handgelenk und Erde verwenden.
9. Beim Einbau oben erwähnter Karten in den PC (Personal Computer) sind die Anordnungen des Herstellers zu beachten.
10. Anmerkung: Benutzen drei oder mehr Karten den MVIP (?- manual volume...?), ist sicher zu stellen, daß die als 0-Karte bezeichnete Quantum oder Triton Karte an einem Ende des MVIP Kabels eingebaut ist, und daß der Schalter der Karte am anderen Ende des MVIP Kabel auf "geschlossen" (terminated-closed) steht
11. PC Gehäuse austauschen..
12. Anschluß zwischen einer festen Erdung am PC und einer geeigneten festen Erdung in der Räumlichkeit erstellen. Zu beachten ist, daß das Erdkabel zumindest die gleiche Stärke wie der unter Spannung stehende Draht des Hauptkabels hat und an den Erdanschluß und an den PC angeschlossen ist. (6 AWG empfohlen, 8 AWG minimum.)

13. Anschluß zwischen dem mit dem Altiserv gelieferten Kabel, dem "D-type sub-miniature" (25 pin-Kontaktanschlüsse) Stecker auf der Altiserv Karte und dem Stecker des modularen RJ-11 Steckfeldes erstellen
14. Anschluß zwischen der Gebäudefernmeldeschalung und den RJ-11 Buchsen erstellen.
15. Gebäudefernmeldeschalung gemäß National Wiring Regulations for Telecommunications ("Nationale Vorschriften für Fernmeldeschaltungen").

UL Kartei No. E179719

Warranty

What The Warranty Covers

AltiGen Communications warrants its hardware products to be free from defects in material and workmanship during the warranty period. If a product proves to be defective in material or workmanship during the warranty period, AltiGen Communications will, at its sole option, repair, refund or replace the product with a like product.

How Long the Warranty Is Effective

All AltiGen Communications products are warranted for one (1) year for all parts from the date of the first end user purchase.

Whom the Warranty Protects

This warranty is valid only for the first end user purchaser.

What the Warranty Does Not Cover

1. Any product on which the serial number has been defaced, modified or removed.
2. Damage, deterioration or malfunction resulting from:
 - a) Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
 - b) Repair or attempted repair by anyone not authorized by AltiGen Communications.
 - c) Any damage of the product due to shipment.
 - d) Removal or installation of the product.
 - e) Causes external to the product, such as electric power fluctuations or failure.
 - f) Use of supplies or parts not meeting AltiGen Communications' specifications.
 - g) Normal wear and tear.
 - h) Any other cause which does not relate to a product defect.
 - i) At AltiGen's sole discretion, if the product(s) is determined to be repairable, the then current Out of Warranty charge shall apply.
3. Shipping, installation, set-up and removal service charges.

How to Obtain Service

End user customers should contact your Authorized AltiGen Dealer for service.

Authorized AltiGen Dealers must follow the steps below for service:

1. Take or ship the product (shipment prepaid) to your Altigen distributor or to Altigen Communications, Inc.

All materials being returned to Altigen must have an associated RMA number. RMA numbers are issued by Altigen Customer Service and can be obtained by calling 1-510 252-9712. Altigen reserves the right to refuse return of any material that does not have an RMA number. The **RMA number should be clearly marked on the outside of the box** in which the material is being returned. Please see the example below:

Attn.: RMA # 123
Altigen Communications, Inc.
47427 Fremont Blvd.
Fremont, CA 94538

Upon authorization of return, Altigen will decide whether the malfunctioning product will be repaired or replaced.

2. To obtain warranty service, you must provide 1) date/proof of purchase, 2) serial number of product, 3) your name and company name, 4) your shipping address and 5) description of the problem.
3. For additional information, contact Altigen via e-mail at support@altigen.com.

Effect of State Law

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow limitations on implied warranties and/or do not allow the exclusion of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

Sales Outside the U.S.A.

For Altigen Communications products sold outside of the U.S.A., contact your Altigen Communications dealer for warranty information and services.

Internet and Security Disclaimer

Altigen Communications assumes no liability for the security of customer computer systems, web sites and networks. Any computer connected to the Internet is at risk to the system being compromised. While there are many ways to configure an effective, secure firewall platform, customer implementations will vary, and as such, Altigen Communications cannot specify firewall settings. You may refer to the section on firewalls in this document for a list of recommended ports used by various Altigen applications.

Preface: About This Manual

This guide is designed for dealers, administrators, and technicians who are responsible for installation, configuration, and administration of an AltWare system.

Another manual, the *Altiserv User Guide*, covers the Altiserv end user features and functions such as call handling, voice mail, and web interface.

This guide contains the following chapters and appendices:

Chapter 1, Overview, describes the Altiserv functions, features, benefits, and new features with AltWare OE Release 4.6.

Chapter 2, System Requirements, describes the system and hardware specifications needed, based on the number of trunks and extensions required.

Chapter 3, Software Installation, describes software specifications of the Altiserv system.

Chapter 4, Getting Around AltAdmin, describes how to navigate the AltWare Administrator application, which is used to configure and maintain the Altiserv system.

Chapter 5, System Configuration, describes Altiserv system basic configuration, phone numbers, number plans, out-call and in-call settings.

Chapter 6, Board Configuration, describes the Quantum and Triton boards.

Chapter 7, Trunk Configuration, describes trunk attributes, including channels.

Chapter 8, Extension and Group Configuration, describes individual extensions, group numbers, and call handing.

Chapter 9, Out Call Routing Configuration, describes default outgoing call routes and restrictions.

Chapter 10, Auto Attendant Configuration, describes pre-recorded prompts and menus.

Chapter 11, Additional Setup, describes audio peripheral configuration, MVIP clock, feature tips.

Chapter 12, System Data Management, describes backup and restore procedures.

Chapter 13, System Report Management, describes system management reports on summary, traffic, system log and call detail summary.

Chapter 14, Data and Internet Integration, describes setting up email, AltiReach, Exchange integration.

Chapter 15, Using TAPI, describes how to configure AltiGen's TAPI gateway to use off-the-shelf applications for calling contacts.

Chapter 16, Setting Up IP Extensions, outlines procedures for setting up IP extensions using AltiGen-certified clients.

Chapter 17, Alti-IP 600 Phone Configuration, gives procedures for configuring AltiWare with the Alti-IP 600 phone.

Chapter 18, AltiWeb, gives procedures for installing and configuring the AltiWeb feature, which allows internet users to talk to an extension via VoIP and share web pages.

Chapter 19, Tools, gives a brief overview and general instructions for using AltiWare tools.

Chapter 20, Basic Call Router & Call Router Advanced, gives general instructions for using Basic & Advanced CallRouter tools.

Appendix A, Call Accounting Report Formats, describes keys to the data in CDR reports.

Appendix B, E1 R2 CAS Installation, describes configuration for E1-R2 CAS installation.

Appendix C, Product Repair Services & Technical Support, describes technical support, customer service, repair and replacement policies and forms.

Glossary, Index, and Readers' Comment Form

Related Publications

Related publications include:

- AltiView User Guide
- AltiConsole User Guide
- AltiClient Manual
- CDR Manual

AltiServ Office Solutions

The AltiServ Office system solutions – **AltiServ Small Office**, **AltiServ Office** and **AltiServ Office Plus** – are complete, turn-key, converged PBX systems pre-configured on industrial Windows 2000 Server platforms. The chassis are industrial grade, manufactured to AltiGen Communications exacting design specifications – meeting our most stringent requirements. Before shipping from AltiGen Communications, all systems are subjected to a rigorous Quality Control program and checked for proper software configuration, hardware installation, and switching functionality.

Configuration Overview

All systems ship with Windows 2000 Server (except AltiServ Small Office), AltiWare OE 4.6 and the corresponding hardware package – pre-installed in a generically-configured working condition to significantly reduce installation time. Also, all systems support traditional and IP phones.

AltiServ Small Office (Part# ALTI-OFFICE1A)

The **AltiServ Small Office** solution is a system targeted for 8 to 25 users in the very small office market that need an affordable, entry-level capabilities along with the same features as AltiGen's largest systems.

Components	Chassis Specifications
AltiWare OE 4.6	3 ISA x 2 PCI (2 ISA x 2 PCI total supported)
AltiWare OE Documentation Package	733mhz Intel Celeron Processor
4x8 Quantum Analog Trunk/Station ISA Card	128 MB RAM
8 Station/14 Session License	40GB IDE Hard Drive
Windows 2000 Professional	48x CDROM Drive
MVIP Cable	3½ 1.44 Floppy Drive
12-port connection panel (harmonica)	101 key PS/2 keyboard
BD25-50 pin male Telco cable	PS/2 Microsoft Mouse
	300 Watt Power Supply
	Two, front-mounted 49CFM hot-swappable fans
	Dimensions (W x H x D): 7.9" x 11.8" x 18.2"
	CE / UL / C-UL / FCC Approvals & Certifications
	Wall mountable cable

Altiserv Office (Part# ALTI-OFFICE2A-R)

The **Altiserv Office** solution is ideal for new installations and upgrades for existing customers with Quantum boards. The product is targeted towards small to medium-sized businesses with 25-100 users that are looking for additional capacity and expandability at a cost that is dramatically lower than enterprise systems.

Components	Chassis Specifications
AltWare OE 4.6	4U Rack Mount Chassis w/ slide rails
AltWare OE 4.6 System Key	4 ISA x 10 PCI (2 ISA x 7 PCI total supported)
AltView 4.6	Supports a total of 2 Quantum and 9 Triton boards
AltWare OE Documentation Package	850 mhz Intel Celeron Processor
Two 0x12 Triton Analog PCI Station Card	256 MB RAM
24 Station / 30 Session License	52x CDROM Drive
Windows 2000 Server (Service Pack 2) w/ 5 users licenses	2 x 40GB IDE Software Mirrored Hard Drives
MVIP Cable	101 key PS/2 keyboard
Two 12-port connection panels (harmonica)	PS/2 Microsoft Mouse
Two DB25-50 pin male Telco cables	One 400 Watt Power Supply
	Two 86 CFM fans
	Dimensions (W x H x D): 19" x 7" x 26"
	CE/UL/C-UL/FCC Approvals & Certifications

Altiserv Office Plus w/ RAID (Part# ALTI-OFFICE3-R)

The **Altiserv Office Plus** solution is Altigen Communications flagship product geared towards small-medium businesses with 75 to 175 users that are looking for additional capacity and expandability at a cost that is dramatically lower than enterprise systems. With included RAID support in an industrial grade chassis, Altigen is providing a highly reliable and redundant converged PBX system.

Components	Chassis Specifications
AltiWare OE 4.6 AltiView 4.6 AltiWare OE Documentation Package 24-port Triton Digital T1/PRI PCI Card Three 12-port Triton Analog Station PCI Cards 36 Station / 42 Session License Windows 2000 Server (Service Pack 2) w/ 5 users licenses MVIP Cable Three 12-port connection panels (harmonica) Three DB25-50 pin male Telco cables	4U Rack Mount Chassis w/ slide rails 1 ISA x 17 PCI (1 ISA x 11 PCI additional supported) 850 mhz Intel Pentium III Processor 512 MB RAM 52x CDROM Drive Adaptec 2100S Ultra160 RAID Controller Three 18GB SCSI Drives in RAID 5 Configuration (36 GB Available) 3½ 1.44 Floppy Drive 101 key PS/2 keyboard PS/2 Microsoft Mouse Two 400 Watt Load Sharing / Redundant / Hot Swap Power Supplies Three 86 CFM hot-swappable fans Dimensions (W x H x D) 19" x 7" x 26" CE/UL/C-UL/FCC Approvals & Certifications

AltiServ IP (Part# ALTI-SERV1-IP)

The **AltiServ IP PBX** is an IP-equipped AltiServ telephone system targeted at businesses, or branch offices with 8 to 50 users. This System is a Turnkey AltiServ System package that includes an AltiGen chassis populated with 2 interface cards, the AltiWare system operating software, Windows 2000 professional, and includes 8 Alti IP 600 telephones in a bundled system package. This system is built with on a 6-slot wall mountable tower cabinet, with only 2 slots filled in the initial configuration. The initial 24 ports include 12 VoIP ports, 4 analog fax/modem/extension ports and 8 analog trunk ports. The configuration is expandable to 120 ports.

Components	Chassis Specifications
Windows 2000 Professional ALTI-OE450EA (AltiWare OE v4.5A) ALTI-OELIC450-016 (16 Station License Key) ALTI-CD00804UD-SPH001 (8x4 ISA Quantum Card) ALTI-TTIP-8 (12-port VoIP Triton PCI Card) 8 Alti-IP 600 IP Phones	3 ISA x 3 PCI 733 Celeron Processor 128MB RAM 40 GB Hard Drive (2 ISA x 2 PCI Available)

AltiServ IP (Part# ALTI-SERV2-IP)

The **AltiServ2 IP PBX** is an IP-equipped AltiServ telephone system targeted at 50 to 200 users per chassis. With built-in redundancy, the AltiServ2 IP supports larger organizations that want to build a system utilizing VoIP. This System is a Turnkey AltiServ System package that includes an AltiGen chassis populated with 1 interface card, the AltiWare system software, Windows 2000 Server in a bundled system package. This system is built with on a 4U industrial strength 10-slot cabinet, with only one slot filled in the initial configuration. The initial 12 ports are VoIP ports and the system expands expandable to 228 ports.

Components	Chassis Specifications
Windows 2000 Server w/ 5 User License ALTI-OE450EA (AltiWare OE v4.5A) ALTI-OELIC450-012 (12 Station License Key) ALTI-TTIP-8 (12-port VoIP Triton PCI Card)	2 ISA x 10 PCI, 850mhz Celeron 256MB RAM (2 ISA x 7 PCI Available) 2 x 40GB IDE Hard Drives - Hardware Mirrored s

AltiServ Platforms

In addition to the office suite of products, AltiServ platforms can be built using a standard personal computer or server hardware with sufficient number of full-size ISA and PCI expansion slots. In addition, the platform must be equipped with sufficient cooling processing power, memory, hard drive storage capacity, power, and telephony ringing voltage for the total number of cards and extensions ports installed. **This AltiServ platform must be equipped with a Windows 2000 Server or a Windows NT 4.0 (or higher) Server with Service Pack 6a (or higher) installed.**

Overview

AltiServ™ is a multi-application computer telephony platform that combines AltiGen's Quantum™ and Triton™ telephony boards with AltiWare™ software in a standard personal computer platform. AltiServ uses Windows 2000™ or Windows NT Server™ operating system to provide advanced features and functionality, including the following:

- PBX
- Voice Mail
- Auto Attendant
- Email Server
- Call Detail Reports (CDR)
- Internet Integration
- TAPI (Telephony API) Service Provider
- Voice over IP
- Digital T1/PRI/E1 Integration
- Tie Trunks with Caller ID
- Out Call Routing
- Web Call Center (web-based calling)
- Data Directed Routing
- IP Extensions

The AltiServ computer telephony platform is built by installing one or more AltiGen boards into **full-size** ISA/PCI slots of a Windows 2000/Windows NT Server and then installing the associated AltiWare software. AltiGen Triton boards may also be added and must be installed into PCI slots. See “System Limitations” on page 2-11 for details on the number of boards you can install on one system.

Key AltiServ Characteristics



When you see this New icon, it means that the feature is new to AltiWare Release 4.6 and does not exist in earlier versions.

- **Quantum Board** - a telephony card that uses DSP technology to provide trunks, lines, and voice processing resources.

Quantum is an ISA compatible telephony card, which is designed around open software standards to facilitate implementation of third-party-provided applications in addition to the Altiserv-provided applications.

The Quantum telephony board has 12 analog ports.

In **OE 4.6**, the Quantum board has eight (8) voice channels, so eight ports can listen to voicemail simultaneously.

Additional Quantum boards can be added to meet larger system requirements. The maximum number of Quantum boards in one system is up to 16 boards and depends on the number of ISA slots available and the selected computer platform performance characteristics.

Note: Altiserv OE Release 3.0 or higher does not support **Quantum Rev. C/C+** boards. Upgrade Quantum boards to **Rev. D** prior to installing OE 3.0 (or higher) software.

- **Triton Boards:**

— **Triton VoIP Board** - a PCI bus telephony board that provides voice processing resources. DSP engines reside on the VoIP board to perform voice processing functions needed for H.323 devices. The Triton VoIP board supports 12 or 30 IP trunk ports. See “System Limitations” on page 2-11 for details on the number of Triton VoIP boards and ports you can install on one system.

— **Triton VoIP 12- and 30-port boards** - Triton 8-port boards running on previous OE releases are automatically upgraded to 12-port boards with OE 4.5 and higher. With a 30-port upgrade license, the 12-port board can be upgraded to a 30-port board (one board upgrade per license) in OE 4.5 and higher.

- 5V PCI slot is required for each Triton board.
- Additional VoIP boards, up to a maximum of ten (10) per system, can be added to meet larger system requirements.
- The VoIP board can also be used individually as a third-party developer application platform.



Triton T1/E1/PRI Trunk Board - a PCI telephony card that supports either T1, E1 or PRI digital trunks through software configuration.

- 5V PCI slot is required for each Triton board.
- Additional T1/PRI boards can be added to meet larger system requirements. The maximum number of T1/PRI boards in one system is up to eight (8) T1/PRI lines (192 digital trunks).
- The maximum number of T1/E1/PRI boards in one system is up to eight (8) T1/E1/PRI lines.
- Tone detection (fax, modem, voice) available for predictive dialing integration.

— **Triton Analog Station Board** - a PCI bus telephony board that supports 12 analog extensions per board.

- Provides adaptive balance and selectable impedance
- Analog and digital loop back test modes
- Tip and ring reversal
- FSK message lamp
- 5V PCI slot is required for each Triton Analog Station Board.

— **Triton Analog Trunk Board** - a long form factor PCI telephony card that supports 12 trunks, available in two models: loop start/ground start (LS/GS) and loop start (LS). Both models have the same features regarding LS. The LS/GS board is required when ground start trunks may be required. You can install up to 16 Triton Analog Trunk boards per system.

- Tone detection (fax, modem, voice) available for predictive dialing integration.

— **Triton Resource Board** - a PCI bus telephony board that provides monitoring and Barge In system support functions. You can install up to two (2) Resource Boards per system.

- **AltiWare System Software** - the AltiServ system telephony application software that provides an easy-to-use graphical user interface. It lets you configure, administer, and maintain the AltiServ system, and can be used as a platform for third-party enhanced application development. AltiWare software components such as Switching Service, Messaging Agent, SMTP Server, POP3 Server,

AltiBackup, Exchange integration, and Call Router Advanced are NT services that are automatically launched when the AltiServ system starts. You do not have to login and start these applications manually. This provides better security and reliability for these services.

- **TAPI Gateway Support** - AltiServ is an open platform that allows third party telephony developers to develop applications for the AltiServ system. The system supports Telephony Applications Programming Interface (TAPI) 3.0.

AltiServ supports a complete TAPI service provider that accepts first party call control (such as AltiView, AltiAgent, and AltiSupervisor) and the third party client-server call control (such as call routing applications).



PBX Features

The PBX features include telephone switching for making calls, answering calls, and transferring calls. For more sophisticated business applications, AltiWare provides advanced features such as group call routing, multiple trunk and route access codes, scheduled call routing, and flexible call restrictions. For effective system management, AltiWare provides information about system traffic and statistics to help the system administrator understand the dynamics of business communications and adjust resources such as the number of outside lines, accordingly.

For more information on using PBX features, see the *AltiServ User Guide* or the *AltiView User Guide*.

In addition to station-to-station dialing, the PBX features include:

- **Account Codes** - allows the user to input an account code on each call to track telephone usage in order to bill back to clients or create a record of calls specific to a project and to budget and forecast expenses. **Forced Account Codes** force the user to input an account code on each call to track telephone usage. The administrator can configure which extensions are required to enter an account code.
- **Business Hours** - allows for setting morning and afternoon business hours for each day of the week.
- **Busy or Ring-No-Answer Call Handling** - sends calls to voice mail, another extension, or **Auto Attendant** if the called extension or group is busy or does not answer.

- **Call Forwarding and Remote Call Forwarding** - sends all calls to another extension or to an external telephone number. This allows users to redirect their calls to another location such as home or a branch office. Call Forwarding can be set up either at the source extension or at the destination extension on the system (Remote Call Forwarding). There is 10 hop limit on forwarded calls.
- **Call Park and Pick Up** - users can park calls at one station to be picked up at another station. Up to 50 calls may be parked at one station simultaneously. Calls parked to a group are protected. Only group agents or the person who parked the call can pick it up.
-  **Call Park Ring Back Identification to Operator** - when parked calls are not picked up, the operator will be rung.
- **Call Restrictions** - restricts users from dialing specific long distance area codes and phone numbers. Reduces the risk of toll fraud. Up to 20 digits are allowed to specify area codes and/or phone numbers that are restricted system-wide; up to 10 digits are allowed to specify area codes and/or phone numbers that are restricted on an extension by extension basis. Or, you may block ALL outgoing calls.
- **Caller ID** - fully supports the Bellcore Caller ID standard and displays alpha and numeric caller ID and name on a standard analog telephone with a display. Up to 64 characters are transmitted and displayed. If your local exchange carrier provides enhanced caller ID, such as caller name, this information will also be displayed.
- **Centrex Transfer** - allows user to transfer or forward calls to an external telephone number. Once the transfer is complete, the trunk lines are released. Altiview and AltiaAgent also support Centrex Transfer.
- **Conference Calling** - the system supports conference calls with up to 6 parties. You can speak privately to each person before adding the person to the conference.
-  **Configurable Caller Name/DNIS Display** - the system administrator can configure the Caller Name or DNIS displayed on a phone set.
- **Dial Last Caller** - allows user to dial the last caller.
- **Hands Free Mode** - allows user to leave handset off-hook without having to hear the dial tone.

- **Direct Inward Dial (DID)** - allows an incoming trunk call to directly access an extension without Attendant intervention.

Note: If your local exchange carrier provides DID service, DID calls will automatically be steered to the appropriate destination.

- **Distinctive Call Waiting Tone** - allows three different call waiting tone cadences to distinguish between internal, external, and operator calls.
- **Distinctive Ringing** - allows three different ringing cadences to distinguish between internal, external, and operator calls.
- **Do Not Disturb** - blocks all calls coming into a specific extension and sends them to preprogrammed destinations such as voice mail or the operator.
- **Feature Tips** - plays helpful tips and reminders for optimal use of AltiServ.
- **FSK-based Message Waiting** - allows message waiting that is based on FSK (Frequency Shift Keying), a modulation technique for data transmission. Tone or voltage-based message waiting options can also be selected. Phones with FSK-based message waiting indicator are highly recommended.
- **Hands Free Intercom Mode** - by pressing **#81** on their speaker phone, users can receive calls without having to pickup the handset to answer. **Hands Free Manual Answer Mode, #82**, allows another version of this function.
- **Hop Off Calls over T1/PRI Tie Trunks** - multiple AltiServ systems at the same or remote locations can be linked through a T1/PRI network. Also, this feature provides toll savings on long distance calls by allowing users to dial a remote AltiServ system via a T1/PRI trunk and then the destination phone number through PSTN.
- **Individual and System Call Pick Up** - allows users to answer a ringing telephone from another station.
- **Intercom Call** - by pressing **#93** on any phone connected to an AltiWare system, users can make an intercom call to an AltiTouch Plus or Alti-IP 600 phone. If the phone is in idle state, the phone speaker will be turned on, and the voice path is connected. If the IP phone is busy, the call will follow the busy call handling feature of the IP phone's configuration.



In OE 4.6, this feature can be enabled or disabled per extension by the administrator.

Note: Alti-IP 600 phones or 390 Analog phones that are configured on a Triton Analog Extension board can be intercommmed.

- **IP Extensions** - the IP extension feature allows an H.323-compliant terminal device to connect to AltiServ. With a few exceptions (described in *Chapter 16, Setting Up IP Extensions*), IP extensions have the same functionality as an analog station.



Live Call Handling—allows an extension user to play a ringback tone when the called party is in voice mail, paging, transfer, or conference state. The call is shown as “ringing” in AltiConsole.

- **Multiple Call Waiting with Personalized Greetings** - a personal queue that allows users to handle multiple incoming calls by letting callers wait in queue until the user answers the call. This allows users to transfer or park calls before answering the next call in queue. Users may also record and use personalized **Initial** and **Subsequent** greetings to be played for callers in queue.
- **Music or Message on Hold** - when the system is connected to an external audio source, this allows callers to hear music or pre-recorded messages while waiting on hold.
- **One Number Access** - a feature that eliminates “telephone tag” by forwarding important callers to predetermined numbers, according to a designated schedule. Setup is available through the One Number Access page of Extension Configuration and/or web-based AltiReach and AltiView management. **ONA passwording** is optional. The user can press any key to pick up an ONA call.
- **Operator Off-line** - when this feature is enabled, all calls are directed to the Auto Attendant. When the caller dials 0 and the operator is not available, the call is routed to the operator mailbox.
- **Out Call Routing Configuration** - allows outgoing calls to be directed to particular trunk routes, based on parameters assigned in AltiAdmin, and supporting the new tenant tables.
- **Outside Call Blocking** - when this feature is enabled, access to outside lines is temporarily disallowed.
- **Overhead Paging** - allows the use of voice paging over an internal public address system.

- **Overhead Paging by Trunk** - allows the use of voice paging or broadcasting through a trunk without checking call progress.
- **Operator Off-line** - when this feature is enabled, all calls are directed to the Auto Attendant. When the caller dials 0 and the operator is not available, the call is routed to the operator mailbox.
- **Personal Call Park and Pick Up** - users can park calls at one station to be picked up at another station. Up to 50 calls may be parked at one station simultaneously. Calls parked to a group are protected. Only group agents or the person who parked the call can pick it up. If the user does not answer the call when it rings after the two-minute hold time, the call will be put on hold again. If the call is still on hold after two minutes, the system will ring the user again.
- **Power Failure Transfer** - upon loss of power, this feature allows the first trunk and first extension on each Quantum board to be automatically connected. Ensures emergency outside line access in case of power failure.
- **Return to Auto Attendant** - after leaving a voicemail message and pressing # to send it, incoming trunk callers are prompted with the option to return to the Auto Attendant to try another path or person.
- **System Call Park and Pick Up** - allows user to park and pick up a call at a public "location." The system allows user to park up to 100 calls at any given time.
- **Single Call Waiting** - allows users to put an existing call on soft hold and take a second call upon hearing a Call Waiting tone. The user can then alternate between the two calls.
- **Station Log In/Log Out** - enables system users to move an extension number from one station to another, or deactivate an extension on a long-term basis.
- **System and Station Speed Dial** - allows programming of frequently used telephone numbers for speed dialing. Up to 60 system speed numbers can be programmed. Up to 20 station speed numbers can be programmed for each extension. For easy programming, Altiserv uses friendly voice prompts to guide extension users to program their station speed dial numbers.

- **System Callback from Auto Attendant** - allows the user to instruct AltiServ to call the user at a remote location after the user logs in with extension and password. This is useful for traveling users who don't want to accrue expensive toll charges while traveling, especially from international locations where there is no access to toll-free numbers. See "Planning is Essential" on page 10-1 for more information.
- **Transfer to AltiGen Voice Mail System** - allows anyone in the office to send an outside user into the AltiGen Voice Mail System by pressing **FLASH # 40** while connected to the user.
- **Transfer to Auto Attendant** - allows a user to transfer a call to an Auto Attendant by pressing **FLASH #15** and then the 2- or 3-digit Auto Attendant number.



Trunk Digits Pushed to AltiLink Plus - Digit event will be sent through AltiLink Plus when the caller presses any key during AA.

- **Trunk Interface:**
 - **Analog** - loop start, ground start, and wink start (DID).
 - **Digital** - PRI-ISDN, T1 E & M, loop start, and ground start.
- **Virtual Extensions** - an extension that is not associated with a physical port, but allows access to the AltiGen Voice Mail System features and telephone sharing. Up to 2,000 total (physical + virtual) extensions can be created on a system. Access to virtual extensions is through voicemail use, a physical extension, a trunk, or via AltiView or AltiAgent.
- **Flexible Wrapup Times and Inter Call Delays** - can be used to set delays before the system sends the next call to an extension. Further, the user can manually set the extension state to **Ready** or **Not Ready** to receive calls.

Automatic Call Distribution Features


Automatic Call Distribution (ACD) features include:

- **Auto Logout** - a group member can be automatically logged out if a call is not answered.



Auto Login/Logout/Keep Login Status on system startup or reboot - all group members can be set to the "Login" or

“Logout” state at system startup or reboot. By default, group members are set to “Keep Login Status.”

- **CDR Search** - allows group supervisors to search CDR files and workgroup CDR statistics for records that match selected criteria. CDR Search provides workgroup statistics from the real-time monitoring function used in the Altisupervisor client application. Settings in Altisadmin let you specify time intervals for saving RTM data.
- **Call Queuing** - places caller in a queue to wait until an ACD workgroup member becomes available.
- **Call Queue Announcement** - an optional feature with Call Router Advanced, before a call enters a group queue, the system announces the expected wait time or call queue length to the caller.
- **Configurable Call Wrapup Time** - allows a group member some time in between calls to wrap up on notes, prepare for the next call, or logout of the group. This wrapup time is configurable on a per-member basis.
- **Holiday Routing** - routes inbound DNIS and trunk calls on designated holidays to specified destinations. You can create separate routes for business and non-business hours on half-day holidays.
-  **Huntgroup** - a group of related phones that can be set up to share particular lines, so that if the first line is busy, the next line is hunted until a free line is found.
- **Multiple Queue Announcements** - allows each group to have its own set of unique audio announcements. Up to five announcements can be configured for each group. The intervals between announcements can also be configured.
- **Multiple Huntgroup/Workgroup Membership** - allows each extension to belong to multiple groups. The system can be configured with a maximum of 32 groups.
- **Multiple Huntgroup/Workgroup Log In and Log Out** - lets group members quickly log in and out of multiple groups.
- **Ready/Not Ready** - members can also enable a “ready” (#90) or “not ready” (#91) status to inform the system whether or not the agent is able to receive the next call.

- **Service Level Threshold** - a time value for callers waiting in queues. The performance statistics show when workgroup calls are queued for longer than a prescribed value.
- **Huntgroup/Workgroup Call Pickup** - allows pickup of calls to a specific group.
- **Huntgroup/Workgroup Membership** - groups can have up to 128 members.
- **Workgroup Monitoring** - an option (enabled with the AltiServ Contact Center license) that allows real-time monitoring of workgroup information—trunk state, group status, call queue status, details of group queue entries and agent status. Limited monitoring is available through a group view window in AltiAdmin or remotely through AltiReach. Caller ID identifies agent calls as inbound or outbound, internal or external.
- **Huntgroup-Based/Workgroup Optional Call Routing** - for special call handling applications, incoming calls can be routed to a group. For automatic distribution, calls can be distributed to the first available group member, or among group members according to the following options:
 - *Ring First Available Member (for huntgroups)*
 - *Ring Next Available Member (for huntgroups)*
 - *Ring All Members (for huntgroups)*
 - *Ring Longest Idle Member (for workgroups)*

When all the members in a group are busy, calls can be overflowed to another group or extension, directed to the group voice mail, to group members voice mail, or placed in the call queue for the next available member. When the first called member fails to answer the call within the number of rings configured, the system can direct the call to the next available group member. An option setting in the system can also ring the longest idle member or ring all available members. Calls encountering RNA among all agents can be automatically directed to an alternate destination.

- **Workgroup Member (Agent) Login/Logout** - an option (enabled with the Altiserv Contact Center license) that allows workgroup members to log in and out of a workgroup so that incoming calls bypass the workgroup member (agent) who has logged out and the call is automatically routed to other active workgroup members or ACD agents. This feature is available only to workgroup members. Logout does not block direct calls to the workgroup member's extension.
- **Workgroup Logout Reason Codes** - an option (enabled with the Altiserv Contact Center license) that allows a workgroup member to enter a reason code when signing off. Up to 20 reason codes may be defined.



Workgroup Silent Monitoring - an option (enabled with the Altiserv Contact Center license) that, with the Triton Resource Board, allows a workgroup supervisor to silently monitor calls between workgroup agents and callers. In **OE 4.6**, calls can be monitored regardless of login status by Altisupervisor.



Workgroup Barge In - with the Triton Resource Board, allows a workgroup supervisor to barge into calls between workgroup agents and callers. The supervisor can barge in on a specific agent by entering the agent's extension via the telephone. In **OE 4.6**, calls can be barged-in on regardless of login status by Altisupervisor.



Outbound Workgroup Call Monitoring - an option (enabled with the Altiserv Contact Center license) that allows a workgroup supervisor to monitor agent's inbound and outbound calls.



Workgroup Queue Overflow Handling - routes incoming calls to an alternate destination when the queue is already full, or when incoming calls will have an unacceptably long wait time.

- **Call to Queue Alert** - agents can be alerted via a beep and a screenpop when a call enters the group queue.

Automated Attendant Features

The Auto Attendant features provide quick and courteous processing of all incoming calls. An Auto Attendant can be configured to serve as a primary Attendant or as a backup to a receptionist.

Auto Attendant features include:

- **Dial By Name** - allows a caller who does not know your extension number to spell your name using the telephone key pad. The system will search the Directory and make a match on the name to connect the caller to the intended party's extension. The caller can match first OR last name when dialing by name.
- **Data-Directed Routing** - allows the routing of calls directed by the caller's input (digit or text). Third party applications can be used to route incoming calls based on caller information.
- **Digit Collection** - caller can be prompted to enter numbers, which are then collected and used for routing the call.
- **Direct Station Transfer** - allows the Auto Attendant to handle all incoming calls instead of being answered by an operator. Callers can dial an extension number to reach a specific station or use the name directory to find an extension number.



Failover Routing - allows the Auto Attendant to provide a new menu path as a failover action if the Collect Digits action fails.

- **Multiple Attendant Support** - allows up to **255** programmable Auto Attendants.
- **Name Directory Service** - allows callers to hear a list of employees and their extension numbers.
- **Nine-level Programmable Menus** - allows multiple levels of recorded menu options for specific routing of calls.
- **Programmable Time-Out Handling** - allows the administrator to select the action the system should take if there is no digit detected by the caller within specified seconds.
- **Schedule-Based Call Processing** - routes calls differently for different times of the day.
- **Web-based Call Processing** - allows the Auto Attendant to accept calls placed over the World Wide Web.

Altigen Voice Mail Features

The Altigen Voice Mail System is a sophisticated message management system that provides the calling and the called parties with enhanced communication features. It allows greater accessibility, faster reply time between parties, and reduces the frustration of telephone tag.

The Altigen Voice Mail System is described in the *Altiserv User Guide*. A summary of voice messaging features include the following:

- **Altigen Voice Mail Access from Voice Mail Greeting** - users can log into the Altigen Voice Mail System by pressing * during the voice mail greeting of any extension.
- **Altigen Voice Mail Quick Features** - allows direct access to a specific Altigen Voice Mail menu without having to login to Altigen Voice Mail System.
- **Call Forwarding from Voice Mail** - users can set up Call Forwarding from within the Altigen Voice Mail System. This allows users to set up Call Forwarding away from the office and without having to access Altireach or Altiview.
- **Disable a Mailbox** - voice mailboxes can be disabled so that callers cannot leave messages. This can be useful for maximizing system capacity or controlling access to phone services.
- **Configurable Voice Mail Playing Order** - Administrators can configure users' voice mailboxes to play the oldest or the newest message first.
- **Future Delivery** - allows users to record a message to be delivered at a specific time and date in the future, up to one year in advance.
- **Information Only Mailbox** - a mailbox can be configured to announce customized pre-recorded information when accessed. This mailbox does not allow callers to leave a message, but only to listen to the message announcement (personal greeting) from the mailbox. To repeat the message, callers are instructed to press the # key. See "Setting up Extensions" on page 8-3 for more information on this feature.
- **Making a Call from the Altigen Voice Mail System** - allows users to make a call from within the Altigen Voice Mail System by pressing # at the Main Menu and entering the external phone number. This is especially useful while traveling where users can respond to all

messages and make *other* calls not associated with a message, all with *one* call into the AltiGen Voice Mail System. This can result in significant savings. The use of this privilege is configurable on a per-user basis.

- **Message Management** - receives, sends, forwards, deletes, and replies to messages.
- **Message Notification of E-mail Messages** - designed to alert you of new voice and/or email messages in your mail box. (At this time, notification of email messages can only be configured by the system administrator.) The AltiGen Voice Mail System will notify you by calling an extension, phone or pager number. A notification schedule can be set for business hours, after business hours, at any time or at a specified time. For voice messages, you have an option of being notified of all messages or only urgent messages. You may enter up to 80 digits for the destination (notification) phone number. Operator-assisted paging is also supported.
- **Personal Greeting** - allows users to record greetings in their own voice to be played when callers reach their voice mail.
- **Priority Delivery** - allows users to determine the priority of message delivery such as normal or urgent.
- **Private Messaging** - allows users to leave a private message in their voice mail for the expected caller.



Record Conversation to Voice Mail - an extension user (on Triton Analog Extension boards only) can record a conversation with AltiClient and save as a voice mail.

- **Reminder Calls** - are used to remind you of important meetings, things to do or people to call.
- **Remote Access** - allows users to access the AltiGen Voice Mail System from any telephone by dialing into the main system number and pressing # to login.
- **Voice Mail Distribution List** - allows the user to use system distribution lists, or create and use personal distribution lists for forwarding voice mail. Up to 100 distribution lists can be created. Each distribution list can have up to 64 entries, and any entry can be another distribution list.

- **Zoomerang** - allows users to listen to messages in the Altigen Voice Mail System, prompt the system to automatically call the party who left the message, and then return to the Altigen Voice Mail System to continue checking messages, all in a single call into the Altigen Voice Mail System. If the caller ID information is not captured, the user may enter the “call back” number manually.

Internet Integration Features

Internet integration features include:

- **Altireach™** - a Web-based management tool that provides a way for users to visually manage their call handling options such as One-Number-Access, CallView, Message Notification, Speed Dial Numbers and other personal phone settings using a standard Web browser. Groups can also be monitored and configured over Altireach. Altireach is further described in the *Altiserv User Guide*.
- **Built-in E-mail Server** - a complete SMTP/POP3 email server is built into the Altiserv system so that all you need is an SMTP/POP3 email client to send and retrieve Internet email. The system allows use of alpha character-based passwords.
- **CallView™** - a Web-based Java application that allows for call control using a standard Web browser to manage multiple incoming calls and view information including Caller ID, calls in queue and extension status.
- **Exchange Integration** - provides unified messaging between the Altiserv and a Microsoft Exchange server on the LAN. The state of both servers will be synchronized. This feature allows for dynamic synchronization of mail between the two servers so that deleted messages from one server get automatically deleted in the other server. Similarly, a new message sent to one server is transmitted to the other server. This way, the message can be accessed or deleted from either server. For example, when a voice mail is deleted from Altiserv, it is automatically deleted from the Exchange server too. The address of the Exchange server must be the name of the machine or the fully qualified domain name.

- **Mail Forwarding** - allows you to forward mail (email and voice mail) to an SMTP-based mail server. The destination server address should be the address of the SMTP server to which all mails should be forwarded. This address can be an IP address such as *100.200.101.201*, a domain name such as *altigen.com*, a fully qualified domain name such as *symphony.altigen.com* or a machine name such as *symphony*.
- **Mixed-Media Messaging** - allows users to combine multiple forms of communication (such as voice mail, email, data file, etc.) into a single e-mail message. The user can record a voice message using a telephone handset or microphone on a multi-media PC and attach it to the AltiGen Voice Mail System for delivery to an internal user (LAN) or an external user (internet) who can listen to it from the PC. The recipients of the AltiServ system also have the option of listening to annotated messages from the handset.
- **Remote Download of Messages via Internet** - allows users who are traveling and/or working at home to download all new voice and email messages in their the AltiGen Voice Mail System Post Office Box via a local internet access line.
- **Support of Internet E-mail Standards** - allows the user to send and retrieve email using any SMTP/POP3 e-mail client.

System Administration Features

System Administration features include:

- **Access Restriction** - allows administrators control over system user access to features and trunks.
- **AltiAdmin Remote Administration** - a version of the AltiWare Administrator application that can be installed on a Windows 2000 or Windows NT 4.0 client computer with Service Pack 6a (or higher) installed and used on the LAN to remotely administer one or more AltiServ systems. If there is no firewall on the LAN where AltiServ resides, AltiAdmin can be installed and used to manage AltiServ over the Internet from a remote site as well. This also allows the AltiWare Administrator on the AltiServ to be closed without affecting the telephony functions that continue to run in the background on the server.
- **Apply To Feature** - applies changes (only the field that was changed) to multiple extensions, trunks or channels instead of having to change them one at a time.

- **Call Detail Reporting (CDR)** - the system collects and records information on outgoing and incoming phone calls, such as length of call, time of call, number of calls. This data can be written to an internal database or to an external SQL database. CDR Search provides an interface that captures workgroup statistics from the real-time monitoring function used in the Altisupervisor client application. Settings in AltAdmin let you specify time intervals for saving RTM data.



Configurable Emergency Number - For international use, allows the system administrator to set up country-specific emergency numbers.

- **Configuration Reader** - a tool that summarizes details of your AltWare configuration, so you can send a single file to Altigen Tech Support if needed.
- **DNIS Routing Tables** - incoming trunk calls can be routed to Auto Attendants, extensions, groups, etc., based on DNIS digit information configured in system administration routing tables.
- **Email and Voice Mail Storage** - can be placed on drives other than the Altiserv server.
- **Extension Checker** - a tool that checks the security status of every extension in your AltWare system.
- **Monitor List** - lets you select the Physical or IP extensions you wish to monitor. Monitoring is available within AltView and Altisupervisor.
- **Out Call Routing Configuration** - allows outgoing calls to be directed to particular trunk routes, based on parameters assigned in AltAdmin, and supporting the new tenant tables.
- **Enhanced Password Security** - allows administrators to lock extensions that have been “attacked” with false password attempts and to set default system passwords for newly created or newly assigned extensions (more secure than the default of an exact extension/password match). Password requirements are also stricter.
- **Auto Attendant Configuration File** - lets you export your complete Auto Attendant configuration to an html file.



RTM External Logger - with the **External Logger** license, RTM data is sent to the External Logger.

- **Split Area Code Support** - allows you to identify area codes and prefixes that are exceptions to the standards of how area codes and long distance prefixes are normally used. For example, this configuration allows the system to treat calls to certain areas as local calls.
- **Tenant Service** - allows certain trunks to be shared among multiple groups. In this manner, for example, an Altiserv system in a large building can be shared among smaller offices, or tenants. A tenant table can be created to list the tenants who share an Altiserv system usage. Each extension can be assigned a tenant entry to which it belongs. Each trunk can be associated with a tenant entry.
- **Voice Mail Distribution List** - allows you to create a group of extensions for forwarding voice mail. Up to 100 distribution lists can be created. Each distribution list can have up to 64 entries, and each entry can be another distribution list.
- **Voice Mail Alert** - An announcement can be sent to Voice Mail when the email server disk is full.

T1/PRI/E1 Features

T1/PRI features include:

- **ANI/DNIS Transport over T1/PRI Tie Trunks** - ANI (Automatic Number Identification) and DNIS (Dialed Number Identification Service) digits for calls can be forwarded and transmitted between extensions at remote Altiserv systems.
- **Collecting Caller ID/DID Digits for T1** - allows you to configure the format and sequence of caller ID and DID digits using DTMF for a T1 connection. See “Triton T1/PRI Trunk Properties” on page 7-15 for more information on this feature.
- **Collecting Caller Name for PRI** - PRI Caller Name feature is incorporated, compliant to NI-2 standard.



Support for E1/PRI.

Voice over IP Features

Voice over IP features include:

- **Altiserv Remote Administration** - remote Altiserv locations can be managed using AltiservAdmin.

- **AltiServ-to-AltiServ Networking Capability** - multiple AltiServ systems at the same or remote locations can be linked through an IP network. Also, this feature provides toll savings on long distance calls by allowing users to dial a remote AltiServ system via an IP trunk and then the destination phone number through PSTN.
- **AltiServ Feature Support** - many of the AltiServ features are also available when using IP trunks. See “Voice over IP Session Support AltiServ Features” on page 1-26.
- **Board ID Support** - The board ID of the Triton IP board is displayed in the AltiAdmin board window. This can be used to relate a Triton VoIP board to a hardware board.
- **DTMF Remote Carriage** - DTMF tones and/or digits are detected and sent out-of-band, over a reliable TCP/IP channel to the remote AltiServ, to guarantee the delivery.
- **Dialing Prefix Filter** - users may select a PSTN or IP trunk when making outgoing calls by dialing a configurable access code.
- **Echo Cancellation** - due to bandwidth limitations and device loading, long delays may occur during packet delivery process, which worsens the echo effect of recorded and live voice speech. Echo cancellation is provided to maintain reasonable voice quality.
- **G.711 Codec** - toll quality (64K) digital voice encoding, which guarantees interoperability for better voice quality.
- **G.723.1 Codec** - a dual rate audio encoding standard, which provides near toll quality performance under clean channel conditions. VAD (Voice Activity Detection) capability is also included to suppress silence packets.
- **H.323 Standard Support** - AltiWare IP is based on the H.323 protocol, which is an emerging ITU standard for multimedia communications over IP.
- **IP Extensions** - the IP Extension feature allows an H.323 compliant terminal device to connect to AltiServ. IP extensions have the same functionality as an analog station. Group agents can log in from a remote location using IP extensions.
- **IP Phone Service** - a service that runs on the same system as AltiServ, is installed together with AltiServ, and connects to AltiServ through enhanced AltiLink Plus protocol on behalf of AltiGen IP Phones.



• **IP Port Support** - AltiWare IP port density is increased to 120 ports. The system supports up to ten (10) Triton IP boards (120 ports) or, two (2) G.723 and two (2) G.711 (84 ports).

- **Integrated Administration** - calls through both PSTN and IP networks can be managed using a single point of administration.
- **Integrated VoIP Gateway** - because the VoIP gateway is built-in to the system, translation of PSTN calls to IP calls and IP to PSTN calls are smoother and more successful. Also, the Overlap dialing is enabled and the dialing sequence is smoother for end users. Without the need for cable configuration and the purchase of additional analog ports, there can be significant time and cost savings.
- **Jitter Removals** - due to various delays in the IP network, audio packet streams may be delivered late or out of order. AltiWare is able to buffer incoming packets and re-sequence them by maintaining a queue. This queue is adjustable to accommodate different network environment characteristics.



• **Release Link Tie** - when transferring between two systems through IP tie trunks, the trunks can be released by pressing **FLASH ***.

- **Ring-Back Tone Generation** - ring back tones can be generated to other analog trunk or extension lines on behalf of the IP trunk.
- **Silence Detection and Suppression** - A silence detection feature enables the following:
 - Silence Suppression - when silence suppression is enabled and silence is detected, AltiWare stops sending packets to the other side. The other side does not receive any packets and plays silence.
 - AltiWare disconnects the voice mail session when a silence period exceeds 7 seconds during voice mail recording over VoIP.
- **VoIP Hop Off Call Support** - allows an extension to access a T1 or CO trunk on the remote system and “hop off” to dial an outside telephone number. This “hop off” feature can be enabled or disabled on the remote system. Outcall restrictions for hop off calls are configurable.

Voice over IP Session Support AltiServ Features

The following trunk-related AltiServ features are supported during IP trunk call sessions. Refer to the *AltiServ User Guide* for more details on how these features work over IP trunks.

- Incoming and Outgoing Trunk Calls
- Call Transfer To and From IP Trunk (Blind & Supervised)
- One Number Access
- Message Notification
- Reminder Calls
- Multi-Location Conferencing
- Call Park
- Call Waiting
- Call Forwarding
- Automatic Call Distribution
- Auto Attendant
- System Call Back
- Calling Out from Voice Mail
- Zoomerang
- Dial Last Caller
- Speed Dialing
- Call Accounting
- Caller ID
- Voice Mail
- MS Exchange Integration
- AltiConsole Client Support
- AltiReach Support
- AltiView/AltiView IP Extensions
- Intercom
- IP Extension Log In/Log Out

AltiWare Tools

AltiWare OE comes with useful tools for testing, diagnosing and operating your AltiWare configuration.

- **AltiDBReader** - allows you to view historical data from a database, which can be saved to a file.



DINA (Distributed Intelligence Network Architecture)

Manager - an application that allows a system administrator to configure several distributed AltiServ systems from a single system. The tool can be run on any server (local or remote) to an AltiWare system that has a connection for access to all the servers to be managed. **In OE 4.6**, DINA Manager can support multiple versions of AltiWare and AltiContact Manager. Also, extensions across multiple systems can be deleted.

- **MVIP Test Tool** - detects one-way connection, cross talk, bad MVP cable, and static noise problems.

Optional Add-On Software



Additional new features for these applications are described throughout this chapter.

- **AltiConsole™** - a personal, computer-based Attendant console connected to the AltiServ over a network; emulates a standard, hardware-based Attendant console through software; has the flexibility of adding new features through software without changing the hardware. **In OE 4.6, the following change has been made:**

— Huntgroup/workgroup calls in queue will be displayed in AltiConsole queue monitor without licensing.

— Park for ringback

- **AltiView/AltiView IP Extension** - a Windows-based desktop call control and window popup application that interacts with AltiServ through AltiLink Plus and provides easy-to-use call control, monitoring and logging capability. **In OE 4.6, the following enhancements have been made:**

Separation of AltiView and AltiClient

On demand voice recording to voice mail

New support of ActiveX control from AltiView

Microsoft Outlook dialing support (helps to convert standard international phone numbers in Microsoft Outlook to correct digit strings for AltiWare.

- **AltiAgent™** - a workgroup user version of AltiView; in addition to AltiView features, also provides call statistics, call wrap up with data entries, logon/logoff with reason codes and agent ready/not ready status. **In OE 4.6, the following enhancements have been made:**

On demand voice recording

Support of ActiveX control from AltiClient

Microsoft CRM integration

- **AltiSupervisor™** - provides workgroup statistics, silent monitoring and barge-in features. **In OE 4.6, the following enhancements have been made:**

Separation of AltiView and AltiClient

On demand voice recording

- **CallRouter** - a call handling application that uses the AltiAdmin Auto Attendant and AltiAPI Data Directed Routing features to match incoming trunk call data against customer records built using the Call Router GUI. The **Call Router Advanced** license gives additional features including dynamic searching of DNS data to match against incoming call data, and workgroup call queue announcements.

In OE 4.6, the following enhancement has been made:

Digit collecting failure routes.

- **CDR Search** - allows administrators to search CDR files for records that meet selected criteria, and allows workgroup supervisors to search both CDR files and workgroup CDR statistics.

Optional Add-On Products



AltiServ Contact Center - AltiServ Contact Center (ACC) allows you to enable this add-on option for call center features.

- **Alti-IP 600** - AltiGen's H.323-compliant, business telephone that provides voice communication over an IP network.

System Requirements

Hardware Requirements

AltiServ hardware requirements depend on the number of extensions (lines) and trunks your site requires. Refer to Table 4 on page 2-12 for AltiServ platform selection.

System Key Requirement

AltiWare OE 4.6 is integrated with a system key, a hardware security device that allows the software to run **ONLY** when that system key is attached to the parallel or USB port of the server that OE is running on. The system key is **required** for initial installation, software upgrade process, and upon system reboot.

One pre-assigned, DB-25 parallel port system key is included with every copy of AltiWare OE 4.6 (upgrade or original). Each system key has a unique key designated for a particular AltiWare software package - system keys cannot be shared among systems. System keys are also available in USB form factor. USB system keys must be special ordered.

Selecting the AltiServ Platform

In order to maintain your AltiServ system integrity and plan for future site expansion, you should take into consideration the following points before selecting the AltiServ platform:

- Reliability
- Expandability
- System performance

Minimum System Requirements

The following operating systems are supported in OE 4.6:

- **For AltiWare OE 4.6 Server:** Microsoft NT 4.0 Server with SP6, Windows 2000 Server with SP2 and above.

Note: If installing AltiWare for the first time and you wish to use the software with Windows 2000, you must already be running Windows 2000 prior to the AltiWare software installation.

- **For 4.6 Administrator:** NT 4.0 Workstation/Server with SP6, Windows 2000 Server/Professional with SP2, and Windows XP Professional.
- **For 4.6 Client Applications:** Windows 98 2nd Edition, Windows ME, NT 4.0 Workstation/Server with SP6, Windows 2000 Server/Professional with SP2, and Windows XP Professional.
- **For Online Help:** Internet Explorer 5.0 or higher browser.

To accommodate Quantum and Triton telephony boards with AltiWare software, AltiServ requires the following minimum system configuration:

- IBM/PC compatible system with adequate number of full-size ISA and PCI slots.
- Microsoft Windows NT Server 4.0 with Service Pack 6a (or higher) installed or Microsoft Windows 2000 Server.
- Microsoft Internet Information Services (version 5 or higher for NT, version 3 or higher for Windows 2000 [web server software that is supplied with Windows]) must be installed prior to installing AltiWare. This is necessary if you want AltiReach, the web-based call handling application, to run.
- Channel Service Unit for T1/E1/PRI.

Hardware selection may have to be adjusted based on the following variables:

- The number of AltiGen telephony boards required
- The maximum AltiServ extension and trunk traffic anticipated
- The number of simultaneous client software connections

Table 5, “Individual Board Power Requirements,” on page 2-13 shows the AltiServ system requirements guidelines depending on the number of AltiGen boards that will be installed.

Proper Grounding and Loop Current

Proper **grounding** is essential for any PBX system. **This is a simple but very important step and is highly recommended.** Run a wire from the server chassis to earth ground. Don't wait for a problem to arise before taking this step. Make sure this is one of the first things you do before turning the AltiGen system on.

Also, check the **loop current** on incoming trunks before connecting to any AltiGen boards. The desired loop current measurement is 25mA–28mA. This is another essential step to ensure proper operation of AltiGen systems. For more information on loop current issues, please refer to the toolbox in the **tech support** section of AltiGen's web site at <http://support.altigen.com>.

Uninterruptible Power Supply (UPS)

Using a UPS prevents power fluctuations and surges on power sources from utilities. Windows NT files can be corrupted as a result of power failure or improper system shutdown.

Caution: Corrupted files may not be repairable and may require re-installation of Windows NT and AltiWare. To protect your system from surges and power outages, it is strongly recommended that an adequate UPS (providing between 600VA and 1000VA) and power surge protector is used with the system.

Operating Environment

Before you set up and use the system, consider the environment in which the system will reside:

- Choose a work surface large enough to accommodate the entire system.
- Use a flat, stable work surface with enough space around it for proper air circulation. For proper heat dissipation, a fan is recommended in front of the AltiGen telephony boards to ensure sufficient airflow. Be sure the fan filter is clean and does not block the airflow.

The following table contains the operating specifications for the AltiGen telephony board.

Table 1. AltiGen Board Operating Environmentals/Condiciones Ambientales para La Operación de La Tarjeta AltiGen/Betriebsbedingungen für die AltiGen Karte

Description/ Descripcion/ Beschreibung	Specification/Especificacion/Spezifizierung
Operating Temperature/ Temperatura de Operacion/ Betriebstemperatur/	0° to + 50° C/ 0° a + 50° C/ 0° bis + 50° C
Storage Temperature/ Temperatura de Almacenamiento/ Lagerungstemperatur	-20° to +70° C/ -20° a +70° C/ -20° bis +70° C
Relative Humidity/ Humedad Relativa/ Relative Luftfeuchtigkeit	10% to 80% non-condensing/ 10% to 80% sin condensacion/ 10% bis to 80% nicht-verdichtend

AltiGen Telephony Boards

AltiGen telephony boards are installed into the AltiServ motherboard expansion slots or can be used individually as a third-party developer application platform. To obtain maximum performance reliability and long-term, fault-free operation, you must maintain power and environmental conditions specified at the end of this section.


Note: When installing VoIP boards, the recommended installation procedure is to install the VoIP boards first, then set up the IP extensions. If there are no VoIP boards in the system and no IP extensions are loaded, then no IP extensions can be set up.

Functional Specifications

Quantum Board

Each Quantum telephony board has eight voice channels, so eight ports can listen to voicemail simultaneously. One port will remain active even if the system has a power failure.

The I/O switch is factory preset as shown below. Change this setting only if there is a hardware conflict.

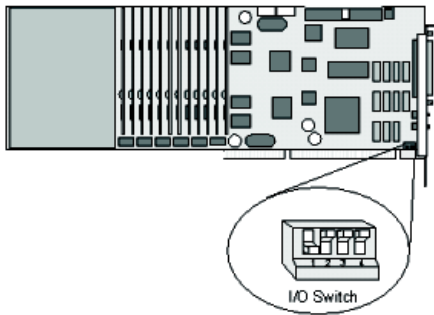


The Quantum telephony board has the following functional characteristics:

- MVIP compatible
- 256 Port Non-Blocking Switch Matrix
- Audio Peripheral Input & Output
- Jumper-Free Configuration
- On-Board Telephony Power Supply for Quantum D Board
- Automatic Power Failure Transfer
- ISA Bus

Triton Analog Extension Board

The Triton Analog Extension telephony board has a dedicated voice channel for every extension port and FSK-only message waiting.

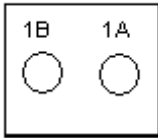LED Placement	LED Indicators		
	LED 1B	LED 1A	Status
	ON	ON	5V is OK; 12V is OK – normal operation
	OFF	OFF	Power cable not plugged in
	ON	OFF	5V less than 4.5V but more than 3V – bad PC 5V power
	OFF	ON	12V less than 9V – bad PC 12V power
	LED 2, located near the 12V connector, is a red LED for diagnostic purposes. If it is ON, the fuse is blown.		

The Triton Analog Extension telephony board has the following functional characteristics:

- MVIP Compatible
- 256 Port Non-Blocking Switch Matrix
- Jumper-Free Configuration
- PCI Bus
- Compliant with EIA464


Note: When the board is configured for audio input, the first port cannot be used for an extension.

Triton Analog Trunk Board

The Triton Analog Trunk board comes in two models: Loop Start/Ground Start (LS/GS) and Loop Start only (LS). It supports 12 analog trunks and offers FSK Caller ID receiving, Centrex flash, and voice/silence activated answer supervision. This board is also compatible with major PCI chassis vendors.

LS/GS LED Indicators*			LS LED Indicators		
LED 1B	LED 1A	Status	LED 1B	LED 1A	Status
ON	ON	Normal	ON	ON	Normal
OFF	OFF	No power to board	OFF	OFF	No +5V or less than 4.1V
ON	OFF	No +5V or less than 4.1V			
OFF	ON	No +12V or less than 9.2V			
*LED 2, located on the board, is a red LED for diagnostic purposes. If it is ON, the fuse is blown.					

LED Placement

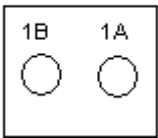

The Triton Analog Trunk board has the following functional characteristics:

- MVIP-compatible
- 256 Port Non-Blocking Switch Matrix
- Jumper-Free Configuration
- 32-bit, 5v PCI Bus
- Compliant with EIA464
- Tone detection for fax tone, modem tone and voice.

Triton VoIP Board

The Triton VoIP telephony board has the following functional characteristics:

- MVIP-compatible
- 256 Port Full-Duplex Switch Matrix
- Jumper Free Configuration
- PCI Bus

Triton T1/PRI Board

LED Indicators		
Green LED	Red LED	Status
OFF	OFF	No power
ON	OFF	Normal operation
OFF	ON	No signal
ON	Flashing	Faulty signal with frame synchronization*
OFF	Flashing	Faulty signal without frame synchronization
Alternating	Alternating	Frame slips in normal operation
*Faulty signals include the following: yellow alarm, bipolar violation, or frame error.		

The Triton T1/PRI telephony board, which supports either T1, E1 or PRI through software configuration, has the following functional characteristics:

- MVIP Compatible
- 256 Port Non-Blocking Switch Matrix
- Jumper-Free Configuration
- PCI Bus
- Tone detection for fax tone, modem tone and voice.

Triton Resource Board

The Triton Resource board enables call center supervisors to barge in or silently monitor conversations. Up to two Resource Boards can be installed in one system. Up to 12 simultaneous supervisor silent monitoring or barge-in sessions are supported for each board.

The Triton Resource board has the following functional characteristics:

- MVIP Compatible
- Jumper-Free Configuration
- 12 ports for silent monitoring and barge-in
- PCI Bus

AltiGen Board Installation

Always install Triton and Quantum boards and attach MVIP and power cables **prior** to powering server on. Failure to do so may result in damage to the board. When removing or connecting the MVIP cable, do so with a slow, vertical motion. Do not use a side-to-side rocking motion to remove the connector or by pulling the cable. Be careful to make sure pins in the MVIP connector on the board line up with the sockets on the MVIP cable. Failure to do so may result in pins being pushed down toward the bottom of the MVIP connector on the board. The MVIP test will detect these errors.

For complete instructions on how to install Triton and Quantum boards, please refer to the ***Quick Installation Guide***, which is provided with every AltiGen board package.

TritonDef.inf

When a new PCI board is installed in a Windows 2000 system, the OS will detect the board and ask for a driver. The driver file for the boards (TritonDef.inf) can be found in the following locations:

- *Before installing AltiWare OE:* on the root directory of the AltiWare OE CD-ROM; this file will be installed when you install the software.
- *After installing AltiWare OE:* in the \AltiServ\SP directory on your hard drive.

AltiGen Board Options/

(Opciones de La Tarjeta AltiGen /AltiGen Kartenoptionen)

Table 2 lists the AltiGen telephony board modules. This selection allows you to optimize your system based on the trunk/extension mix required at your site.

La Tabla No. 2 lista los módulos de la tarjeta de telefonía AltiGen. Esta selección le permite optimizar su sistema con base en la mezcla de troncales y extensiones que requiere su sitio.

In Tabelle 2 sind AltiGen Kartenmodule für das Fernsprechwesen aufgelistet. Diese Auswahl erlaubt eine Optimierung ihrer Standortanlage mit der gewünschten Kombination von Haupt- und Nebenanschlüssen.

Table 2. AltiGen Telephony Board Options

Board/Tarjeta/ Karte	Model Number/No. de Modelo/Modell Nummer	Description/Descripción/ Beschreibung
Quantum ¹	ALTI-CD0408UD- SPH001	4 trunks/troncales/Haupt and 8 extensions/extensions/ Nebenanschlüsse
Quantum ¹	ALTI-CD0804UD- SPH001	8 trunks/troncales/Haupt and 4 extensions/extensions/ Nebenanschlüsse
Quantum ¹	ALTI-CD0012UD- SPH001	12 extensions/extensions/ Nebenanschlüsse
Triton	ALTI-TTAS-12	12 extensions (stations)/ extensiones (estaciones)/ Nebenanschlüsse (Stationen)
Triton	ALTI-TTIP-8	12 or 30 VoIP trunks/troncales/ Haupt or extensions/extensions/ Nebenanschlüsse*
Triton	ALTI-T1E1-1	1 T1, 1 E1 or 1 PRI
Triton	ALTI-TTRS-12	12 ports for supervisor monitoring/12 puertos para monitoreo del supervisor/12 Stechanschlüsse für Monitor- Dienst

Board/Tarjeta/ Karte	Model Number/No. de Modelo/Modell Nummer	Description/Descripción/ Beschreibung
Triton	ALTI-TTAT-12GS	12 trunks/troncales/Haupt, ground start/loop start
Triton	ALTI-TTAT-12	12 trunks/troncales/Haupt, loop start only

* When you upgrade to AltiWare OE 4.6, all 8-port boards are automatically upgraded to 12-port boards. With a 30-port upgrade license, the 12-port board can be upgraded to a 30-port board (one board upgrade per license). The original ports retain their configurations, but you must configure the new ports if you want to use them.

* Cuando sustituye usted el producto por el AltiWare OE 4.6, todas las tarjetas de 8 puertos automáticamente pasan a convertirse en tarjetas de 12 puertos. Con la licencia para 30 puertos, la tarjeta de 12 puertos puede convertirse en una de 30 puertos (un incremento en la tarjeta por cada licencia). Los puertos originales conservan su configuración.

* Bei der Aufrüstung zur AltiWare OE 4.6 werden alle 8 Anschluß-Karten automatisch zu 12 Anschluß-Karten auferüstet. Mit der Lizenz zur Aufrüstung für 30 Anschlüsse kann die 12 Anschluß-Karte zu einer 30 Anschluß-Karte auferüstet werden. (Eine Kartenaufüstung pro Lizenz). Die ursprünglichen Anschlüsse behalten ihre Konfiguration, die neuen Anschlüsse jedoch müssen bei Gebrauch neu konfiguriert werden.

¹ Available in the Americas and Caribbean only./Disponible en las Américas y en el Caribe únicamente./Nur in Nord-und Südamerika und der Karibik erhältlich.

System Limitations

Note the following limitations for board installation and Triton VoIP board and port combinations.

Table 3. Board Installation

Board Type	Maximum in a System	Board ID Range	Total Ports
Triton VoIP 12-port	10	0-9	120
Triton VoIP 30-port	2	0-9	60
TOTAL Triton VoIP boards	10		120 max in one system, via any combination of boards that complies with the system limitations shown here
Triton Analog Trunk	16	0-15	
Triton Analog Extension	16	0-15	
Quantum	16	0-15	
Triton T1/E1/PRI	8	0-7	
Triton Resource	2	0-1	
TOTAL T1/ PRI, VoIP, and Resource Combined	10		

2. System Requirements

Recommended Altiserv System Configurations*

Table 4. System Selection Guidelines

Number of Quantum or Triton Boards per System	CPU Type	Available Memory	Hard Disk Controller	Power Supply	5V Requirement	12V Requirement
1–3	333 MHz	128 MB	IDE/SCSI	Single 300W	15A	6A or better
4–6	700 MHz	256 MB	IDE ATA-100/SCSI	Single 400W or Dual 400W load sharing recommended	20A	16A
7–16	850+ MHz	512 MB	IDE ATA-100/SCSI	Dual 400W with load sharing required	40A	20A

**Individual requirements may vary depending on particular applications. Please contact Altigen Sales Engineering or Technical Support for assistance on selecting the most appropriate system configuration for your installation.*

Power Requirements

(Requisitos de Energía Eléctrica/Energiebedarf)

The power requirements are as follows for *each* individual board/Los requisitos de energía eléctrica son los que se indican a continuación para cada tarjeta individual/Die folgende Tabelle zeigt den Energiebedarf jeder einzelnen Karte an:

Table 5. Individual Board Power Requirements

Board/Tarjeta/Karte	5V	12V	Slot Type/Tipo Ranura/Steckplatz
Quantum	1.6	1.4A	ISA
Triton Analog Extension	1.6	1A*	PCI
Triton Analog Trunk LS/GS	1.6	0.25A	PCI
Triton Analog Trunk LS	1.6A	0	PCI
Triton VoIP	1.6	0	PCI
Triton T1/PRI	1.6	0	PCI
Triton T1/E1 PRI	1.6	0	PCI
Triton Resource	1.6	0	PCI

*1A@12V is provided by power connector.

Heat Factor

(Factor Térmico/Hitzefaktor)

Internal system temperature must not exceed the specified operating temperature. If more than two AltiGen telephony boards are installed in the system, then additional cooling fans are suggested. These fans need to effectively reduce heat and increase airflow to the AltiGen telephony boards to ensure system reliability.

La temperatura interna del sistema no debe exceder la temperatura de operación que se especifica. Cuando en un mismo sistema se encuentren instaladas más de dos tarjetas de telefonía AltiGen, se sugiere que también se instalen ventiladores adicionales de enfriamiento. Es menester que estos abanicos reduzcan efectivamente el calor e incrementen el flujo de aire que ingresa a las tarjetas de telefonía AltiGen, a fin de garantizar la confiabilidad del sistema.

Die interne Anlagentemperatur darf die vorgeschriebene Betriebstemperatur nicht überschreiten. Befinden sich mehr als zwei AltiGen Fernmeldekarten in der Anlage empfiehlt sich der Einbau zusätzlicher Ventilatoren. Ihre Aufgabe ist es, effektiv Hitze zu reduzieren und gleichzeitig den Luftstrom zu den Fernmeldekarten zu erhöhen, um die Zuverlässigkeit der Anlage zu gewährleisten. iabilidad del sistema.

Installing a Cooling Fan

(Instalación del Ventilador de Enfriamiento/Ventilatoreinbau)

If more than two AltiGen telephony boards are installed in the AltiWare system, then an additional cooling fan will be required. This fan needs to effectively reduce heat and increase airflow to the AltiGen telephony boards to ensure system dependability and reliability. To install a cooling fan into the AltiWare system, read the instructions included with the fan unit.

Cuando en un mismo sistema se encuentren instaladas más de dos tarjetas de telefonía AltiGen, también se requerirá de la instalación de un ventilador adicional de enfriamiento. Es menester que este abanico reduzca efectivamente el calor e incremente el flujo de aire que ingresa a las tarjetas de telefonía AltiGen, a fin de garantizar la fiabilidad y la seguridad funcional del sistema. Para instalar el ventilador de enfriamiento en el sistema AltiWare, lea las instrucciones que se incluyen con la unidad de ventilación.

Befinden sich mehr als zwei AltiGen Fernmeldekarten in der AltiWare Anlage, muß ein zusätzlicher Ventilator eingebaut werden. Dieser Ventilator hat die Aufgabe, effektiv Hitze zu reduzieren und gleichzeitig den Luftstrom zu den Fernmeldekarten zu erhöhen, um die Zuverlässigkeit der Anlage zu gewährleisten. Beim Einbau eines Ventilators in die AltiWare Anlage sind die dem Ventilator beigelegten Anleitungen zu beachten.

Proper Board Handling Procedures

Handle boards by the edges only. Always hold the boards individually by the face plate (with the components facing you) and pinching the edge on the right side of the board. Do not make contact with the solder or component sides of the boards. Do not slide the boards over any surface, including an electrostatic discharge mat. Some boards have very sensitive ceramics that contain embedded traces. These traces are very close to the edge of the component and are easily chipped if they are hit against a hard object or surface.

Electrostatic Discharge (ESD) Warning

Electrostatic discharge is caused by static electricity. It can damage boards and may result in hard failures, early life failures, or cause a system to experience intermittent, erratic behavior. Always use an ESD kit when working on the telephony boards. The use of a special wrist strap or foot strap (to ground the wearer to the computer's case) reduces the risk of ESD damage.

Operating Environment

(Condiciones Ambientales de Operación/Betriebsbedingungen)

Before you set up and use the system, consider the environment in which the system will reside:

- Choose a work surface large enough to accommodate the entire system.
- Use a flat, stable work surface with enough space around it for proper air circulation. For proper heat dissipation, a fan is recommended in front of the AltiGen telephony boards to ensure sufficient airflow. Be sure the fan filter is clean and does not block the airflow.
- Always work with grounded equipment and fixtures. The use of an ESD mat (to dissipate static) and grounding wrist/foot straps is necessary.
- In the manual assembly process, boards must be removed from the anti-static bag and placed gently on a dissipative workstation mat, so that they become discharged safely before being touched. The dissipative mat should have a rubber upper layer and conductive bottom layer. Regular cleaning of the mat should be done using an anti-static mat cleaner.

The following table contains the operating specifications for the AltiGen telephony board.

Description	Especificacion
Operating Temperature	0° to + 50° C
Storage Temperature	-20° to +70° C
Relative Humidity	10% to 80% non-condensing

Before you set up and use the system, consider the environment in which the system will reside:

- Choose a work surface large enough to accommodate the entire system.
- Use a flat, stable work surface with enough space around it for proper air circulation. For proper heat dissipation, a fan is recommended in front of the AltiGen telephony boards to ensure sufficient airflow. Be sure the fan filter is clean and does not block the airflow.

Condiciones Ambientales de Operación

Antes de Montar y utilizar el sistema, considere el medio ambiente en el que dicho sistema residirá:

- Seleccione un espacio de trabajo lo suficientemente amplio para dar cabida a la totalidad del sistema.
- Utilice una superficie de trabajo plana y estable, con suficiente espacio alrededor para que pueda darse una adecuada circulación del aire. Se sugiere la colocación de un ventilador frente a las tarjetas de telefonía Altigen, con objeto de disipar el calor adecuadamente y garantizar un flujo de aire suficiente. Cerciórese de que el filtro del ventilador se encuentra limpio y de que no obstruye el flujo del aire.
- Trabaje siempre con equipo y aditamentos con conexión a tierra. Es necesario utilizar un tapete ESD (para disipar la estática) y pulseras/tobilleras de aterrizada.
- Durante el proceso de ensamble manual, las tarjetas deben retirarse de la bolsa antiestática y colocarse suavemente sobre el tapete dispersivo de la estación de trabajo, de tal manera en que éstas se descarguen en forma segura, antes de que las toquen. El tapete dispersor debe contar con una capa superior de caucho y una capa inferior c. El tapete debe limpiarse en forma regular utilizando un limpiador para tapetes antiestática.

La tabla siguiente contiene las especificaciones de funcionamiento para el tablero de la telefonía de Altigen:

Descripcion	Specification
Temperatura de Operacion	0° a + 50° C
Temperatura de Almacenamiento	-20° a +70° C
Humedad Relativa	10% a 80% sin condensacion

Betriebsbedingungen

Vor Aufbau und Inbetriebnahme der Anlage müssen folgende Betriebsbedingungen berücksichtigt werden:

- Es ist eine Arbeitsfläche zu wählen, die der gesamten Anlage genügend Platz bietet.

- Die Arbeitsfläche muß flach und stabil sein und genügend Raum für eine entsprechend ausreichende Ventilation bieten. Zum angemessenen Hitzeverlust und ausreichender Luftzufuhr wird der Einbau eines Ventilators vor den AltiGen Fernmeldekarten empfohlen. Der Filter des Ventilators muß sauber sein und darf die Luftzufuhr nicht blockieren.
- Es darf nur mit geerdetem Gerät gearbeitet werden. ESD Matten (zur Vermeidung von Statik) sowie geerdete Handgelenk- und Fußbänder sind dabei erforderlich.
- Beim Zusammenbau von Hand ist zu beachten, daß mit Karten nach der Entnahme aus einem anti-statischen Behälter vorsichtig umzugehen ist. Karten müssen dann zur elektrischen Entladung auf eine Dissipationsmatte am Arbeitsplatz gelegt werden, bevor sie berührt werden dürfen. Die Dissipationsmatte muß eine gummierte Oberseite und eine konduktive Unterseite haben. Beim regelmäßigen Reinigen der Matte muß ein antistatisches Reinigungsmittel verwendet werden.

Die folgende Tabelle enthält die funktionierenden Spezifikationen für das AltiGen Telefoniebret:

Beschreibung	Spezifizierung
Betriebstemperatur/	0° to + 50° C
Lagerungstemperatur	-20° to +70° C
Relative Luftfeuchtigkeit	10% bis to 80% nicht-verdichtend

Packaging for Shipment and Storage

- AltiGen telephony boards are packaged and shipped individually in fully closed, static-shielding bags. The pink anti-static foam should be used only as cushioning material — it is not static-dissipative and cannot discharge the boards.
- Always save and use the original packaging materials (foam, static-shielding bag, and cardboard box) to transport the boards.
- AltiGen telephony boards are protected by their anti-static bags and should be removed from their packaging for installation by a properly grounded technician.

AltiWare Conference Resource Limits

The following table defines conference resource limits for boards used in an AltiWare system.

Table 6. Conference Call Resource Limits

Board	Maximum Number of Conferences Supported (Conference Bridge)	Maximum Number of Members per Conference (Internal Extensions and External Parties)	Total Number of Conference Resources Available	Support of Conference Members on Other Boards
Quantum	3	up to 6 ¹	12	Yes, limited to 4 members.
Triton Analog Extension	3	6	18	Yes, limited by maximum number of conference resources and maximum number of members per conference
Triton Analog Trunk	0	0	0	0
Triton VoIP 12 Port	0	0	0	0
Triton VoIP 30 Port	2	6	12	Yes, limited by maximum number of conference resources and maximum number of members per conference
Triton T1/PRI	0	0	0	
Triton Resource	12	up to 6	36	Yes, limited by maximum number of conference resources and maximum number of members per conference

¹ The Quantum board can support up to 3 conference bridges with up to 6 members each. However, this does not imply that you can have a total of 18 conferenced members (external + internal) per board, as it only has 12 conference resources.

² The Quantum board can only support up to 4 members located on different boards on a conference call initiated by a local extension, even if there are (12-1=11) resources available. For example, if Ext 101 (located on the Quantum board) wants to host a conference call with Ext 200, Ext 201, Ext 202, Ext 203 and Ext 204 (located on different boards), the last extension to be brought into the conference will not be conferenced, even if there are no other ongoing conferences on this Quantum board. Therefore, a total of 5 (1+4) conference resources have been used. However, it is possible for Ext 101 to bring in Ext 102 into the conference, if Ext 102 is located on the same Quantum board as Ext 101. Once Ext 102 joins the conference, no other members can join this conference call, as the 6 conference member limit has been reached.

³ The Triton Resource board can support up to 12 conference bridges with up to 6 members each. However, this does not imply that you can have a total of 72 conferenced members (external + internal) per board, as it only has 36 conference resources.

Software Installation

The AltiWare OE software is provided on a CD-ROM and contains the following components or folders:

- **AltiWare OE.** Contains the AltiWare Administrator as well as the switching service, SMTP/POP3 server, messaging agent, Exchange Integration, AltiBackup, AltiGatekeeper, AltiWeb that can be installed on any Windows NT Server with Service Pack 6a (or higher) or on Window 2000 Server.
- **AltiAdmin.** Contains the AltiWare Administrator that can be installed on any Windows NT with Service Pack 6a (or higher) or Windows 2000 on the LAN to control the AltiServ system(s).
- **AltiWeb.** Contains the AltiWeb installation files.
- **CallRouter.** Contains the CallRouter installation program.
- **CDR.** Contains the CDR Search Client that allows you to search a Call Data Reporting database, along with documentation and external logger service.
- **DINA Manager.** Contains the DINA Manager installation program.
- **Documentation.** Contains the AltiWare OE *System Installation and Administration Manual* and the *AltiView* and *AltiServ User Guide* in the Adobe Acrobat PDF format.
- **Gatekeeper.** Contains the Gate Keeper for IP Phones.
- **Reader.** Contains the Adobe® Acrobat® Reader executable.
- **Readme.txt.** Contains late breaking information about AltiWare OE. **Please be sure to take a moment to read this brief file, which contains very important information you need to be aware of before you install AltiWare OE.**
- **TAPI Gateway.** Contains the TAPI Proxy Server and TAPI Service Provider that allow you to use AltiGen's AltiLinkPlus to create TAPI applications for your AltiWare configuration.

AltiWare as an NT Service

AltiWare components such as the switching, messaging agent, and AltiBackup are NT services that are automatically launched when AltiWare OE is installed and the AltiServ system is restarted. Benefits of AltiWare as an NT service:

- The AltiWare Administrator user interface does not have to be tied to the switching service so that if there is a problem with the user interface, the switching service is not affected.
- **Remote** administration is possible through **AltiAdmin**.

Important: *Do not tamper with the startup settings* of AltiGen services in the Services applet of the Control Panel. Only the AltiGen Switching Service should be set to Automatic; all other AltiGen services should be set to Manual.

Preparing to Install AltiWare OE

The following is a step-by-step procedure for installing or upgrading the AltiWare OE software from the AltiWare OE Release 4.6 CD-ROM.

It should take about 15 to 20 minutes to install the AltiWare OE software program. Before you begin installation, however, please note the following:

- **Backup prior to install.** Before upgrading your system from AltiWare Release 4.0 or above, you should back up all the configuration information to a different location, such as the network drive. (You can do this by using the backup utility OR by copying the contents of the \altiserv\db\, \altiserv\Phrases\LangCustom, and \postoffice\ folders to a backup location.) This backup information is also required when rolling back to prior AltiWare versions.
- **NT Service Pack 6a, Windows 2000 Server** (or higher) is required and must be installed **before** AltiWare OE 4.6 can be installed or upgraded.
- **User Account.** During installation, a user account with local administrator right is created automatically to run AltiWare services. Do *not* delete or modify this account. You may change its password through installation. The account name is in the form: (user name: AltiGen_<servername>)

- **Third party applications.** AltWare OE must be installed before any third party applications on a Windows NT with Service Pack 6a (or higher) or Windows 2000 system. Contact your third party application vendor(s) to find out if an upgrade is required for their product to work with the AltWare OE release you are about to install.
- **Installing over old versions.** If AltWare 4.X is installed, there is *no need to uninstall it* before installing AltWare OE 4.6.

If AltWare 2.x or 3.0 is installed, first upgrade to 4.0, then upgrade to 4.6.

Firewall Considerations

If you are using a firewall in the AltWare OE 4.6 environment, the following are the network ports used:

Client	Server	TCP	UDP
AltAdmin ^a	AltWare DCOM	135	135
AltConsole	AltLink +	10025	
AltControl	AltLink+	10025	
AltReach	AltLink	10015	
AltView/AltAgent	AltLink+ VM Service	10025 10028	
Supervisor	AltLink+ Internal/External CDR Logger	10025 10027	
CDRSearch	AltLink+ Internal/External CDR Logger	10025 10027	
TAPI Client	TAPI Gateway	10026	
VoIP H.323/H.225 VoIP Message Waiting VoIP H.245	Gatekeeper VoIP H.323/H.225 VoIP Message Waiting VoIP H.245	1720 49151 (Quicknet IP ext only) From 49152 to N ^b	1718, 1719

Preparing to Install AltWare OE

Client	Server	TCP	UDP
VoIP RTP	VoIP RTP		From 49152 to N ^b
Web Client	AltLink+ NetMeeting Chat plus VoIP ports described above	10025 1720	
AltGen IP Phone		10032	
Polycom			Between 2222-2242 and 1718/ 1719

- a. It is recommended that this be run only in an **intranet**.
- b. $N=49152+ (62*\text{number of boards})-1$

Software License Activation and Registration

Licensing

The licensing has two components — a system key which is a physical device shipped with every copy of OE 4.6. This hardware key is equipped with a DB-25 connector that is designed to be connected to the parallel printer port on the Altiserv system running OE 4.6 or later releases of AltWare. Optionally, a USB port version of the system key is available for use on systems ONLY equipped with a USB port. The USB system key is a special order item.

The second component is the license key. The following table lists all licenses used in Release 4.6.

Table 4. Release 4.6 License Summary

License	Type	Description/Notes
Altiserv Contact Center	Site	<ul style="list-style-type: none">• Required for ACC Product.• Workgroup-related options will be disabled if this license is not installed.
Altiview	Site	<ul style="list-style-type: none">• This license enables the Altiview client.• Altiview cannot connect to Altiserv without this license.• Altiview does not require session license.
Altiserv Web	Site	<ul style="list-style-type: none">• This license enables Altiserv Web function.
External Logger	Site	<ul style="list-style-type: none">• This license enables External Logger.• Altiserv will not send CDR/RTM data to External Logger if this license is not installed.
Call Router Advanced	Site	<ul style="list-style-type: none">• This license enables Call Router Advanced service.
30 Port IP	Site	<ul style="list-style-type: none">• This license enables the Triton 30-port VoIP option.• A maximum of two 30-port licenses per system.• License is the same for OE 4.5/4.5A/4.6/ACM 4.6.
Station/Business User	Seat	<ul style="list-style-type: none">• This license counts the total number of physical and IP phones configured in the system.• Included in Agent Seat license.

License	Type	Description/Notes
Agent Seat	Session	<ul style="list-style-type: none">• This license counts the number of concurrent, logged in agents to one or multiple workgroups. When a single agent logs in to one or more workgroups, one agent seat license is be used.• When the system does not have enough agent session licenses, it will reject any new workgroup login that requires a new agent seat license.• Requires Altiserv Contact Center license.
Altiserv Client Session	Session	<ul style="list-style-type: none">• This license enables a per concurrent connection of Altiserv.
Altiserv Supervisor Client Session	Session	<ul style="list-style-type: none">• This license enables a per concurrent connection of Altiserv Supervisor.

For step-by-step instructions on the licensing process, refer to page 3-28.

Registration

Licenses must be registered with Altigen for the system to function at full, licensed capacity. This registration includes both Altiserv systems information, as well as registering dealer, installer, and end user (customer) data for each Altigen system installed or upgraded to 4.6.

All software must be registered, including Altiserv Office products. No Altiserv software comes out of the factory pre-registered. **All license keys must be registered to the system key and without proper registration, the system will function with only 8 extension ports enabled.** To support the new licensing and registration requirement, all copies of OE 4.6 software (new) are shipped with a system key.

Once registered, system keys have license keys associated with them. All license keys are individually tracked and can only be registered to one system key. Individual license keys cannot be reactivated or installed on a different system once it has been registered the first time. The same license key cannot be associated with multiple systems even on the same customer site. Through registration, Altigen tracks all licenses shipped, which licenses have been installed and registered, and which license keys are associated with each system key.

Dealer Installation ID

As part of the installation and registration process, the Dealer is associated with the customer and the system installed. To facilitate this, a Dealer Installation ID will be provided to all dealers. This Dealer Installation ID will provide safe access to the registration system in the case where Dealers send their software and license keys direct to the customers to install. This Dealer Installation ID is a dealer-specific registration password and can be given to customers without compromising the secure access to our Authorized Dealer website and Tech Support site. The password ensures the dealer information is tracked along with customer information as part of the total system installation record. You cannot progress through registration without this number. Current passwords, such as the dealer website password, will not work for registration

Registration Methods

There are two ways a system can be registered. These are based on the ability of the Altiserv system being installed and registered to have Internet access.

Manual Online Registration

If there is no access to the Internet from the server being installed, the Installer must go to a PC with Internet access and manually register the software. A registration tool allows the Installer to manually enter three pieces of information as part of the registration process:

1. Dealer Installation ID
2. Customer information
3. System key and associated license keys

The registration tool will validate the information and assign the license keys to the system key as a part of this online registration process.

Completion of the final step of this process generates an activation file that will be used to populate the actual system with valid registration information.

WARNING! Once a license key is associated with a system key, it cannot be reassigned to another system.

Remember that **some** licenses for OE 4.6 are specific for that release. For upgrades, some 4.5 licenses must be converted to 4.6 in order to work with AltWare.

Upgrades

For step-by-step instructions on the manual online registration process, refer to page 3-37.

AltiServ Online Registration

The second method for registering AltiWare OE, Seat licenses and optional software features can be accomplished during installation of the system. To accomplish this, an online connection is needed to the AltiServ system at the time of registration. This online registration tool automatically populates the license keys and system keys in the proper fields of installed software on the AltiServ Office systems. This tool also requires the Installer to register the three pieces of information tracked on all system:

1. Dealer Installation ID
2. Customer information
3. System key and associated license keys

Completion of the final step of this process generates an activation file that will be used to populate the actual system with valid registration information.

WARNING! Once a license key is associated with a system key, it cannot be reassigned to another system.

Remember that **some** licenses for OE 4.6 are specific for that release. For upgrades, some 4.5 licenses must be converted to 4.6 in order to work with AltiWare.

For step-by-step instructions on the AltiServ online registration process, refer to page 3-28.

Note: Internet Explorer 5.0 (or higher) is required for online registration.

Upgrades

The AltiGen upgrade process is designed to ensure that the proper compatible seat licenses are provided with upgrade software ordered. Other optional software, such as AltiAgent and AltiSupervisor, must also be upgraded to be compatible with 4.6 (4.6 compatible licenses).

Upgrading from OE 4.0/4.0A to OE 4.6

- No OE 4.0/4.0A licenses are supported.

- After upgrade, all extensions belonging to workgroup(s) will be set as agents and be placed in the logout state.
- User must register new licenses while installing OE 4.6.

Upgrading from OE 4.5/4.5A to OE 4.6

- All OE 4.5/4.5A licenses will be carried over except for obsolete licenses (Contact Advantage, Session), which will be removed during the upgrade process to OE 4.6.
- Registration is required for the upgrade.
- If OE 4.5 Contact Advantage license is installed prior to the upgrade, the following licenses will be granted:
 - 10 Agent Seat
 - 10 AltAgent Client Session
 - 1 AltSupervisor Client Session
 - 1 AltView Site License
 - AltServ Contact Center license
- After upgrade, all extensions belonging to workgroup(s) will be set as agents and be placed in the logout state.
- The package will not include a system key.

For step-by-step instructions on the upgrade process, refer to page 3-17.

Lost Licenses

AltGen views a registered license key as the right for the system registered under to have access to the feature. If a license key or system key is lost, it is the responsibility of the party who purchased the item. **The policy for replacing any lost software licenses or system keys is to repurchase the software.**

New Installation

Before New Installation

Note: Triton T1 Rev A1/A2 or VoIP Rev A1/A2 boards are not supported in OE 4.6. These boards must be replaced with Rev A3 or later boards.

Before you begin, have the following at hand:

- System Key
- The 20-digit software license key (located on the End User License Agreement)
- The system home area code
- The extension length

Note: The extension length, which is from 3–6 digits, is the number of digits for all extension numbers. All extensions in the AltiServ configuration must be the same length.

You cannot change the extension length once the first extension is configured, which is something you do later running the AltiWare Setup. To change the extension after extensions are configured requires reconfiguring the entire system or deleting all the extensions and groups already configured.

- Internet Explorer 5.0 or higher (for online registration)

To Begin New Installation

To install AltiWare OE:

1. Make sure you have prepared for installation as described beginning on page 3-2.
2. Install the System Key on the parallel or USB port.

Caution: **Do not connect the system key to any AltiGen board as damage may occur to the board or the system key.**

3. Login to Windows NT or Windows 2000 as a domain or local user account that has local administrator privileges.

If your machine is a stand-alone server, you need to login as a local administrator account.

Note: If you plan to run Exchange Integration, you must have domain administrator rights.


4. Insert the AltWare OE CD-ROM into the CD-ROM drive.
5. Select and read the Readme.txt file.
6. After reading the Readme.txt file, click on **SETUP.EXE** in the AltWare OE folder.
7. At the Welcome page window, exit all Windows programs before continuing with the setup, then click **Next**.



8. Setup will retrieve logon information to determine if the user has corresponding privilege.
9. Setup will retrieve system key and install its driver, if applicable. If the system key is not available, you may still continue with setup.

To Begin New Installation


However, you cannot perform the license registration process (to activate your licenses) without the system key.

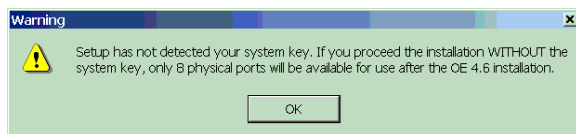


10. Setup will check AltiGen boards on your system.

Note: Setup will terminate if T1 Rev. A1/A2 or VoIP Rev. A1/A2 boards are found. These boards are not supported.

11. Setup will create a user account for AltiWare services. AltiGen recommends that you do not change the default password. If you still wish to change this, you may enter a password (no longer than 14 characters) for this account and click **Next**.

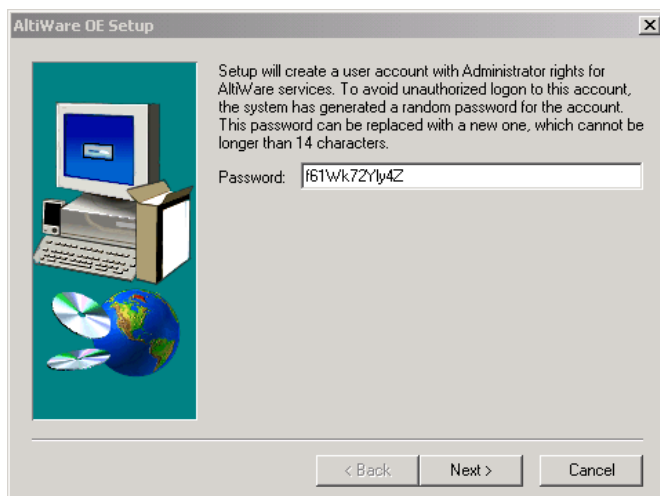


12. Setup is creating the user account.
13. Setup will install AltiWare OE into a destination folder. Click **Next** to install to the folder, or click **Browse** to install to a different folder.

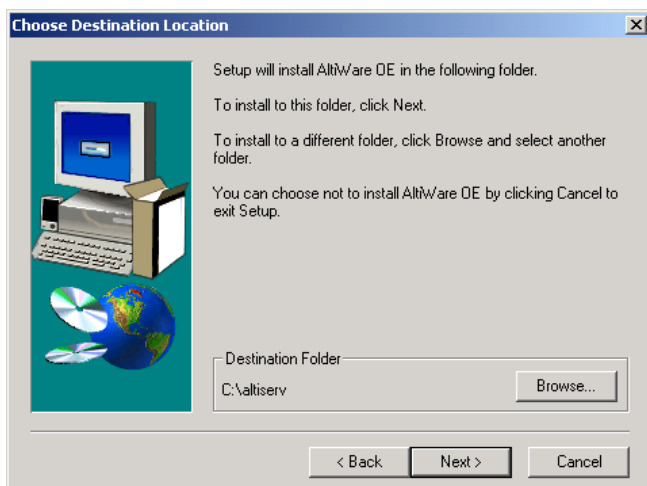


14. Setup will use the following disk drives as noted for PostOffice, AltiDB and AltiDB Backup or you may select another local drive.

Note: It is recommended that the local drive used should have at least 2GB of free space for PostOffice and 500MB each for AltiDB and AltiDB Backup.

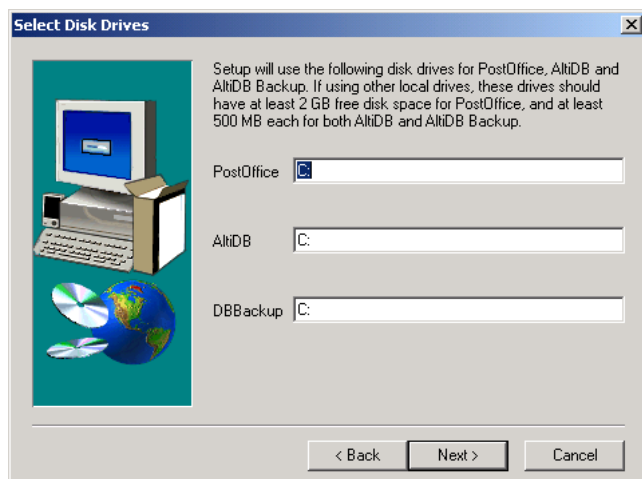


To Begin New Installation

15. Setup allows you to select the components you wish to install. By default, all components are checked, and it is recommended that you do not uncheck any items.

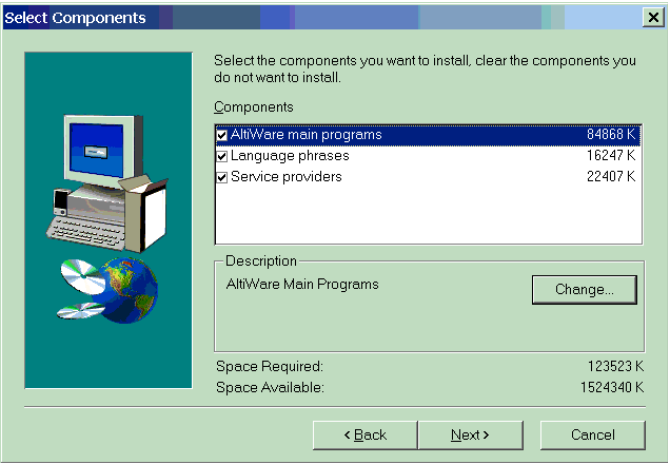

16. Click **Next** to have Setup begin copying the program files.

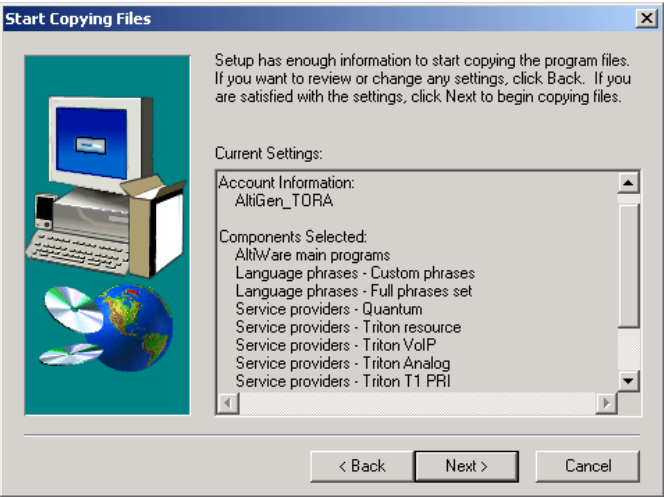


17. Setup will perform the following:

- Install Microsoft Data Access Components
- Install AltWare Services
- Register AltWare COM components
- Create program folder and icons
- Upgrade AltWare databases


18. Setup Window will prompt for the **Country**, **System Home Area Code** and **Extension Length**. When finished, click **OK**.

Note: Once the **Extension Length** is set and you click **OK**, you cannot change the extension length after this setup unless you re-configure the entire system or delete all the extensions already configured.

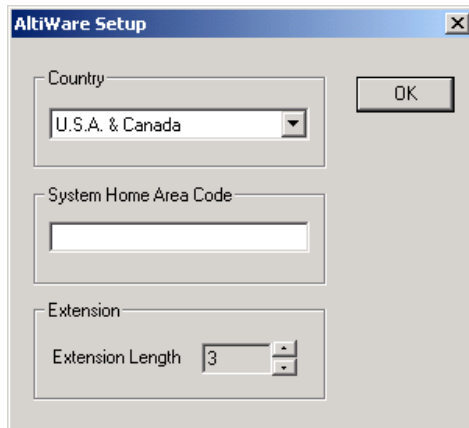


19. Setup is almost complete. Make sure the MVIP cable connections and terminator setting are correct, then click **Finish**.

To Begin New Installation

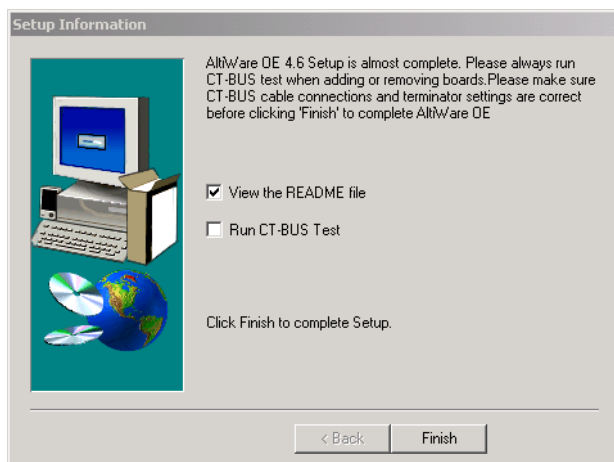

20. Setup is complete. Reboot the system to finish the installation process

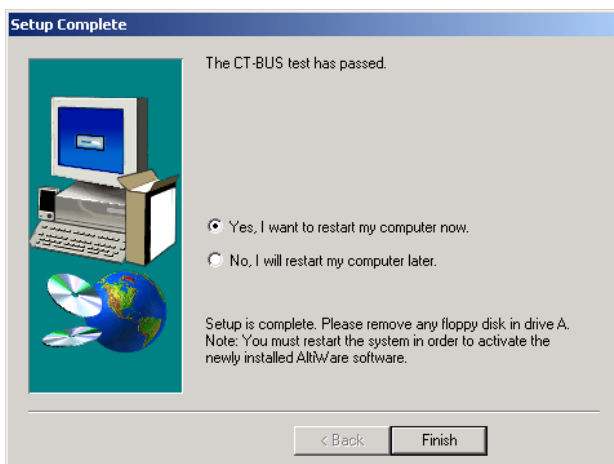

21. **(Recommended)** After rebooting, run the MVIP test program from Start>AltWare>AltWare Tools>MVIP test.
22. Use AltAdmin to register your licenses. Follow the steps for “Online License Registration Procedures” on page 28. **If you do not register and activate your licenses, only eight (8) physical ports will be available for use.**

Upgrading AltiWare OE

Note: Triton T1 Rev A1/A2 or VoIP Rev A1/A2 boards are not supported in OE 4.6. These boards must be replaced with Rev A3 or later boards.

Before Upgrade

Before you begin, you'll need to have the 20-digit software license key located on the back of the End User License Agreement and a System Key.

Backup Database

OE 4.6 supports direct upgrade from OE 4.0, OE 4.0A, OE 4.5 and OE 4.5A. If your system is running an earlier release, you first upgrade to OE 4.0 or later.

If AltiWare 4.X is installed, there is *no need to uninstall it* before installing AltiWare OE 4.6. If AltiWare 2.x is installed, first upgrade to 4.0, then upgrade to 4.6.

Back up all the configuration information to a different location, such as the network drive. (You can do this by using the backup utility OR by copying the contents of the `\altiserv\db\`, `\altiserv\Phrases\LangCustom`, and `\postoffice\` folders to a backup location.). To uninstall an earlier version of AltiWare, click the **Uninstall** icon in the AltiWare program group. The uninstall does not remove the AltiWare configuration and messages.

For addressing firewall considerations, refer to “Firewall Considerations” on page 3-3.

IP Extension Protocol Change

When upgrading from release 4.0, all IP extensions using static IP addressing will be defaulted to the G.711 codec. To change the codec of any IP extension, see “Setting Up IP Extensions” on page 16-1.

VoIP Board Upgrade

When you upgrade to OE 4.6 from AltiWare OE 4.0, all 8-port VoIP boards are automatically upgraded to 12-port boards. With a 30-port upgrade license, the 12-port board can be upgraded to a 30-port board (one board upgrade per license). The original ports retain their configurations, but you must configure the new ports if you want to use them.

Shutting Down the AltiGen Switching Service

Before installing this upgrade on the AltiServ system, please make sure that the AltiAdmin application and the AltiGen Switching Service are not running.

*You can shutdown the AltiGen Switching Service Com Server and the AltiAdmin application at the same time by running AltiAdmin, logging in and selecting **Services → Shutdown Switching**.*

Note: Stopping the **AltiGen Switching Service COM Server** will automatically stop all the auxiliary services.

These are the Windows 2000 / NT services distributed with AltiWare:

- AltiGen Switching Service COM Server
- AltiGen Messaging Service COM Server
- AltiGen SMTP Service COM Server
- AltiGen POP3 Service COM Server
- AltiGen Exchange Integration Service COM Server
- AltiGen Backup/Restore Service
- AltiGen Keep Up Service
- AltiGen Internal Logger Server

Shutting Down Switching as a Windows 2000 / NT Service

Optionally, if you're not running AltiAdmin, you can shut down the services using Windows 2000 / NT Services.

1. Do one of the following:
 - On the *Windows 2000* desktop, select **Start → Programs → Administrative Tools → Services**.

- On the *NT* desktop, Open the **Control Panel** and double-click **Services**.
2. Highlight **AltiGen Switching Service COM Server**.
 3. Stop the service.

If the status column is empty, proceed to the next step. If the status column says **Started**, double-click the listing to open the Properties dialog box, then click the **Stop** button followed by the **OK** button to close the dialog.

To Begin Upgrade

To complete the upgrade:

1. Make sure you have prepared for installation as described beginning on page 3-2.
2. Install the System Key on the parallel or USB port.


Caution: Do not connect the system key to any AltiGen board as damage may occur to the board or the system key.

3. Login to Windows NT or Windows 2000 as a domain or local user account that has local administrator privileges.

If your machine is a stand-alone server, you need to login as a local administrator account.


Note: If you plan to run Exchange Integration, you must have domain administrator rights.

4. Insert the AltiWare OE CD-ROM into the CD-ROM drive.
5. Select and read the Readme.txt file.
6. After reading the Readme.txt file, click on **SETUP.EXE** in the AltiWare OE folder.
7. At the Welcome page window, exit all Windows programs before continuing with the setup, then click **Next**.

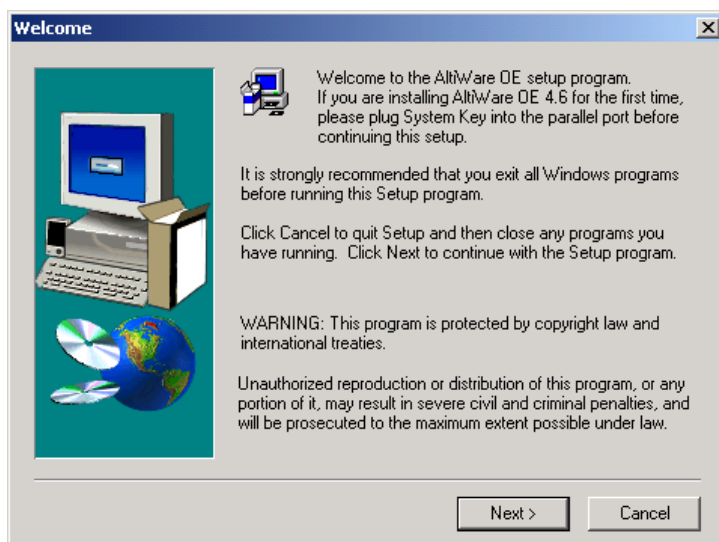

8. Setup will retrieve logon information to determine if the user has corresponding privilege.
9. Setup will retrieve system key and install its driver, if applicable.

WARNING! If the system key is not available, Setup will terminate.

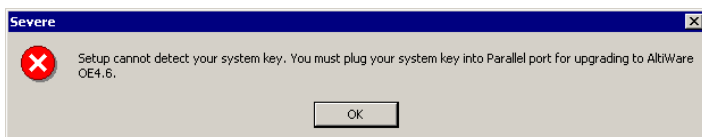

10. Setup will check AltiGen boards on your system.


Note: Setup will terminate if T1 Rev. A1/A2 or VoIP Rev. A1/A2 boards are found. These boards are not supported.

11. Setup will check existing licenses to see if they are registered or partially registered. Depending on these conditions, Setup will proceed to either **Sub-step 1A. — No registered Licenses** or **Sub-step 1B. — Partially Activated Licenses**.

Note: OE 4.0 license keys are not compatible with OE 4.6. You need to register all OE 4.6 license keys through registration process.


Sub-step 1A:

No Registered Licenses - If no licenses are registered, you will see the following Installation Options window.

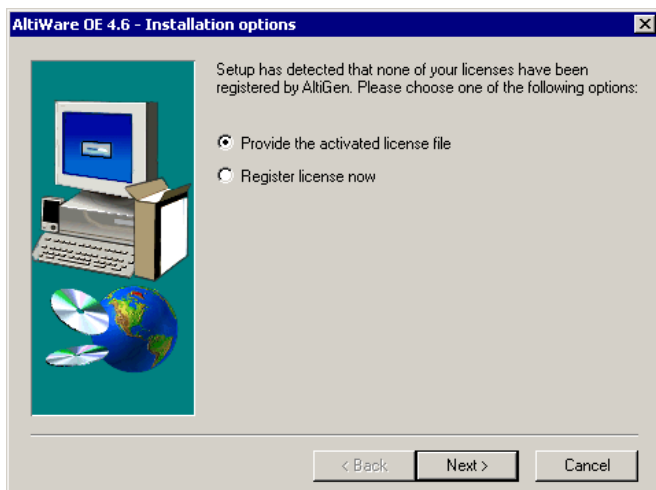

You may choose the following options:


- a) **Provide the activated license file** - if you select this option and click **Next**, enter the path of the “exctl” file in the License Path page, then click **Next** to proceed to Step 12.

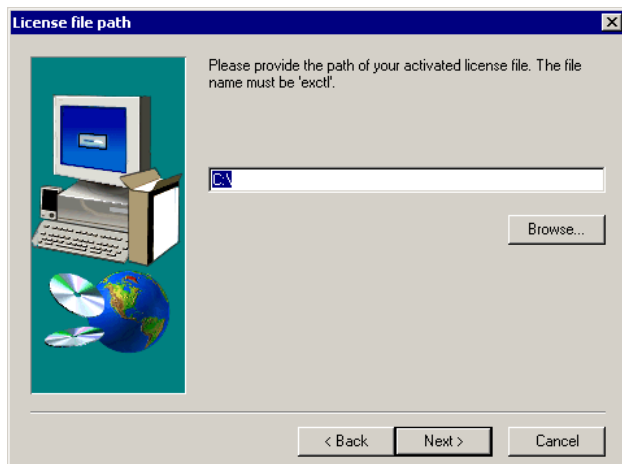

- b) **Register license now** - if you select this option and click **Next**, you will automatically launch AltWare's License Information window. Click Online Register to activate your license(s) and follow the steps for online registration on page 3-31.

Sub-Step 1B:


Partial Registered Licenses - If some of your existing licenses are registered, you will see the following Installation Options window.

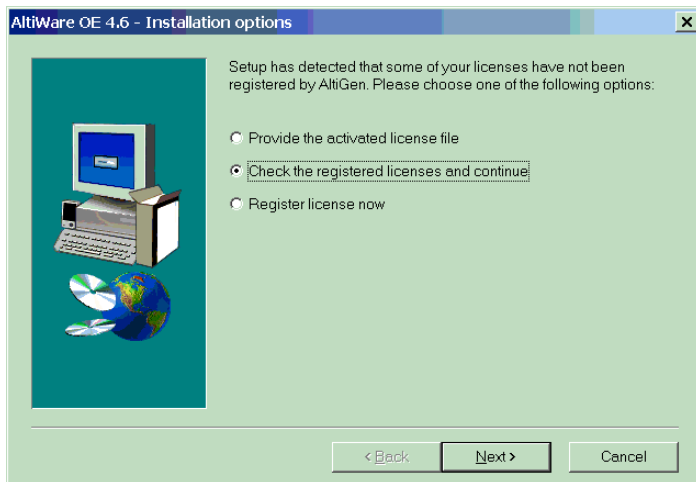

You may choose the following options:


- a) **Provide the activated license file** - If you select this option and click **Next**, enter the path of the "exctl" file in the License Path page, then click **Next** to proceed to Step 12.
- b) **Check the register licenses and continue** - if you select this option and click **Next**, you can view your existing licenses and their activation status in the Information page, then continue upgrading with activating these licenses by following the steps for online registration on page 3-31.

Caution: If you do not register all your licenses and continue the upgrade, some features may not function after the upgrade is complete.

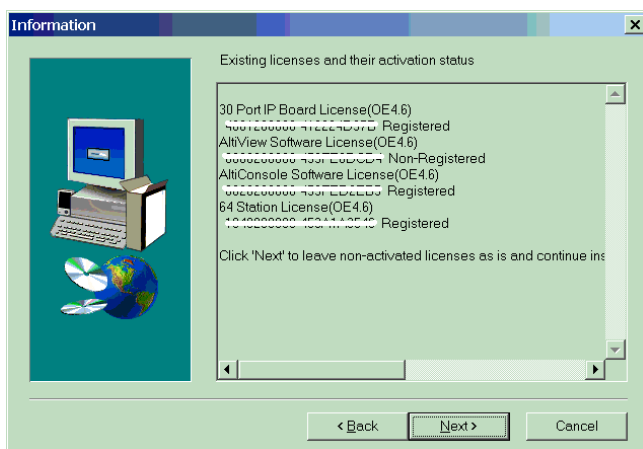


- c) **Activate license now** - if you select this option and click Next, you will automatically launch AltWare's License Information window. Click Online Register to activate your license(s) and follow the steps for online registration on page 3-31.
12. Setup will check service status.
13. Setup will create a user account for AltWare services. AltGen recommends that you do not change the default password. If you still wish to change this, you may enter a password (no longer than 14 characters) for this account and click **Next**.

To Begin Upgrade

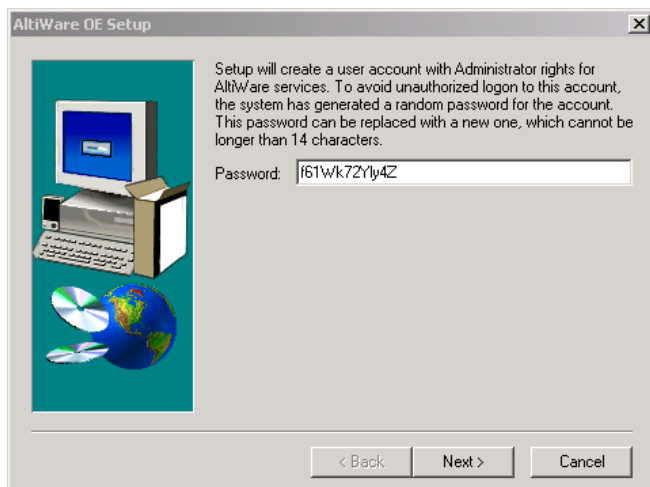


14. Setup is creating the user account.
15. Setup will use the following disk drives as noted for AltiDB and AltiDB Backup or you may select another local drive.


Note: It is recommended that the local drive used should have at least 500MB of free space each for AltiDB and AltiDB Backup.

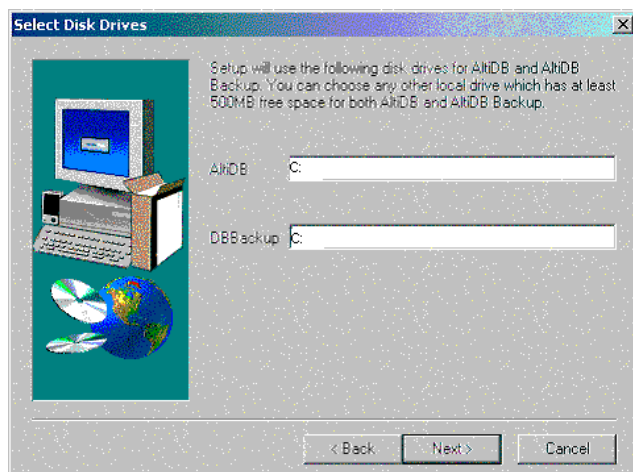

16. Setup allows you to select the components you wish to install. By default, all components are checked, and it is recommended that you do not uncheck any items.

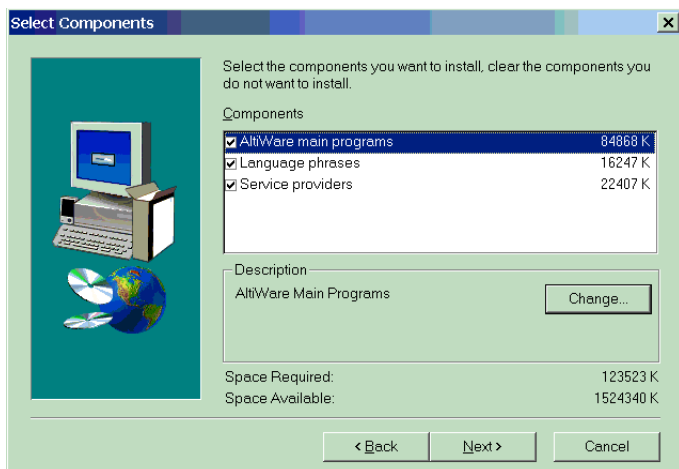

17. Setup will begin copying the program files.

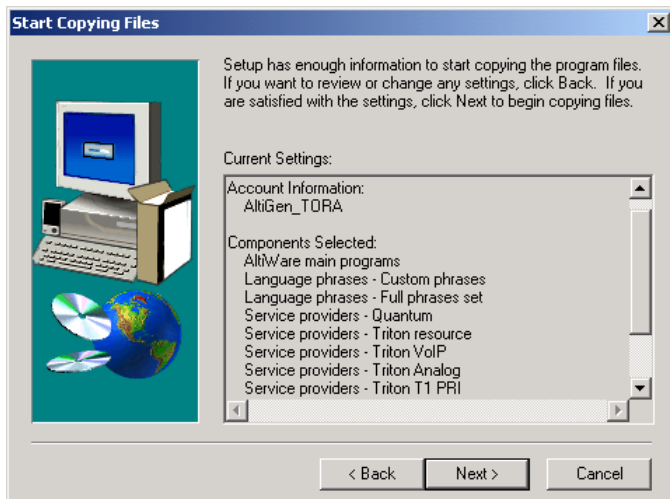


To Begin Upgrade

18. Setup will perform the following:


- Install Microsoft Data Access Components
- Install AltiWare Services
- Register AltiWare COM components
- Create program folder and icons
- Upgrade AltiWare databases

19. Setup is almost complete. Setup will suggest running MVIP bus test before rebooting.

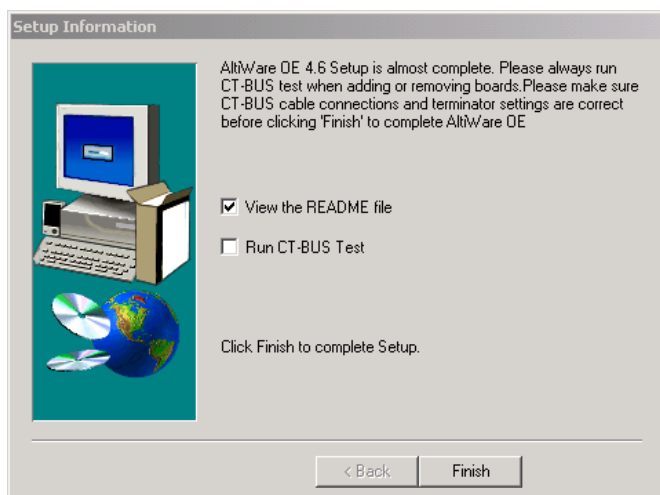

If the MVIP bus test option is checked, the test will begin when you click **Finish**. You can see the pass or fail information in the MVIP Test Tool test log box.

20. Setup will complete, whether or not the MVIP test passes, if Setup cannot get the results of the MVIP test, or if the MVIP test is skipped. You can restart your computer now or later, then click **Finish** to end Setup.

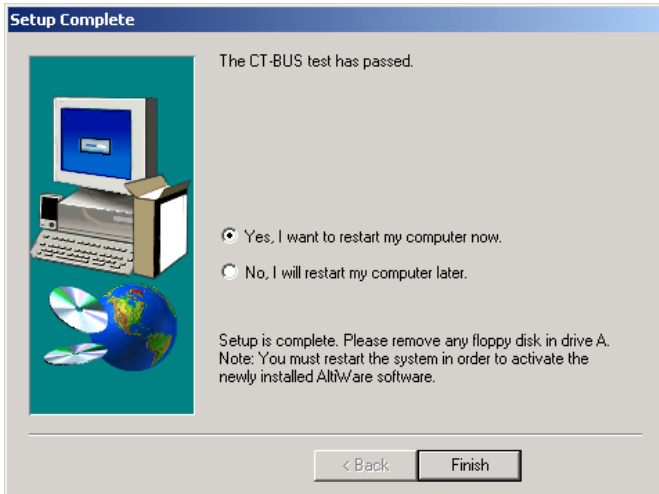

21. If the MVIP test fails, it is recommended that you address the MVIP failure before you reboot the system. You can manually run the MVIP test program through Start>AltWare>AltWare Tools>MVIP test.
22. Reboot the system to finish the upgrade process.

License Activation and Registration Process

In AltiWare OE, a software license allows you to increase the capacity for the following:


- **Physical and IP extensions.** A Quantum board can provide 4, 8, or 12 extensions (depending on the type of Quantum board) and the Triton Analog Station board provides 12 extensions. You may increase the number of software-supported extensions up to the maximum available by adding station licenses. Each license you enter adds to the previous total.
- **Sessions.** AltiWare OE includes a single session license. You may increase the number of concurrent client sessions by purchasing additional session licenses packages. Each license you enter adds to the previous total.

In AltiWare OE 4.6, the **AltiContact Manager license** allows you to enable this add-on option for call center features. (For more information on the call center option, refer to the *AltiContact Manager Administration Manual* and *User Guide* shipped with the option package.)

Online License Registration Procedures


To activate any license through **online registration**, follow these steps:

1. From the **About AltWare** window in AltAdmin, click on the **License Information** button.

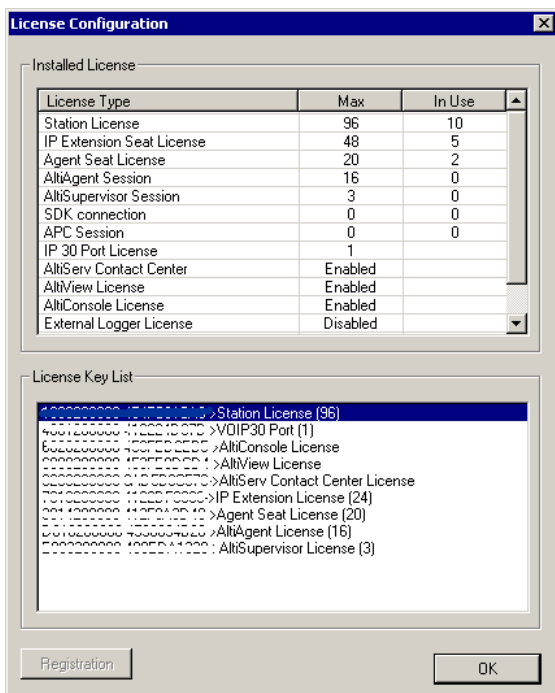

2. Click the **Registration** button to open a new **License Information** window.


To Begin Upgrade

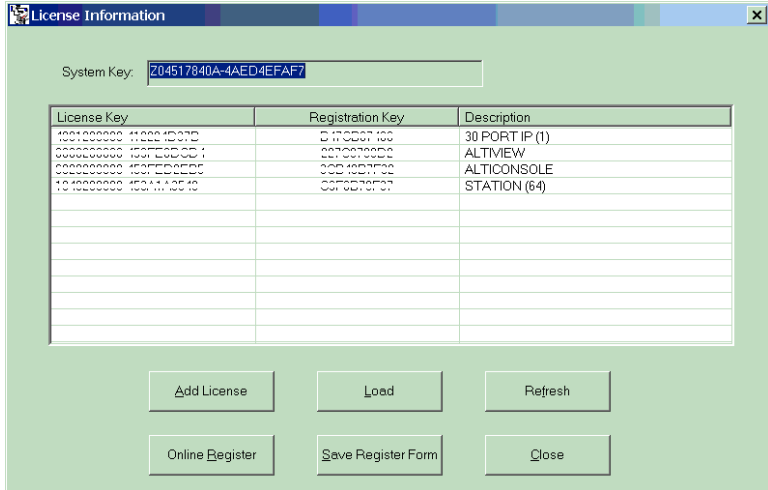

3. **<Optional** - you may add licenses here OR during online registration. Skip to **Step 5** if you wish to add licenses later.>


Click **Add License** to add the license keys that you wish to add and activate. (License keys are located on the End User License Agreement sent with every License purchase.)

4. In the **License Key** field of the **Add License** pop-up window, enter the license key and click **OK**.

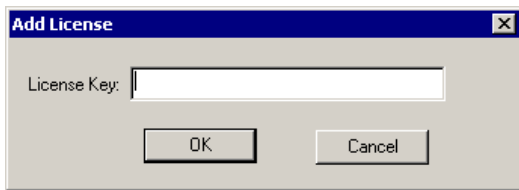


Continue adding licenses with the **Add License** button until all licenses are entered.

5. Select the **Online Register** button. This automatically launches the following web page to start online registration.

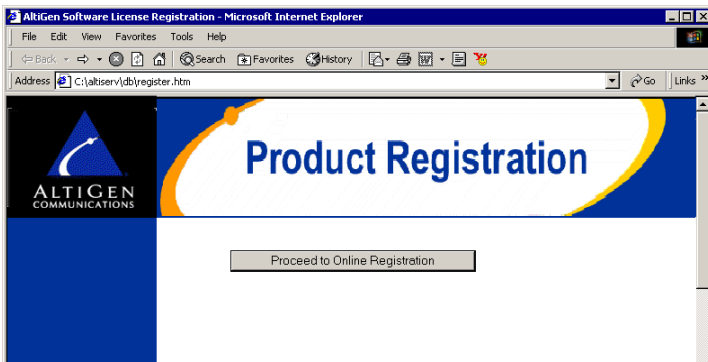

6. Click the **Proceed to Online Registration** button.

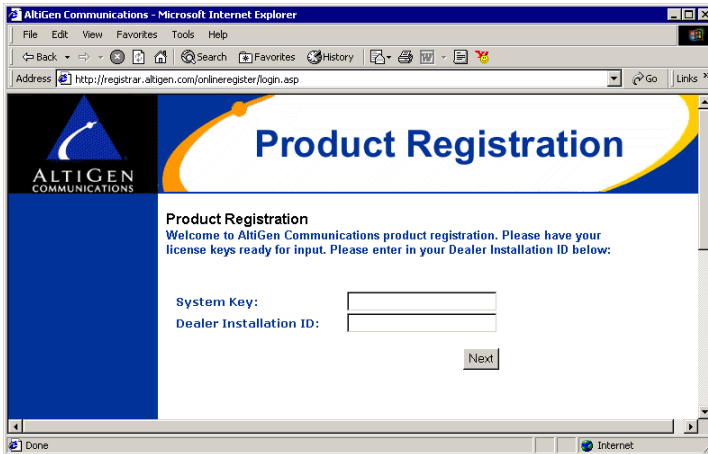

7. The next web page allows for inputting System and Dealer Installation ID. The **System Key** field is automatically loaded. (This information is located on the End User License Agreement). In the **Dealer Installation ID** field, enter the ID number assigned to your Dealer. This information can be obtained by contacting either your local authorized Altigen Dealer or Altigen Technical Support.

Click **Next** when finished.
8. The next web page allows for inputting of Customer and Installer information.

To Begin Upgrade

The screenshot shows a web browser window titled "Altigen Communications - Microsoft Internet Explorer". The address bar displays a URL: <http://registr.ar.altigen.com/online/register/EndUserContact.asp?DongleID=204501E240-32EADCE5378DealerPublicID=PUB55678Deale>. The page features the Altigen Communications logo on the left and a large blue header with the text "Product Registration". Below the header, a message says "Please Fill in the Customer and Installer Information:". The form is divided into two main sections: "Customer Information" and "Dealer Information". The "Customer Information" section includes fields for Company Name, Address, City, State, Zip, Company Phone Number, Contact Person, and Email of Contact Person. The "Dealer Information" section includes fields for Dealer Name, Installer Name, Installer Company, and Installer Email Address. A red asterisk indicates required fields. A "Next" button is located at the bottom right of the form. A status bar at the bottom shows "Done" and "Internet".

Product Registration

Please Fill in the Customer and Installer Information:

Customer Information

Company Name: * ABC Corporation

Address: * 427 Evergreen Terrace

City: * Springfield

State: * IL

Zip: * 11111

Company Phone Number: * 800 123 4567

Contact Person: * John Smith

Email of Contact Person: * jsmith@hotmail.com

Dealer Information

Dealer Name: * Randstad (TDSI)

Installer Information

Installer Name: * Sean Li

Installer Company: * Altigen


Installer Email Address: * sli@altigen.com

* Indicates a Required Field

Next

For the Customer Information and Installer Information sections, fill in all fields (required) and click **Next** when finished.

9. The next web page allows for entering of new License Keys or for adding any additional licenses.

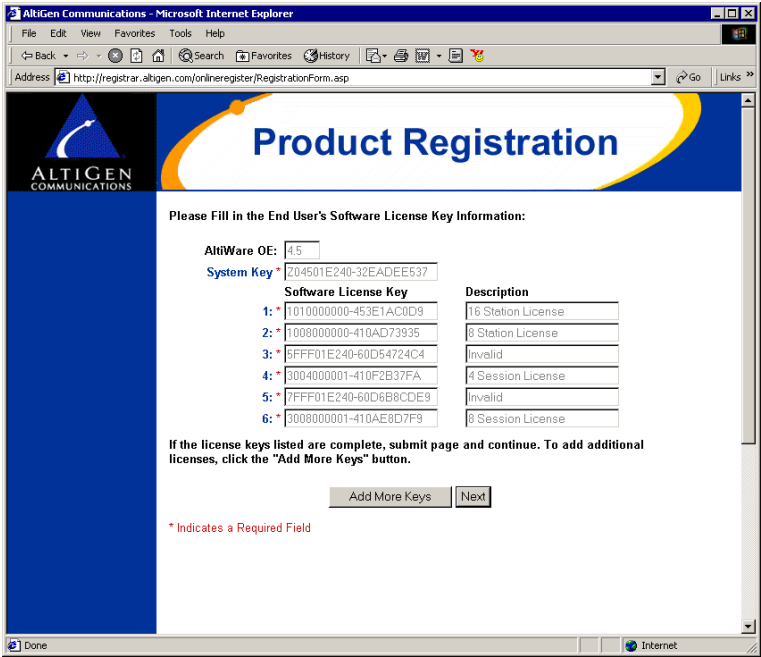


Click **Add More Keys** to add more licenses, or click **Next** to register these licenses.

Note: All keys are case sensitive.

10. The next web page displays the licenses that have been activated and are about to be registered.

To Begin Upgrade

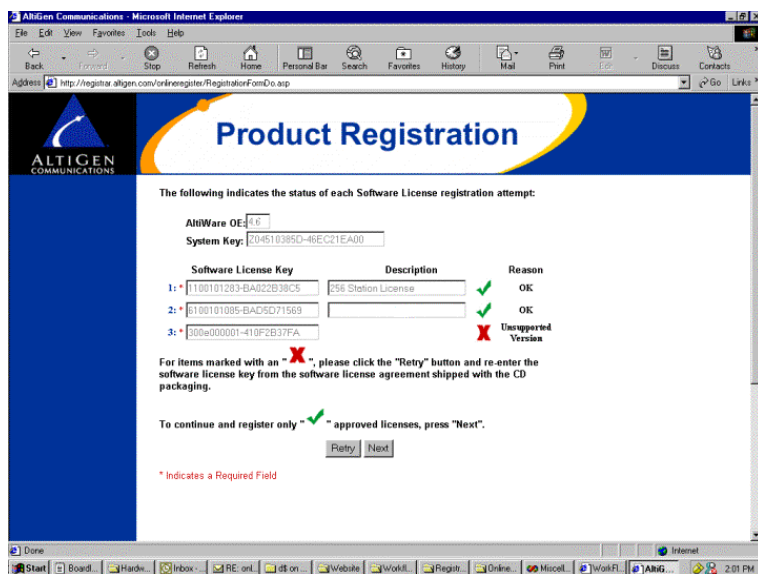

- Approved licenses are indicated by a green check mark and will display a description next to the approved license.
- Invalid licenses are indicated by a red X mark.


Possible reasons for “invalid” licenses include:

- a) obsolete licenses (such as unsupported 4.X licenses)
- b) not enough digits in license number
- c) wrong license number
- d) license number registered to another system key


You may attempt up to three retries to validate licenses. If you click Retry on the fourth attempt, the Web Registration will not continue and you must begin the Web Registration process again from Step 5.

Click **Next** to continue.

11. The next web page displays the final results of the license activation to show which licenses have been validated. Click **Submit** to continue.

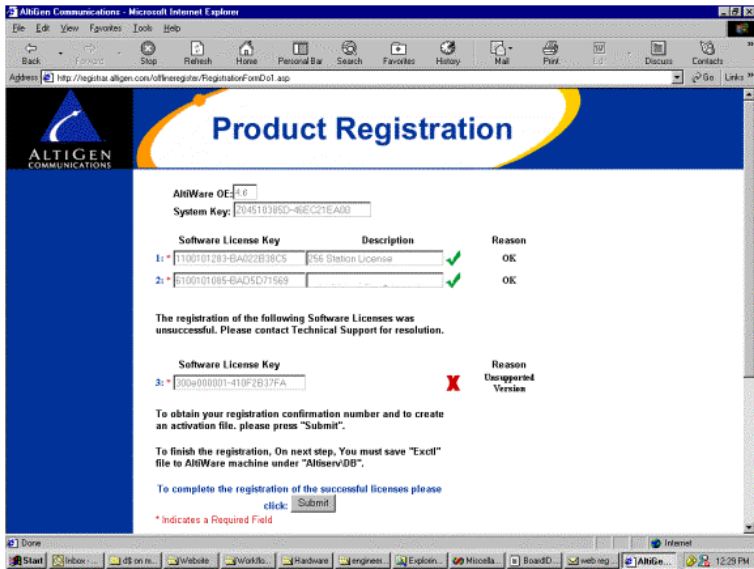


12. The next web page continues the registration by initiating a product registry program.

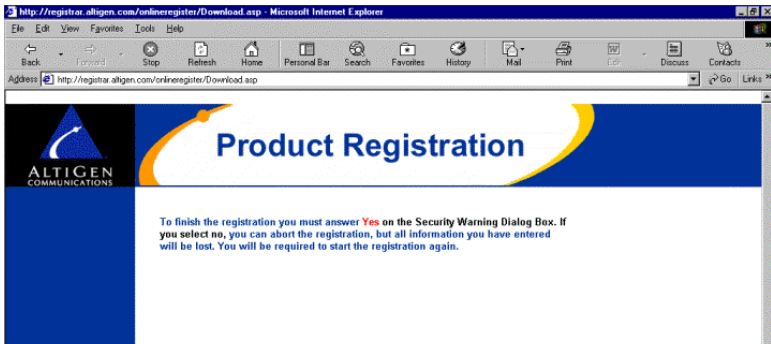


At the Security Warning prompt, click **Yes** to install and run the program. If you click No or close this box, the Web Registration will not continue and you must begin the Web Registration process again from Step 5.

To Begin Upgrade

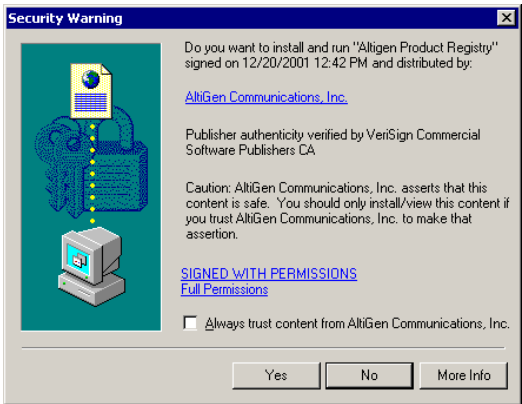

Setup will create or update an “exctl” file in \altiserv\db\.


13. The final web page displays a verification notice and number, confirming that an email of the registration process results has been sent to the customer and installer. Save the email for future reference. You may close this web page.

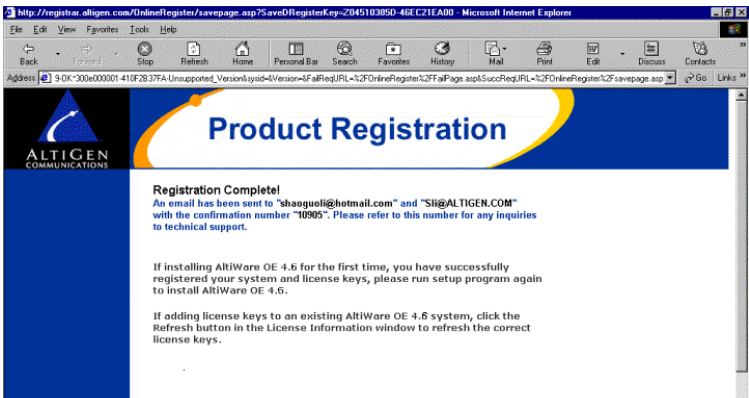

14. Return to the AltWare system. In the **License Information** window, click the **Refresh** button.



The licenses that have just been validated will appear in the license field, along with an accompanying **Registration Key** number and **Description** of the license.

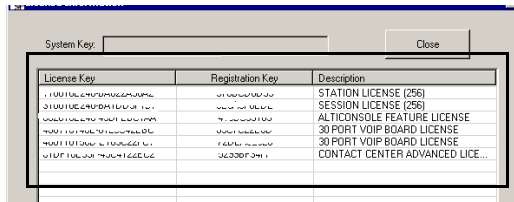


15. Close the License Info window to finish the license registration.


Manual Online License Registration Procedure

To manually register any license through **online registration**, (where the local Altiserv system has no Internet connection), follow these steps:

1. From the **About AltWare** window in the local AltAdmin, click on the **License Information** button.

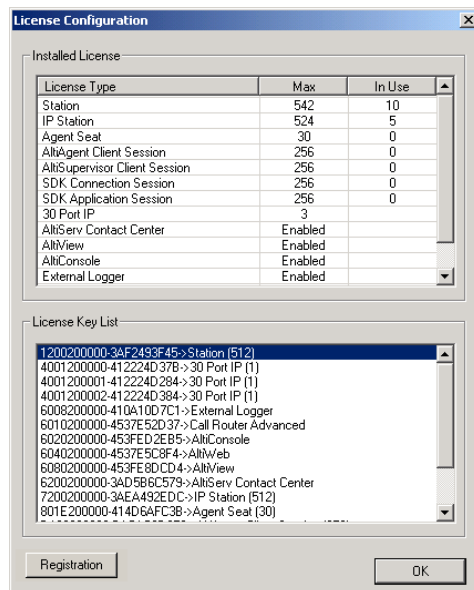


2. Click the **Registration** button to open a new **License Information** window.

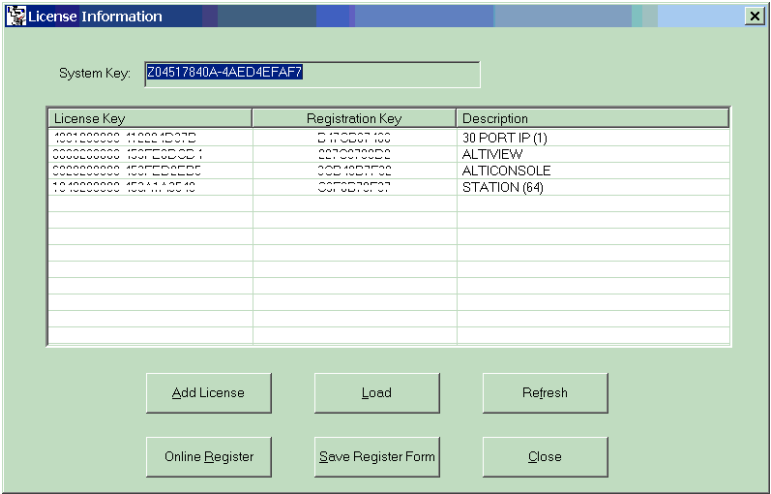

3. *<Optional - you may add licenses here OR during online registration. Skip to Step 5 if you wish to add licenses later.>*

Click **Add License** to add the license keys that you wish to add and activate. (License keys are located on the End User License Agreement sent with every License purchase.)

4. In the **License Key** field of the **Add License** pop-up window, enter the license key and click **OK**.

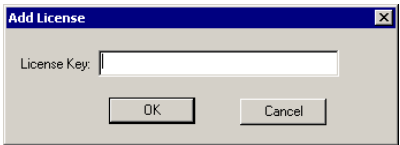


Continue adding licenses with the **Add License** button until all licenses are entered.

5. Click **Save Register Form** to save registration information as a **Register.htm** file and copy to a floppy disk, or a shared file location that can be accessed by the destination system.
6. From any PC with an Internet connection, open the **Register.htm** file.

7. On the AltiGen Software License Registration web page, click the **Proceed to Online Registration**.



8. The next web page allows for inputting System and Dealer Installation ID. In the **System Key** field, enter your System Key (located on the End User License Agreement). In the **Dealer Installation ID** field, enter the ID number assigned to your Dealer. This information can be obtained by contacting either your local authorized AltiGen Dealer or AltiGen Technical Support.

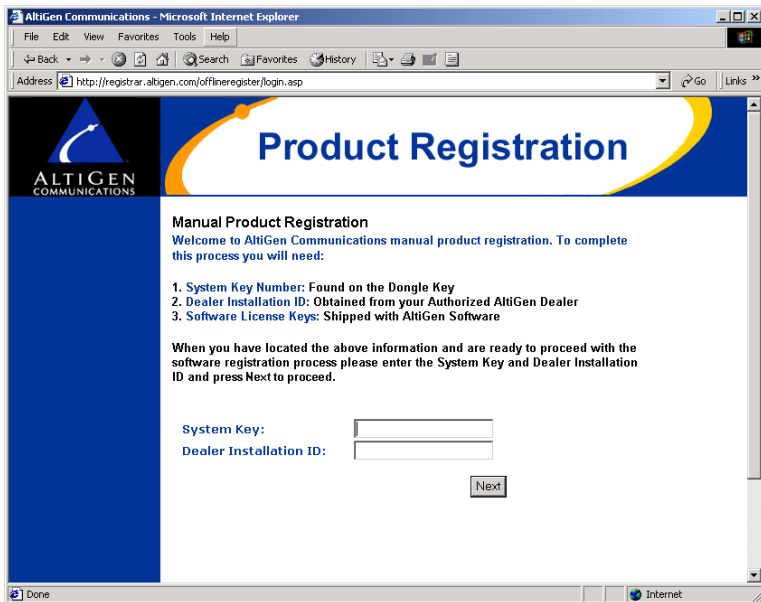

Click **Next** when finished.

To Begin Upgrade

9. The next web page allows for inputting of Customer and Installer information.

The screenshot shows a web browser window titled "Altigen Communications - Microsoft Internet Explorer". The address bar displays a URL: <http://registrar.altigen.com/online/register/EndUserContact.asp?GoogleID=204501E240-32EAD5E5376DealerPublicID=PU855676Deale>. The page features the Altigen Communications logo on the left and a large blue header with the text "Product Registration". Below the header, a section titled "Please Fill in the Customer and Installer Information:" contains several form fields. The fields are organized into four sections: Customer Information, Dealer Information, Installer Information, and a final section for the Next button. The Customer Information section includes fields for Company Name, Address, City, State, Zip, and Company Phone Number. The Dealer Information section includes fields for Dealer Name, Contact Person, and Email of Contact Person. The Installer Information section includes fields for Installer Name, Installer Company, and Installer Email Address. A red asterisk indicates required fields. The browser window shows the status bar at the bottom with "Done" and "Internet" icons.

Product Registration

Please Fill in the Customer and Installer Information:

Customer Information

Company Name: * ABC Corporation

Address: * 427 Evergreen Terrace

City: * Springfield

State: * IL

Zip: * 11111

Company Phone Number: * 800 123 4567

Contact Person: * John Smith

Email of Contact Person: * jsmith@hotmail.com

Dealer Information

Dealer Name: * Randstad (TDSI)

Installer Information

Installer Name: * Sean Li

Installer Company: * Altigen

Installer Email Address: * sli@altigen.com

Next

* Indicates a Required Field

For the Customer Information and Installer Information sections, fill in all fields (required) and click **Next** when finished.

10. The next web page allows for entering of new License Keys or for adding any additional licenses.

Altigen Communications - Microsoft Internet Explorer

Address: http://registrar.altigen.com/online/register/RegistrationForm.asp

Product Registration

Please Fill in the End User's Software License Key Information:

AltWare OE: 4.6

System Key: 204501E240-32EADEE537

	Software License Key	Description
1: *	1010000000-453E1AC0D9	16 Station License
2: *	1008000000-410AD73935	8 Station License
3: *	5FFF01E240-60D54724C4	Invalid
4: *	3004000001-410F2B37FA	4 Session License
5: *	7FFF01E240-60D6B8CDE9	Invalid
6: *	3008000001-410AE8D7F9	8 Session License


If the license keys listed are complete, submit page and continue. To add additional licenses, click the "Add More Keys" button.

* Indicates a Required Field

- Click **Add More Keys** to add more licenses, or click **Next** to register these licenses.
11. The next web page displays the licenses that have been activated and are about to be registered.

3. Software Installation

To Begin Upgrade

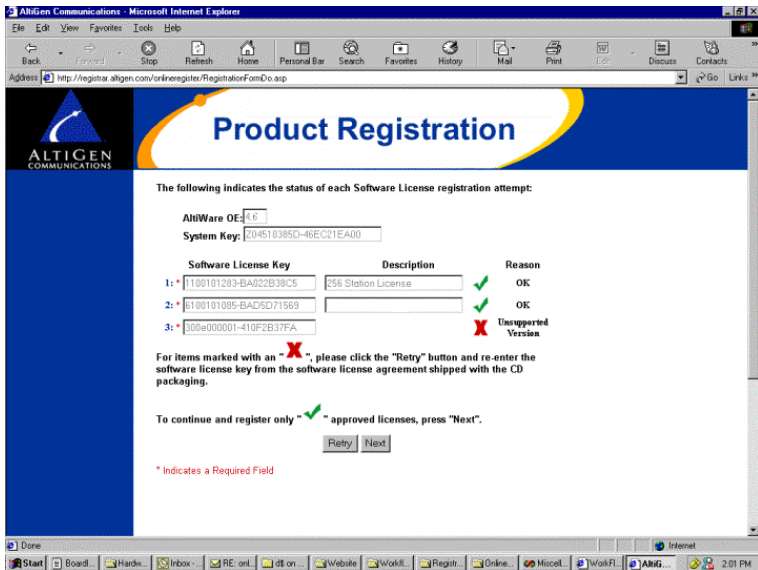

- Approved licenses are indicated by a green check mark and will display a description next to the approved license.
- Invalid licenses are indicated by a red X mark.


Possible reasons for “invalid” licenses include

- a) obsolete licenses (such as unsupported OE 4.X licenses)
- b) not enough digits in license number
- c) wrong license number
- d) license number registered to another system key


You may attempt up to three retries to validate licenses. If you click Retry on the fourth attempt, the Web Registration will not continue and you must begin the Web Registration process again from Step 5.

Click **Next** to continue.

12. The next web page displays the final results of the license activation to show which licenses have been validated. Click **Submit** to continue.

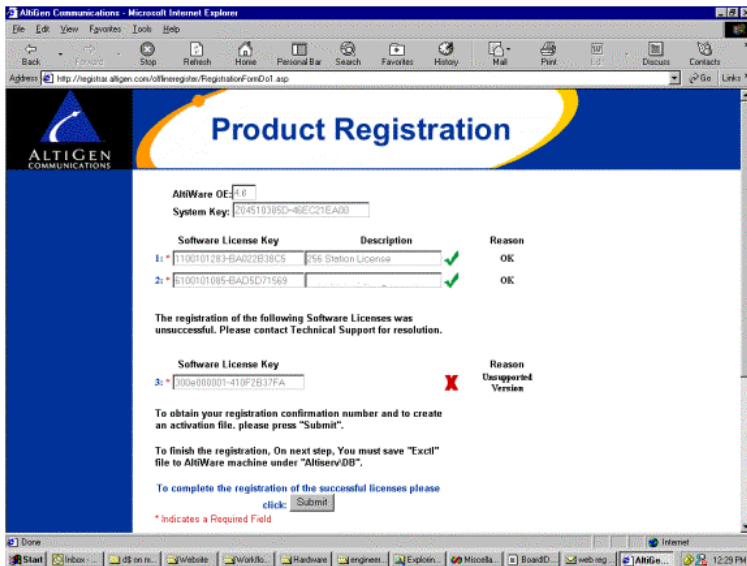

13. The next web page continues the registration by initiating a product registration program.
14. At the end of the Web Registration, save the **exct1** file to a floppy disk.

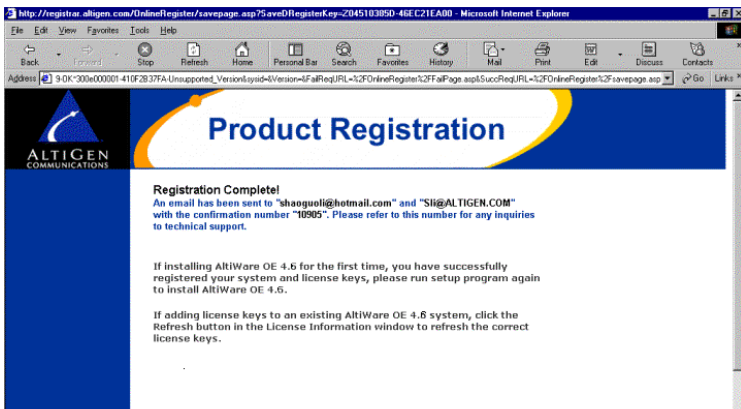

15. Return to the Altiserv machine. In the **License Information** window, click the **Load** button and to load the **exct1** file from floppy into the Altiserv system.

16. Click **Refresh** to update the **License Information** window. Any newly activated licenses through web registration will appear in the license field.

Offline Registration Procedures

To register licenses through the Web (without AltiAdmin), go to the following web URL: **<http://registrar.altigen.com/offlineregister/login.asp>**. Then follow the online registration process (page 3-38) beginning with **Step 6**.

Windows Emergency Repair Disk

After installing AltiWare, you should create the Windows Emergency Repair Disk, even if you have previously created a repair disk. This repair disk is needed to repair any corrupted Windows files.

- To create the disk on NT, choose **Run** from the Windows NT **Start** button and type **rdisk** at the prompt.
- For Windows 2000, use the **Accessories → System Tools → Backup** utility program and select **Create an Emergency Repair Disk** from the **Tools** menu.

Installing AltiAdmin on Remote Systems

AltiAdmin contains the **AltiWare Administrator** application that can be installed on any **Windows NT Server or Workstation 4.0 system with Service Pack 6a** (or higher), or **Windows 2000** and a network connection. *AltiAdmin does not support Windows 95/98.*

When you install AltiAdmin on a machine that is not an AltiServ server, it does not contain the switching, SMTP/POP3 server, messaging agent, AltiBackup, Exchange integration services that are included in the full AltiWare OE installation described above. Remote AltiAdmin *does not utilize* the System Data Management or Shutdown Switching Service functions on the AltiServ system.

AltiAdmin provides the ability to manage the AltiServ system from a remote client system on the LAN. If there is no firewall on the LAN where AltiServ resides, AltiAdmin can be installed and used to manage AltiServ over the Internet from a remote site as well.

To install AltiAdmin on a non-AltiServ PC for the first time:

1. Insert the AltiWare CD-ROM into the appropriate drive.
2. Run **SETUP.EXE** from the **AltiAdmin** folder.
3. Follow the instructions on the window.
4. To open AltiWare Administrator, refer to “Running AltiWare Administrator” on page 3-45.

Running AltiWare Administrator

To run AltiWare Administrator:

1. Choose **Programs** from the Windows NT **Start** button and click on **AltiWare Administrator** in the AltiWare or AltiAdmin folder.
2. If you are opening **AltiAdmin**, enter the server name when prompted. If you are logging into AltiAdmin at a remote site to administer AltiServ over the Internet, enter the **IP address** (e.g. 100.100.100.100) of the AltiServ system when prompted for the server name. Multiple AltiServ systems can be managed at a single location with an AltiAdmin open for each AltiServ system.
3. Login by Selecting the **Services** → **Login** or clicking the **Login** icon—the left-most icon in the Toolbar. The Login Password window prompts you to enter the password and click **OK**. The system default password is “**22222**.” **You should change the system password as soon as possible to ensure system security.** For more information, refer to “Logging in for the First Time” on page 4-1.



Once you are logged in, you can configure the AltiServ system.

Shutting Down AltiServ when Changing or Adding Hardware

When you add or change hardware, follow these procedures to back up and shut down the AltiServ system. The best time to do this is during off hours—the system should be idle.

1. Using the AltAdmin application System Data Management function, backup the Altiserv data, messages, and custom files using the procedures in the chapter on ‘System Data Management.’
2. In AltAdmin, shutdown the Altigen Switching Service and exit AltAdmin, as described in “Shutting Down Switching as a Windows 2000 / NT Service” on page 3-18.
3. Shut down and power down the Windows 2000 / NT system using the standard Windows shutdown procedure.
4. After adding or removed hardware, it is recommended to run MVIP test from Start>AltWare>AltWare Tools>MVIP test.

Transferring the Altiserv to Another Server Chassis

If you transfer the Altiserv system to another platform—for example, to upgrade or expand your system or for other reasons—you need to backup the database, move the telephony boards, install the AltWare software, and restore the database to the new platform.

The new platform should have access via a LAN to the system to which you backed up the files from the old platform.

To transfer the system to another platform:

1. Back up the system files, then shut down and unplug the Altiserv system computer, following the steps listed in “Shutting Down Altiserv when Changing or Adding Hardware” on page 3-45.
2. Remove the computer cover, following the computer manual instructions.
3. Disconnect the MVIP internal data cable.
4. Label and disconnect the DB-25 to 50 pin Telco cable(s) from the board I/O connectors.
5. Remove the telephony board(s) from the original system.
6. Install the board(s) into the new system.
7. Install the system key to the parallel or USB port.
8. Install the AltWare OE software as described, beginning with “Preparing to Install AltWare OE” on page 3-2.
9. Restore the Altiserv system database as follows:

- a. Run AltAdmin and select **Services → System Data Management** to run the data management utility.
 - b. Click the **Restore** icon to open a dialog that allows you to choose files to restore.
 - c. Make sure all the **Component** check boxes are selected.
 - d. In the **Restore From** drop-down list, select the drive and directory to which you backed up the files in Step 1.
 - e. Click **OK** to start the restore.
 - f. Once the restore is complete, click the **Exit** icon to exit the data manager.
 - g. Shut down and exit the system by selecting **Shutdown Switching** from the **Services** menu.
10. Reboot the system, then run the MVIP test.
 11. Reboot the system.

AltWare Uninstall

To back out the upgrade, be sure to stop all AltWare-related services before uninstallation. To do this, run AltAdmin, log in, and select **Shutdown Switching** from the **Services** menu.

In the event that the auxiliary services were not stopped, stop them one at a time using the **Start → Programs → Administrative Tools → Services** applet.

Then launch the Uninstall program by clicking the **Uninstall AltWare OE** icon in the AltWare program folder. (Do not use the **Add/Remove** program in Windows to remove AltIServ; this will not completely delete all necessary folders.)

Downgrade Procedure

To downgrade, you must have been running the earlier version prior to the 4.6 installation. To downgrade to OE 4.0 or 4.5, you must have been running OE 4.0 or 4.5 prior to the 4.6 installation. 4.0 or 4.5 database backup files are also required.

To downgrade, follow these steps:

1. Stop the AltiGen services as described in “Shutting Down Switching as a Windows 2000 / NT Service” on page 3-18.
2. Uninstall OE AltiWare 4.6 as described on page 3-47.
3. If they are installed, uninstall AltiView, AltiConsole, AltiAdmin, and CDR Search, following the manual procedures for those applications.
4. Delete the following components using the **Control Panel → Add/Remove Program**:
 - AltiView VM Service
 - Quantum SP
 - Triton SP
 - Triton Analog SP
 - Triton T1/PRI SP
 - Triton VoIP SP
5. Remove the “\altiserv” directory and any subdirectories.
6. Shut down Windows NT and power down the computer.
7. Install the previously removed older Quantum/Triton boards back into the computer.
8. Reboot the computer.
9. Reinstall the previous OE and the previous version of other client/ server programs such as AltiView, AltiConsole, AltiAdmin, and CDR Search.
10. Stop AltiGen Switching Services as described in “Shutting Down Switching as a Windows 2000 / NT Service” on page 3-18.
11. Restore your backups.
12. Reboot the computer.

Software Installation Troubleshooting

Use this table for troubleshooting error messages encountered during software installation.

Error Message	Solution
This version of AltiWare does not support Triton T1 Rev A2 or VoIP Rev A2 boards. Please unplug these boards, then run setup again.	Unplug Triton T1 Rev A2 or VoIP Rev A2 boards, then run setup again.
Copy activation file failed.	Activation file (extcl) is not in the specified folder, is missing, or is corrupted. Make sure you select the correct file folder where the activation file is located and try again. If problem persists, you can manually copy the activation file to c:\AltiServ\db directory (if AltiServ is installed on the c: drive) and run the installation program again.
An error occurred during the move data process.	Make sure all AltiGen applications and services are stopped/closed before installing AltiWare OE.
Setup cannot detect your system key. You must plug your system key into either a parallel or USB port for upgrading to AltiWare OE 4.6.	Make sure your system key is fully inserted into your parallel or USB port prior to installing AltiWare OE. If error persists, reboot the system, then run setup again.
Setup has not detected your system key. If you proceed the installation WITHOUT the system key, only 8 physical ports will be available for use after the OE 4.6 installation.	Make sure your system key is fully inserted into your parallel or USB port prior to installing AltiWare OE.
Setup cannot append the AltiServ path because your existing system environment is too long. You must manually append the AltiServ path to your system environment path after finishing AltiServ's installation but before restarting your system. You can find the system environment path through Control Panel>System >Environment>path.	Manually append c:\AltiServ\exe (if AltiServ is installed on c: drive) to your system environment path (through Control Panel>System >Environment>path) after finishing AltiServ's installation but before restarting your system.

Error Message	Solution
Unable to add Altiserv path to the system.	Manually append c:\Altiserv\exe (if Altiserv is installed on c: drive) to your system environment path (through Control Panel>System >Environment>path) after finishing Altiserv's installation but before restarting your system
Failed to upgrade AltiWare databases.	The previous database may be corrupted. Restore the last, known working database and try again. If error persists, contact your Authorized AltiGen Dealer.

Getting Around AltAdmin

AltAdmin: the AltWare OE Administrator


This section describes how to configure and administer the AltServ system using the AltWare Administrator system application software.

AltWare Administrator, or AltAdmin, allows you to configure sophisticated switching and messaging functions using windows that guide you through the configuration steps for each feature.

AltAdmin can be used at the AltServ system or on any other system on the LAN for remote maintenance. On a remote Windows NT or Windows 2000 client system on the LAN, AltAdmin allows control of one or more AltServ systems. System Data Management, and Stop Switching Service cannot be performed over the LAN.

Instructions for installing AltAdmin are described in “Installing AltAdmin on Remote Systems” on page 3-44.

Logging in for the First Time



To access AltWare functions to configure and administer the AltServ system, you must first log in as an administrator. The first time you log in, use the system default password, “22222.”

Important: To ensure system security, change the system password as soon as possible. See “Changing the Password” on page 4-11.

The AltiWare Administrator Main Window

Once you run the AltiWare Administrator, the first window you see is the AltiWare Administrator main window.

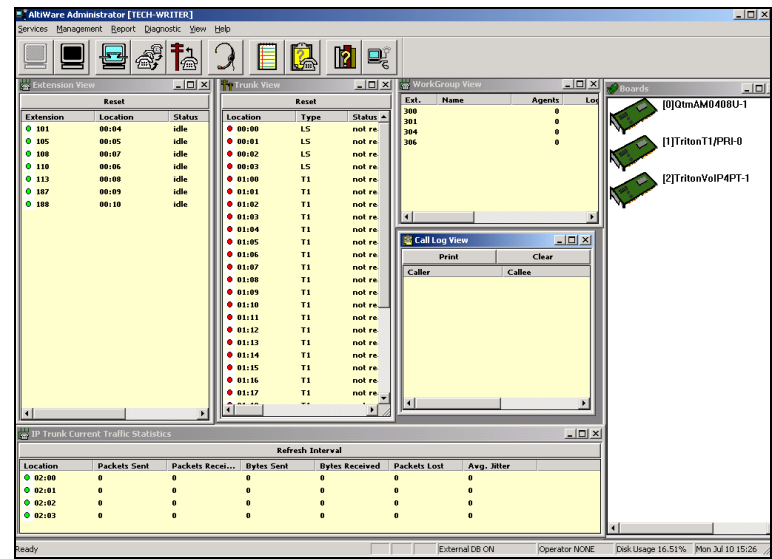


Figure 1. AltiWare Administrator main window

At the top you see the Main Menu bar and below that, the Quick Access Toolbar. At the bottom is a status bar that contains information on the current runtime status.

The main window contains separate child windows, or different views of the system. There are five default views: the boards, extensions, trunks, workgroups and call traffic.

Additionally, if appropriate, you can also run a view of IP Trunk Traffic, which is the 6th window, at the bottom in the above example.

Note: If using Windows XP for AltiAdmin or client applications, please note that for AltiAdmin, the font that appears in the title of the View Windows (Extension, Trunk, etc.) is in the Windows 2000 style font and will appear small. To adjust, change the Active Title font in Windows XP to Tahoma (or other font).

The Main Menu

The Main Menu functions are as follows:

- **Services**

Login and logout, change password, backup and restore functions, and shutdown the switching service.

- **Management**

Opens configuration windows to work with the system, trunks, extensions, out call routing, Auto Attendant, MVIP clock, audio peripheral, VoIP and AltGen IP phone configuration.

- **Report**

System Summary, System Log, and IP Traffic Statistics.

- **Diagnostic**

Reserved for use by authorized technical personnel

- **View**

Show, hide, or set default alignment of the windows, the toolbar, and the status bar.

- **Help**


Online help and AltWare version and license information

Quick Access Toolbar



Figure 2. AltAdmin Quick Access Toolbar

The toolbar contains icons representing shortcuts to frequently accessed functions. From left to right, the toolbar icons are as follows:



Logout and login. Click the light blue monitor at the left to login. When you do, the monitor grays out and the logout monitor at the right turns black. The monitors provide a clear indication of login status. While you're logged in, anyone at the keyboard can modify system settings.



System Configuration. Opens the System Configuration window to set system-wide options and parameters, the same function as **Management → System Configuration....**



Extension Configuration. Opens the Extension Configuration window, the same function as **Management → Extension Configuration...**



Trunk Configuration. Opens the Trunk Configuration window, the same function as **Management → Trunk Configuration...**



Auto Attendant Select. Opens the Auto Attendant Select window, the same function as **Management → Auto Attendant Select...**



System Summary. Opens the System Summary window, the same function as **Report → System Summary...**



System Log. Opens the System Log window, the same function as **Report → System Log...**



System Help. Opens the online help system main window, the same function as **Help → Help...**



About. Opens the About AltiWare window, which displays version, license and file information, the same function as **Help → About AltiWare....** Also, administrators can add, activate and register licenses from this information window.

The View Windows

As noted in “The AltiWare Administrator Main Window” on page 4-2, the AltiAdmin main window hosts a number of child windows, which are called *view* windows in AltiWare because they provide various views into the internal system setup and active status.

Boards View Window

The **Boards** window displays the AltiServ Quantum or Triton boards hardware status. It displays the card location in the ISA or PCI slots and board model numbers.

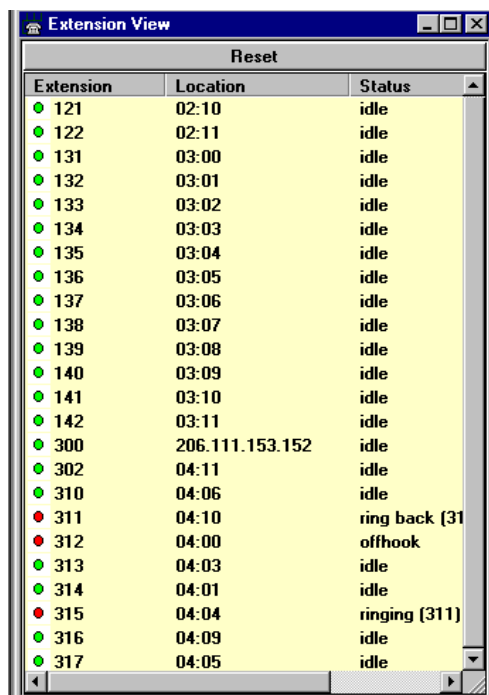


Figure 3. Boards window

Each board is represented by the logical ID ([0]), the sequential location of the board), card model number (name of the board) and physical ID (the ID set using the dial on the faceplate of the board). For example, QtmAM0408U-1 is a Quantum board with four (4) trunk ports and eight (8) extension ports.

Extension View Window

The **Extension View** window displays the status of all assigned extensions.



The screenshot shows a window titled "Extension View" with a "Reset" button at the top. Below the button is a table with three columns: "Extension", "Location", and "Status". The table contains 20 rows of data. Each row starts with a radio button, followed by the extension number, the location (card ID and port), and the status. The status is "idle" for most extensions, but "ring back (311)" for extension 311, "offhook" for extension 312, and "ringing (311)" for extension 315. The background of the table is yellow.

Extension	Location	Status
121	02:10	idle
122	02:11	idle
131	03:00	idle
132	03:01	idle
133	03:02	idle
134	03:03	idle
135	03:04	idle
136	03:05	idle
137	03:06	idle
138	03:07	idle
139	03:08	idle
140	03:09	idle
141	03:10	idle
142	03:11	idle
300	206.111.153.152	idle
302	04:11	idle
310	04:06	idle
311	04:10	ring back (311)
312	04:00	offhook
313	04:03	idle
314	04:01	idle
315	04:04	ringing (311)
316	04:09	idle
317	04:05	idle

Figure 4. Extension View window

The radio button to the left of each extension number is green when the extension is idle, and red when the extension is *not ready* or *in use*. The **Location** number (i.e. 01:04) identifies the card ID and port (channel) number on the board. For example, in location 01:04, the card ID is 1 and the port number is 4. If an extension user with IP Extension enabled has logged onto an IP extension, the location will show the static IP address you have assigned. If you use dynamic IP addressing, this location will change every time the user logs off and back onto an IP extension.


You can double-click any extension number to open the Extension Configuration window for the selected extension.

The **Reset** button resets the selected extension to the idle status. When you click the **Reset** button, a small dialog box opens, asking if you want to continue with the reset and displays the selected extension number and the name of the person assigned to the extension.

You can click the Reset button without selecting an extension, and then type in the extension number for the extension to reset.

Trunk View Window

The **Trunk View** window displays the status of all assigned trunks.

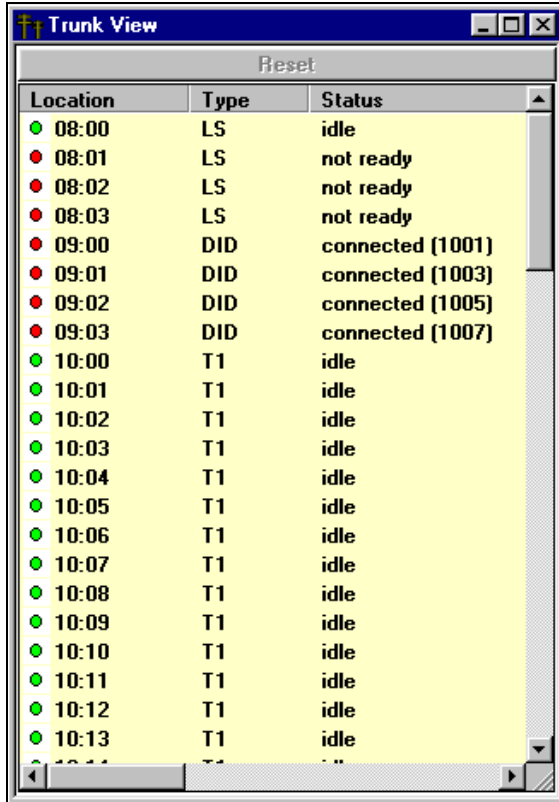

Location	Type	Status
08:00	LS	idle
08:01	LS	not ready
08:02	LS	not ready
08:03	LS	not ready
09:00	DID	connected (1001)
09:01	DID	connected (1003)
09:02	DID	connected (1005)
09:03	DID	connected (1007)
10:00	T1	idle
10:01	T1	idle
10:02	T1	idle
10:03	T1	idle
10:04	T1	idle
10:05	T1	idle
10:06	T1	idle
10:07	T1	idle
10:08	T1	idle
10:09	T1	idle
10:10	T1	idle
10:11	T1	idle
10:12	T1	idle
10:13	T1	idle

Figure 5. Trunk View window


The radio button to the left of each trunk location is green when the trunk is idle, and red when the extension is *not ready* or *in use*. The location format is *slot:channel*—for example, channel 3 on the board in slot 9 is location 09:03.

You can double click any trunk location to open the Trunk Configuration window for the selected trunk.

The **Reset** button resets the selected trunk(s) to the idle status. You'll be asked to confirm the reset and a status message will tell you if the reset was successful. You can select and reset multiple trunks.

Workgroup View Window

The **Workgroup View** window displays data and statistics for workgroups:

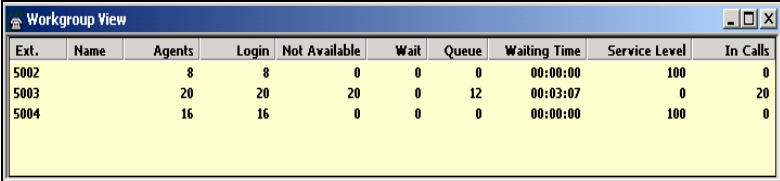

The screenshot shows a window titled "Workgroup View" with a table of workgroup statistics. The table has 11 columns: Ext., Name, Agents, Login, Not Available, Wait, Queue, Waiting Time, Service Level, and In Calls. There are three rows of data for workgroups 5002, 5003, and 5004.

Ext.	Name	Agents	Login	Not Available	Wait	Queue	Waiting Time	Service Level	In Calls
5002		8	8	0	0	0	00:00:00	100	0
5003		20	20	20	0	12	00:03:07	0	20
5004		16	16	0	0	0	00:00:00	100	0


Figure 6. Workgroup View window

This window displays the following data:

- **Extension**—the workgroup pilot extension number
- **Name**—the workgroup name
- **Agents**—the number of agents assigned to the workgroup
- **Logon**—the number of agents logged into the workgroup
- **Not Available**—the number of agents who are currently on the phone, or who are unavailable with the Do Not Disturb or other status
- **Wait**—the number of agents who are in wrapup mode
- **Queue**—the number of calls waiting to be answered
- **Waiting Time**—the average waiting period before incoming calls are answered
- **Service Level**—displays the percentage of calls being answered within an acceptable period of time
- **In Calls**—displays the number of incoming calls to each workgroup

Call Log View Window

The **Call Log View** window displays the line and trunk traffic history.

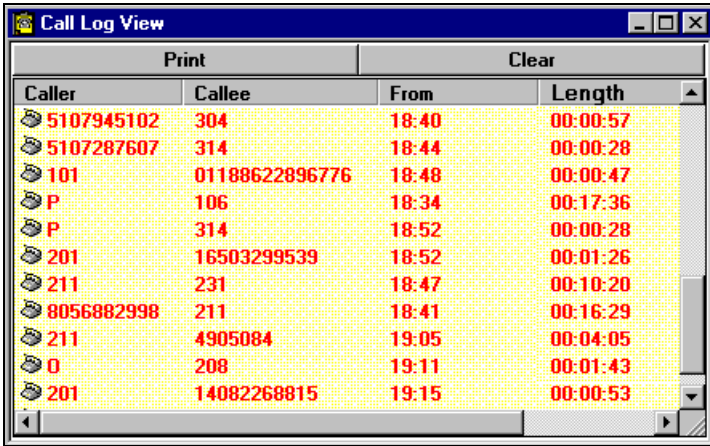

Print		Clear	
Caller	Callee	From	Length
5107945102	304	18:40	00:00:57
5107287607	314	18:44	00:00:28
101	01188622896776	18:48	00:00:47
P	106	18:34	00:17:36
P	314	18:52	00:00:28
201	16503299539	18:52	00:01:26
211	231	18:47	00:10:20
8056882998	211	18:41	00:16:29
211	4905084	19:05	00:04:05
0	208	19:11	00:01:43
201	14082268815	19:15	00:00:53

Figure 7. Call Log View window


The window displays, for the last 30 calls, the caller line or number, the callee, the starting time in 24-hour format and the length of the call.

You can select calls and click the **Print** button to print the selected log entries for the call.

You can click the **Clear** button to clear the window of all data.

IP Trunk Current Traffic Statistics Window

The **IP Trunk Current Traffic Statistics** window displays currently active calls for IP trunks.

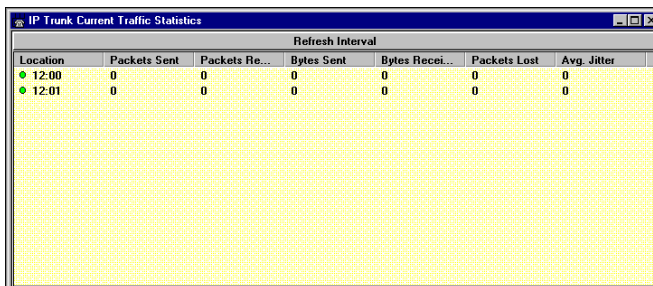

Refresh Interval						
Location	Packets Sent	Packets Re...	Bytes Sent	Bytes Recei...	Packets Lost	Avg. Jitter
12:00	0	0	0	0	0	0
12:01	0	0	0	0	0	0

Figure 8. IP Trunk Current Traffic Statistics window

The packet and byte data that follows is for *data sent or received from other AltiServ systems over the public or private IP network*.

- **Location**—the Triton VoIP *board ID:channel ID*
- **Packets Sent**—the number of voice packets sent
- **Packets Received**—the number of voice packets received
- **Bytes Sent**—the total size (in bytes) of all voice packets sent
- **Bytes Received**—the total size (in bytes) of all voice packets received
- **Packets Lost**—the number of voice packets that have been lost due to prolonged delays, network congestion or routing failure
- **Average Jitter**—displays the average length of delay per voice packet in milliseconds. This number can be used to measure the quality of service on the network that connects the source and destination sites. Under 100 milliseconds is good, while a higher figure indicates a longer than average delay.

Status Bar

The information at the bottom of the window in the **Status Bar** displays informational and status messages such as name of the operator, disk usage status, status of external logging, current time, and other data.

Setting the Refresh Interval

The **IP Trunk Current Traffic Statistics** window is updated according to the **Refresh Interval** configuration. By default, the **Refresh Interval** is set to refresh the data in the window every 5 seconds. To change the refresh interval, click the **Refresh Interval** button and use the slide rule to set the time to an interval to a number of seconds up to one minute. Each tick on the rule represents 5 seconds. To set the time to 0 is to *turn off refreshing the data*.

Logging In

To log in and use the AltiAdmin functions, click the **Login** icon (the left-most icon in the toolbar) or select **Login...** on the **Services** menu. You'll be prompted to enter the password and click **OK**.

To log out, click the **Logout** icon (second icon from the left of the toolbar), or select **Logout** from the **Services** menu.

The logout option in the **Services** menu allows the system administrator to logout of the system. You should always log out after you have completed the administrative or configuration tasks. This will prevent unauthorized persons from accessing the AltiWare configuration functions. AltiWare telephony functions continue to run in the background on the AltiServ.

Changing the Password

Change the password frequently to prevent unauthorized access to the system. You can change the password only if you're already logged in. Select **Change Password** from the **Services** menu to open a Change Password dialog box. You'll be prompted type in and verify the new password and then click **OK**.

Stopping the AltiGen Switching Service

Normally, when you exit AltiAdmin, the AltiGen services that provide the various telephony and data services remain active—they are needed to run the system, of course. If you need to shut the entire system down, select the **Stop Switching Service** option from the **Services** menu. This stops the AltiWare system services, including the AltiAdmin application itself. When you re-open AltiAdmin, the switching services are reactivated.

This option is available when you are logged in at the AltiServ system computer; it is *not* available from a remote AltiAdmin client.

Stopping the AltiGen Switching Service

System Configuration



The **System Configuration** functions provide for configuring the AltiWare system-wide settings.

Access System Configuration by selecting **System Configuration...** on the **Management** menu, or by clicking the System Configuration icon.

You can then work with the following settings, each of which is accessed by a tab in the System Configuration window.

- **General setup**—system ID, area code and number, operator and manager extensions, country, extension and DID number lengths, distinctive ring, conference call, and system park options.
- **Number Plan**—how the system responds to each first digit dialed.
- **Business Hours**—used by system functions.
- **Holiday**—how calls are routed on designated holidays.
- **System Speed dial numbers.**
- **Call Restriction**—prefixes to block, toll call prefixes and call control.
- **Account Code**—tables for creating and removing account codes.
- **Call Reports**—CDR logging and data export.
- **Messaging**—basic parameters and settings for voice and email messaging.
- **Area Codes** and required prefix setup—for exceptions to toll call standards.
- **IP Dialing Tables**—tables for voice over IP.
- **DNIS**—inbound call routing during different time periods.
- **Tenants**—sharing an AltiServ system among multiple companies.
- **Distribution List**—for voice message forwarding.
- **Logout Reason Codes**—for workgroups.

Setting General Parameters

The General tab is the default window you see when you open the System Configuration window. You use this window to set the system area code and number, operator extension, country, distinctive ring, conference call, and system park options.

To access the General settings, select **System Configuration...** on the **Management** menu, or click the System Configuration icon. If the System Configuration window is already open, click the **General** tab.

System Configuration

Call Reports | Messaging | Area Codes | IP Dialing Table | DNIS | Tenants | Distribution List | Logout Reason
General | Number Plan | Business Hours | Holiday | System Speed | Call Restriction | Account Code

System ID: 3

Country: U.S.A. & Canada

Manager Extension:

System Home Area Code: 510

System Main Number: 2521001

Operator: Select an extension or group as operator
Extension: N/A

Distinctive Ring:
☐ Enable Distinctive Ring
☒ Enable Operator Priority Ringing

Conference Bridge Option:
☐ End Conference If No Extensions Participating

System Call Park:
Timeout Ring Back in: 2 Minutes

Group Members:

OK Cancel Apply Help

Figure 1. General window, System Configuration

You can set the following parameters and options:

Parameter	Description
System ID	Assign a number (1-100) to the system.

Parameter	Description
Country	<p>Select a location for the system.</p> <p>Note: When selecting a country code, other than USA & Canada, there will be a 7 second dialing delay for en-bloc trunks. (Refer to “Reducing Dialing Delay For En-Bloc Trunks For Non-US/Canada Countries” on page 9-8 for more detail.)</p>
Manager Extension	<p>Type the system manager’s extension number.</p> <p>The system manager has access to system administrator functions.</p> <p>For information on setting up extensions, see <i>Chapter 8, Extension and Group Configuration</i>.</p>
Distinctive Ring	<p>Enables users to distinguish between internal, external, and operator calls by the way the phone rings:</p> <ul style="list-style-type: none"> • Enable Distinctive Ring—establishes a short double ring cadence for internal calls and a normal, single ring for external calls. Unselected, both rings are normal. • Enable Operator Priority Ringing—produces a long single ring between short pauses on calls to the operator.
System Home Area Code	Area code for the system location.
System Main Number	The main system telephone number, which is sent to the pager’s display when a user’s messaging options are configured to call a pager. This is also the number subscribers call to access the Altigen Voice Mail System.

Parameter	Description
Conference Bridge Option	<p>Selected, conference calls will end when all internal lines have disconnected from the conference bridge.</p> <p>Not selected, the conference connection can continue between outside parties, even after all internal parties have disconnected.</p> <p>Note: For conference resource limits information, refer to “AltWare Conference Resource Limits” on page 2-18.</p>
System Call Park Timeout Ring Back in	<p>Allows the user to park a call, then pick up the call from another extension, forward the call, or take some other action. If the call is forgotten or the forward not picked up, the Ring Back time sets the number of minutes a call remains parked before the user’s extension is rung again. To the caller, the call park sounds like being put on hold.</p>
Operator Extension and Group Members	<p>Select the extension to be used by the system operator. For the extension you select, the group members show up in the Group Members box. For further information on extensions, see <i>Chapter 8, Extension and Group Configuration</i>.</p>

Setting a System Number Plan

The System Number Plan defines the extension digit length. You can use from 3–6 digits for extensions. You also use the System Number plan to set a DID number length to use, and to define the system response to the first digit dialed—for example, pressing **9** to get a trunk line.

The numbering scheme requires some thoughtful planning. You cannot edit the extension *length* after the first extension is assigned. Further, if a *first digit dialed* is assigned to extensions and you have set up extensions beginning with that digit, you cannot change the digit assignment without first deleting all affected extensions. For example, if **7** is assigned to *Extension* and you’re using extensions 7010, 7113, etc., you cannot reassign **7** to say, IP trunk access, without first deleting all the *7nnn* extensions.

Accessing the Number Plan

To access the Numbering plan settings, select **System Configuration...** on the **Management** menu, then click the **Number Plan** tab.

System Configuration

Call Reports

Messaging

Area Codes

IP Dialing Table

DNIS

Tenants

Distribution List

Logout Reason

General

Number Plan

Business Hours

Holiday

System Speed

Call Restriction

Account Code

Extension

Number Length

3

Default Password (For newly created ext) 74903

DID

Number Length

3

First Digit Assignment

1

Extension

2

Extension

3

Extension

4

Extension

5

Extension

6

Trunk Access

7

Extension

8

IP Trunk Access

9

Route Access

*

Invalid

0

Operator

#

Feature Access

This screen defines how the system responds to the first digit entered by the user. For example, if Extension is selected for digit '1', the system will then treat the number, that begins with a '1' as an extension number.

OK

Cancel

Apply

Help

Figure 2. Number Plan window, System Configuration

Use the Number Plan window to specify the following parameters:

Parameter	Description
Extension Length	<p>The number of digits for your extension numbering system. Valid entries are from 3–6. For example, extension 2001 and 4020 are 4-digit extension numbers.</p> <p>Note: The extension length is not adjustable once the first extension is configured. To be more precise, the length cannot be changed without totally reconfiguring the system or deleting all the extensions already configured.</p>
Default Password	<p>The default password for newly created extensions will be randomly set; when changing the password, it must be four to eight digits in length.</p>

Parameter	Description
DID Number Length	<p>The number of digits needed to match a DID (Direct Inward Dialing) number, with a range of 2 - 16.</p> <p>Each extension can be assigned a DID number. A DID number does not have a fixed length. For example, the DID number length is 4; the extension DID number - 2529299.</p> <p>Depending on the service contract with the Central Office (CO), the DID trunk can send all 7 digits (2522999) or just the last 4 digits (2999). If this DID Number Length option is set to 4, the system always tries to match the last 4 digits received to the last 4 digits of a DID number, regardless of what is received.</p> <p>Note: To accommodate future growth and minimize disturbance, it is recommended that the length of the DID numbers assigned to an extension be greater than or equal to this DID Number Length. However, it is not necessary to use the DID Number Length when routing via tie trunks.</p>
First Digit Assignment	<p>These define how the system responds to the first digit dialed by the user. If a particular digit is grayed out—not available—that means it cannot be used in the country location selected in the General window.</p> <p>The drop-down list options for each digit are as follows:</p> <ul style="list-style-type: none">— Extension— Trunk Access— Feature Access— Operator— Invalid (no action)— IP Trunk Access— Route Access

Assigning Trunk, Feature, IP Trunk, & Route Access

You can use *trunk*, *feature*, *IP trunk*, and *route access* outgoing call options alone or in combination when making the number plan assignments.

Trunk Access

Usually, **9** is used as the analog or PSTN trunk access code, and AltWare uses 9 as the default for trunk access. You can keep that configuration and assign other digits such as **7** or **8** to Route Access and IP trunk access, or you can change it. There are no defaults for IP trunk or Route Access.

Feature Access

By default, the first digit assignment for **#** is set to Feature Access, which is used as part of feature access codes. In addition, you may also set **1-9** or ***** to Feature Access. For example, if **7** is set to Feature Access, Station Login (**#27**) can also be accessed using **727**.

IP Trunk Access

Only one IP trunk access option is allowed per AltWare system. It is highly recommended that the same IP trunk access code (e.g. **8**) be used for all AltWare systems in the network. To use Voice over IP, you must set up this access and, in addition, configure the IP Dialing Table as discussed in “Defining an IP Dialing Table” on page 5-27 and set the VoIP codecs as discussed in “Setting VoIP Codecs” on page 8-11.

Note: After setting the IP Trunk Access code here, you should set the Trunk Access Codes of any 30-port VoIP boards to “None” on the General tab of the Trunk Configuration window (see “Setting General Trunk Attributes” on page 7-3). This will prevent users from directly accessing the 30-port boards—which use the G.711 codec only—for calls to AltIServ servers or other IP gateways that may require the G.723 codec. If you still want users to have access to this trunk for outgoing calls, you can set it up through Outcall Routing (see *Chapter 9, Out Call Routing Configuration*).

Route Access

The Route Access option can be assigned to one or more digits, to route the call per the out call routing table. Out call routing, which is sometimes called ARS (Automatic Route Selection) or LCR (Least Cost Routing without carrier rate table), is described in *Chapter 9, Out Call Routing Configuration*.

Out call routing is designed to help 10-digit dialing, zoomerang dialing, digit manipulation, and tie trunk hop-off dialing.

Note: When making or editing these or other number plan assignments, refer to the considerations on setting and editing discussed in “Setting a System Number Plan” on page 5-4.

Setting Business Hours

The Business Hours tab contains group boxes for setting the business hours and days of the week for which the business or organization is in operation. The business hours schedules are used to set other AltıWare settings such as trunk usage or routing DNIS calls to different extensions depending on the time and day.

Note: Because the business hours are used throughout the system, ***you or the appropriate administrator must make sure the system time has been set correctly.*** The system time can be changed using the Date/Time utility in the Windows or NT Control Panel.

To access the Business Hour settings, select **System Configuration...** on the **Management** menu, then click the **Business Hours** tab.

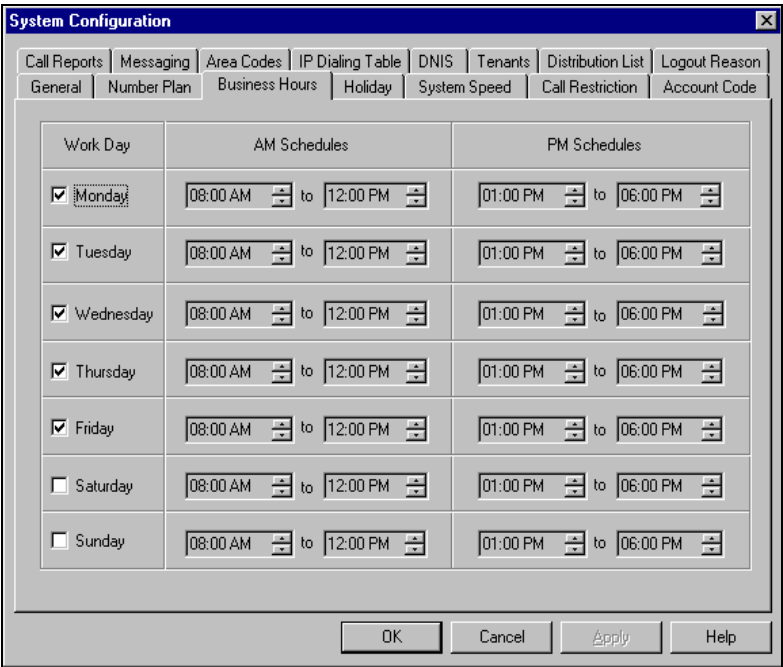


Figure 3. Business Hours window, System Configuration

Set the business schedule parameters as follows:

Parameter	Description
Work Day	Select the days of the week on which the company does business. For example, if the company does business Monday – Friday, the check boxes for those days should show check marks.
AM and PM Schedules	<p>For each day of the week, select the time periods during which the company is available for business. The time between the AM and PM times can be used to indicate a lunch break or time between shifts.</p> <p>If you don't want to set a break between AM and PM schedules, set the PM starting time to be the same as the AM ending time.</p> <p>Or if you wish to specify 24 hours as standard business hours, select the following hours:</p> <p>AM Schedules: From 08:00 AM To 12:00PM</p> <p>PM Schedules: From 12:00 PM To 08:00 AM</p>

Routing Calls on Holidays

You can create special routes for incoming DNIS and trunk calls that come in on designated holidays. For holidays that your organization treats as half-days, you can create separate routes for business and non-business hours.

Note: Incoming DID and tie trunk calls will not follow holiday routes, but go to the dialed extensions directly.

To access Holiday Routing settings, select **System Configuration...** on the **Management** menu, then click the **Holiday** tab.

Holiday	Description
07/18/2002	Test

Holiday: Thursday, July 18, 2002
 Description: Test

☒ Route Incoming Calls to Extension
☐ Route Incoming Calls to Auto Attendant (work hour)
☐ Route Incoming Calls to Operator

☒ Special hours

From: 12:00:00 AM to: 12:00:00 AM

☒ Route Incoming Calls to Extension
☐ Route Incoming Calls to Auto Attendant (work hour)
☐ Route Incoming Calls to Operator

Add Delete Apply to ... OK Cancel Apply Help

Figure 4. Holiday window, System Configuration

Set holiday routing as follows:

1. Click **Add** to create a new holiday. In the popup that displays, select a date from the dropdown and enter a description to identify the holiday.
2. Set call routing for “normal” holiday hours using the field group in the upper half of the Holiday window.

This is the default route for calls coming in on the holiday.

3. Optionally, select **Special hours** and set call routing for special hours using the field group in the lower half of the Holiday window.

This route will override the route for normal holiday hours, for the hours you specify. Use this option, for instance, to route calls for the working portion of a holiday that your organization treats as a half-day.

Configuring System Speed Dialing

You can set up to 60 system speed dial numbers. The numbers available are from 00 – 59, used following the system speed dial access code, #88.

Speed dial settings for individual extensions are set in Extension Configuration. (See “Setting up Station Speed Dialing” on page 8-27.)

To access the Speed Dialing settings, select **System Configuration...** on the **Management** menu, then click the **System Speed** tab.


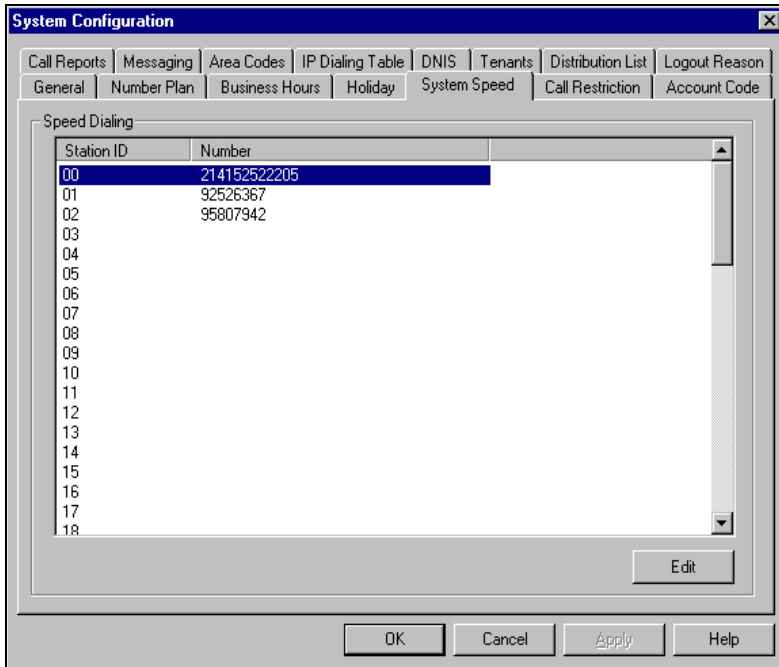


Figure 5. System Speed window, System Configuration

Editing Speed Dial Entries

To add or edit an entry, double-click the **Station ID** number you want to work with, or select the number and click **Edit**. A dialog box appears:

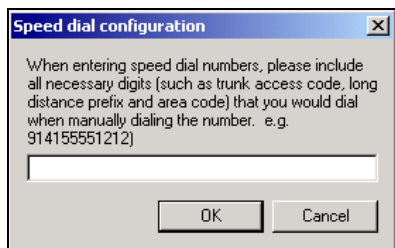

Type in the full number as you would dial it, with a maximum of 20 digits per entry. For example, the phone number 914085551212 comprises of **9** (trunk access code), **1** (long distance prefix), followed by **408** (area code), and finally the seven digit telephone number.

Valid digits include **0** through **9**, **#**, *****, and **(,)** comma. **The comma represents a one (1) second pause.**

Adding Names and Comments

If you want to add names and comments for the users' convenience, use the following steps:

1. Configure the system speed dialing numbers as described in the preceding procedure.
2. Open an AltView user desktop and define the names and comments for the speed dialing numbers.
3. Save the speed dial setup and Exit AltView.
4. From the *C:\Program Files\AltGen\AltView\<ext#>*, copy *syspeedlist.dat* directory to the same directory for every AltView user desktop.

Defining System Call Restrictions

Call Restriction allows you to block outgoing calls for up to 20 prefixes. This window also provides for blocking *all* outgoing calls and for enabling hop off to other trunks when that function has been set up.

The restrictions you set up here are global restrictions.

Note: The dialing restrictions set here are one of three ways of blocking calls. See “About Restricting Outgoing Calls” on page 9-1 for a discussion of the uses of the different functions.

To access call restriction setup, select **System Configuration...** on the **Management** menu, then click the **Call Restriction** tab.

System Configuration

Call Reports | Messaging | Area Codes | IP Dialing Table | DNIS | Tenants | Distribution List | Logout Reason
General | Number Plan | Business Hours | Holiday | System Speed | Call Restriction | Account Code

System Prohibited Prefixes

If you wish to block calls to certain areas from all extensions, enter prefix less or equal to 10 digits. (e.g. 1900 or 976).

Index	Prefix
00	1408
01	1650
02	
03	
04	
05	
06	
07	
08	
09	
10	
11	
12	
13	
14	
15	

Edit

Toll Call Prefix

Domestic: 1
International: 011

Emergency Numbers

Number 1: 911
Number 2:
Number 3:

Password Check

After 8 false passwords, lock the ext for 01:00:00

Call Control

☐ Block All Outgoing Calls(#38)
☒ Enable Hop off for T1, ISDN and VoIP Tie Trunks
Call restriction follows extension 100

OK Cancel Apply Help

Figure 6. Call Restriction window, System Configuration

Blocking Calls to Area Codes from All Extensions

To add or edit system prohibited area codes:

1. Double-click an index entry in **System Prohibited Prefixes** list, or select the index entry and click **Edit**. This opens a dialog box that allows you to enter a prefix number.
2. Enter a **1** and the dialing prefix to block (e.g. 900, 976). You can enter up to 20 digits maximum for each prefix. For example, to block calls from all extensions to 976 numbers, type 1976.
3. Click **Apply**.

Setting Toll Call Prefixes

AltiWare uses the **Toll Call Prefixes** to determine the type of outside call and imposes restrictions when necessary. For example, if the international toll call prefix is **011** and a user attempts to make an international call from an extension without international call privileges, the call will be terminated as soon as the user dials **011** after the trunk or route access number. The caller hears an error tone.

The toll prefixes set here should match the dialing plan prefixes for the country set in the General window (see “Setting General Parameters” on page 5-2). You can set the following toll call prefixes.

- **Domestic.** The dialing plan for your country or region. For example, type in a **1** for 1-plus dialing within the U.S. dialing plan (also known as the North American Numbering Plan).
- **International.** The prefix used for international calls. For example, this is **011** for international calls made in the USA.

Setting Emergency Numbers

In the event that a person dialing a number in an emergency (911, for example) forgets to press the trunk access code to dial out, entering the number in the **Emergency Number** field will have the system automatically find the trunk access code to seize the call. You may enter up to three (3) emergency numbers in the appropriate fields.

Note: When using this option, make sure your system’s trunk access code is available.

Locking Attacked Extensions

If a user enters eight consecutive invalid passwords when logging on, AltiWare considers this an attack. To protect your company from theft of services, you can lock an attacked extension for the period of time you specify (1-24 hours) in the **Password Check** field group.

To unlock an extension, use the Extension Checker tool that is installed with AltiWare. See “Extension Checker” on page 19-1.

Blocking All Outgoing Calls

To block all outgoing calls—for example, when testing or modifying the system—select the **Block All Outgoing Calls** check box.

Enabling Hop Off for Tie Trunks

When selected, this function allows calls over T1 tie trunks to use PSTN trunks or other servers, when those trunks have been configured to accept tie-trunk calls. For Hop Off to work, it must be enabled on all AltiServ systems on which trunk calls are able to be used as a transit switch.

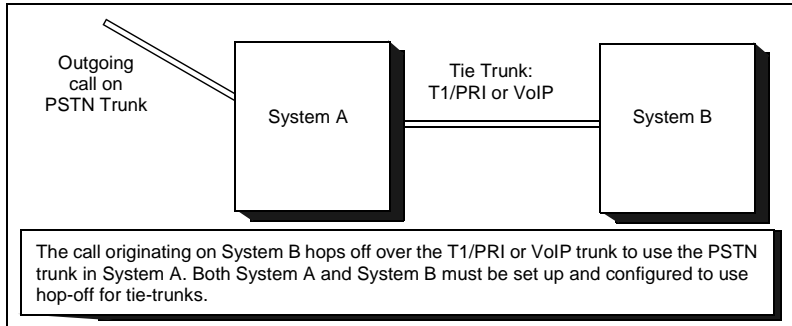


Figure 7. Hop Off for Tie Trunks

The trunk configuration to allow this function is discussed under “Setting General Trunk Attributes” on page 7-3.

The board must be configured to allow for tie trunks, as discussed in “Setting up T1 or PRI Channels on the Triton T1/PRI Board” on page 6-39.

Restricting Tie Trunk Calls

You can set call restrictions on tie trunk calls by telling the system to use the same restrictions as the ones set up for an extension. Using the **Call restriction follows extension** drop-down list, you can select the extension with the restrictions to use for the tie trunk calls.

Creating Account Codes

Account Codes let you enable or force users to assign incoming and outgoing calls to particular account codes for billing, tracking, or forecasting purposes.

To access the Account Code window, select **System Configuration...** on the **Management** menu, then click the **Account Code** tab.

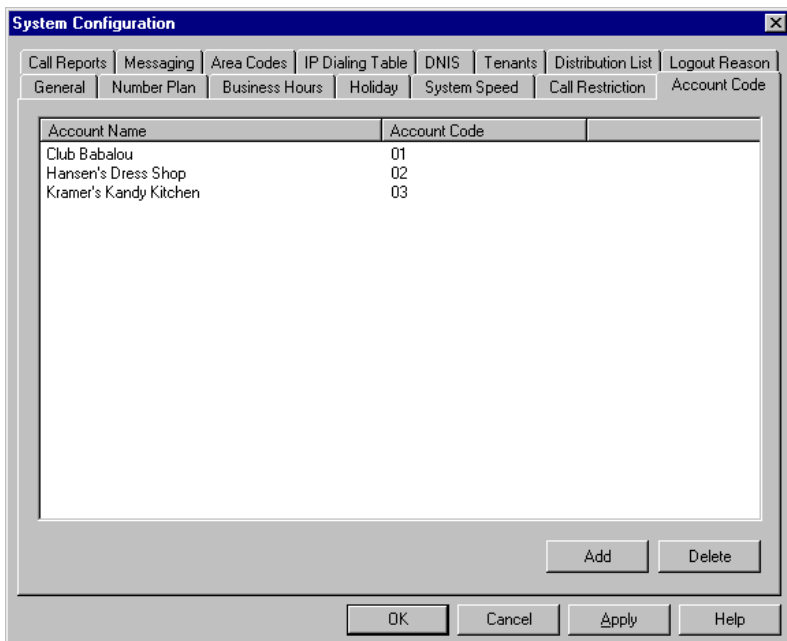


Figure 8. Account Code window, System Configuration

Adding and Deleting Account Codes

To create an account/code association, click **Add**. Enter an Account Name and Account Code in the dialog box that appears.

- The Account Code may contain 1-10 digits.
- You can assign the same Account Code to different Account Names.

To delete an account and its code, select it and click **Delete**. You can select multiple items for deletion by using **Ctrl-click** or **Shift-click**. Click **Apply** to save your changes and **OK** to save and close the window.

You can now set options for each extension that determine whether account codes can be forced or bypassed. See “Establishing Basic Extension Attributes” on page 8-6.

Setting up Call Reports

You can set up call reporting if AltiWare and AltiAdmin are installed on the same server.

In AltiWare, call reporting distinguishes between *call detail* data, which records every call made to, out of, and within the AltiServ system, and *RTM* data, which is workgroup-related statistical data captured from the real-time monitoring function used in the AltiSupervisor client application. Both types of data can be set up for call reporting, or logging, although their storage systems are different.

- **Call detail data** can be logged to your local drive, to a remote server, and/or exported via a COMM port.
- **RTM data** is always logged to your local drive.

Data logged to your local drive is stored in a directory called **AltiDB**, which is located by default on the root of the drive where AltiWare is installed. Files are stored in .mdb format.

Backups, if you choose to make them, are created in a subdirectory called **DBBackup**, which in turn contains three subdirectories: **MCDR** for Advanced Call Data, **RTMCALL** for Call Data, and **RTMDATA** for RTM data. These three types of data have separate report screens in the CDR Search client, and are described in the CDR documentation.

The CDR formats are described in “Call Accounting Report Formats” on page A-1.

Setting up Call Reports

To set up Call Reports, select **System Configuration...** on the **Management** menu, then click the **Call Reports** tab.

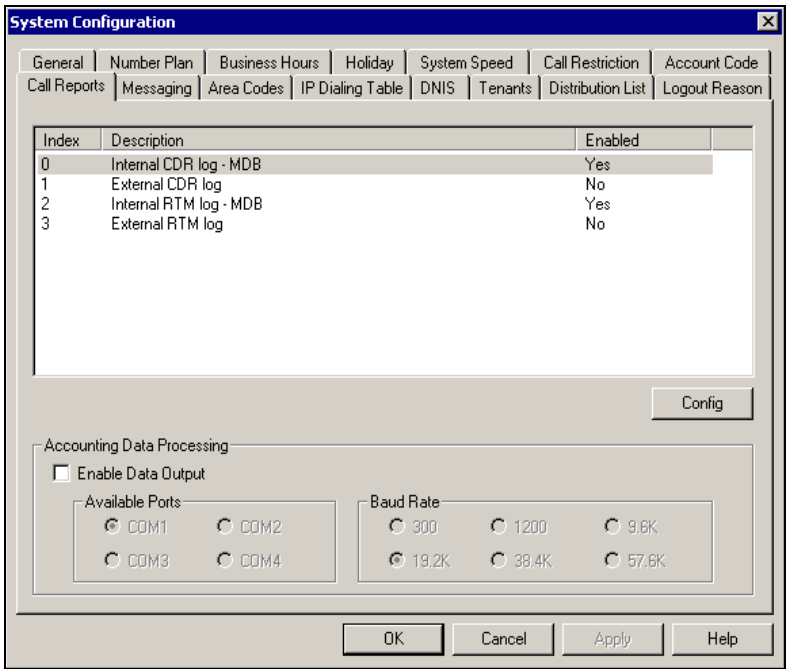


Figure 9. Call Reports window, System Configuration

Internal (Local) Logging of Call Data Data

To enable CDR collection to the local drive, select **Internal CDR log - MDB** and click the **Config** button. A dialog box appears.

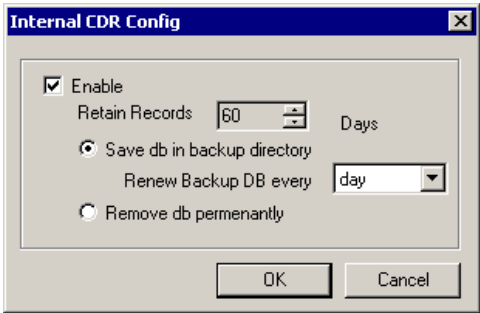


Figure 10. Enable local call data logging

To enable RTM data collection to the local drive, select **Internal RTM data - MDB** and click the **Config** button. A dialog box appears.

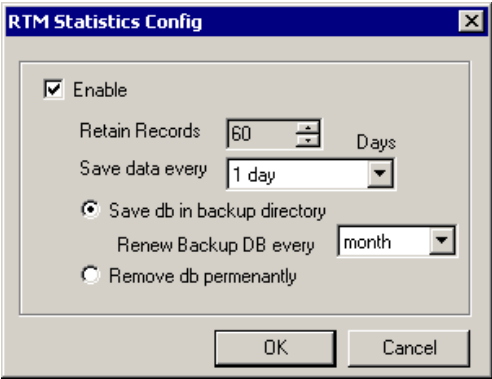


Figure 11. Enable local RTM data logging

Parameter	Description
Enable	Check to enable internal (local) logging of call data.
Retain Records	Select the number of days to retain records. This can be any number of days from 1–365.
Save data every (RTM Statistics only)	Specifies how often to save workgroup call data from the real-time monitor. This setting, with intervals ranging from 15 minutes to 1 day (24 hours), provides the minimum level of granularity at which RTM data (“Workgroup Statistics”) will be reported from the CDR Search client.
Save db in backup directory	Select to save backup files into the AltIDB >DBBackup folder. Select a Renew option to specify how often to save the backup files. AltWare will save all data that overflows the Retain Records limit each day at midnight, into a file of format <yyyymmdd>.mdb.
Remove db permanently	Select to remove data after the Retain Records limit is passed instead of backing it up. When the Retain Records limit is reached, the oldest day’s data is removed permanently.

Example:

- **Retain Records** is set to 60 days
- **Save db** is selected
- **Renew Backup** is set to every month

With these settings, on day 61 a backup file is started in the DBBackup folder. Each day's call or RTM data is added to this file for one month. At the end of a month, a new file is started in DBBackup, which is likewise appended with each day's call or RTM data every day at midnight.

Backup files are dated and renewed according to the following schedule, regardless of when you actually make the **Renew** selection.

Renew setting	Renewal Dates
day	daily, at midnight
week	every Sunday
2 weeks	the 1st and 15th of every month
month	the first of every month
3 months	December, March, June, September
6 months	December and June
year	January

External (Remote) Logging of Call Data

AltiWare allows you to output call accounting to a Microsoft SQL 7 or SQL 2000 database or to a third party external application.

In either case, the database cannot be on the same server as the AltiWare system. A system integrator or database developer will need to write a custom query to extract data from the SQL database.

You can send reports from a number of different AltiServ systems to the same database.

Note: Before you enable external logging using this window, you need to set up and configure the database. It should be ready to receive the reports before you enable the export here.

To enable CDR collection to the local drive, select **External CDR log**, and click the **Config** button. A dialog box appears.

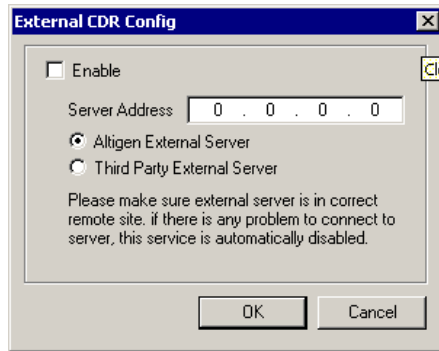


Figure 12. Enable external call data logging

Parameter	Description
Enable	Check to enable external (remote) logging of call data.
Server Address	Enter server's IP address.
Altigen External Server	Select to use Altigen's implementation of the Microsoft SQL database.
Third Party External Server	Select to export the data to a third party application.

Note: Altigen does not provide any SQL backup and restore utility. We strongly recommend that you use SQL Backup and Maintenance utility to perform daily backup and maintenance jobs, and use a restore utility to restore the database. If you need to reconstruct the SQL server, run the External Logger Setup to create an empty calldb database before restore.

To enable RTM data collection to the local drive, select **External RTM log**, and click the **Config** button. A dialog box appears.

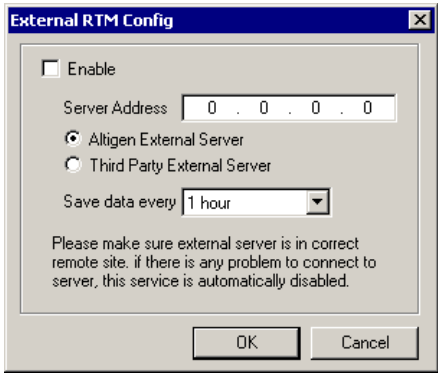


Figure 13. Enable external RTM data logging

Parameter	Description
Enable	Check to enable external (remote) logging of call data.
Server Address	Enter server’s IP address.
Altigen External Server	Select to use AltiGen’s implementation of the Microsoft SQL database.
Third Party External Server	Select to export the data to a third party application.

Exporting Through a Local Port

You can send the CDR to a COMM Port to export to, for example, an accounting data processing system.

To do this, select the **Enable Data Output** box in the **Accounting Data Processing** field group. Then select an **Available Port** and the **Baud Rate**.

Managing Messages

The Messaging function provides for setting basic parameters and options for messaging, including message notification retry attempts, deletion confirmation options, the length of time for message storage, message recording length, and email activation and usage.

To access Messaging setup, select **System Configuration...** on the **Management** menu, then click the **Messaging** tab.

System Configuration

General | Number Plan | Business Hours | Holiday | System Speed | Call Restriction | Account Code
 Call Reports | **Messaging** | Area Codes | IP Dialing Table | DNS | Tenants | Distribution List | Logout Reason

Message Notification

Maximum Retry Count: Retry Interval in Minutes:

Message Management Options

☒ Confirm Message Deletion ☒ Warn Expiration of Saved Messages

Recording Options

Minimum Recording: sec(s) ☒ Pause Detect Length: 100ms

SMTP/POP3 Options

☒ Enable SMTP/POP3 Service ☒ Allow Inbound Internet Mail

Mail Domain Name:

PostMaster Ext:

Exchange Synchronization

☐ Synchronize With Exchange Server

Exchange Server Address:

OK Cancel Apply Help

Figure 14. Messaging window, System Configuration

Setting Message Notification Retries

When a message is sent to a user's email in-box or voice mailbox and outcall notification is configured, notification is sent to the user. You can set the retry setting for the notification as follows:

Parameter	Description
Maximum Retry Count	Can be between 0 and 16 . This is the number of times the system will try to deliver a voice message notification <i>after</i> the original attempt. For example, 5 retries means five tries after the original, or 6 total attempts.

Parameter	Description
Retry Interval in Minutes	The number of minutes between retry attempts. Five minutes is the minimum and 60 minutes is the maximum interval allowed. The default is 5 minutes.

Setting Message Management Options

Set message confirmation and warning parameters:

Parameter	Description
Confirm Message Deletion	If checked, the system plays a voice message instructing the user to confirm request for deletion by pressing the # key. This prevents users from accidentally deleting messages with a single key entry.
Warn Expiration of Saved Messages	<p>If checked, the system warns the user that saved messages will be deleted due to their retention time expiring. The message is given the day before the messages are automatically deleted, and the user then has the option to either keep or delete the message. By default, this feature is enabled.</p> <p>Note: If this feature is disabled, saved messages are deleted automatically without warning when they expire.</p>

Setting Message Recording Options

Set message recording parameters:

Parameter	Description
Minimum Recording	<p>Sets the minimum length in seconds for any recording (i.e., incoming voice mail message, personal greeting, system prompts). This can be from 1–5 seconds, or 0, which means no minimum.</p> <p>All recordings that are shorter than the designated Minimum Recording length are deleted. This feature is recommended when users receive many empty voice mail messages on a regular basis and would like them automatically deleted.</p>

Parameter	Description
Pause Detect Length	Selected, this feature causes the deletion of pauses in messages. The default pause detect length is 500 ms . The pause detect can be disabled by deselecting the check box, or the length can be set to a value between 200–2000 ms (.2–2 seconds) .

Setting E-mail Messaging (SMTP/POP3) Options

To use the AltWare email services, configure the following settings.

Parameter	Description
Enable SMTP/POP3 E-Mail Service	Selected, this enables incoming and outgoing mail services on AltServ—Simple Mail Transfer Protocol (SMTP) and Post Office Protocol (POP).
Allow Inbound Internet Mail	This check box option is activated and selected by default if you enable the SMTP/POP E-Mail Service. You can deselect this option if you don't want to use the AltWare E-Mail service for inbound mail; for example when you're using another email server on the AltServ system.
Postmaster Ext	<p>This field defines the extension that will be assigned as a Postmaster Extension. When the e-mail system receives an e-mail with an invalid e-mail account, the automatic reply (informing of the invalid e-mail account used) to the sender is sent from the defined extension.</p> <p>Note: The system always requires an extension to be selected as the Postmaster Extension. By default, the first extension in the system is used. If an extension is selected as the Postmaster Extension, it cannot be deleted until the Postmaster Extension is re-assigned to another extension.</p>

Synchronizing E-mail with Exchange

Parameter	Description
Synchronize with Exchange Server	<p><i>Before selecting this option to use an Exchange Server, you should make sure the Exchange Server and Windows / NT configuration is established. See the AltiGen document, Exchange Server Integration in AltiWare OE.</i></p> <p>Select this option if you are using an Exchange Server and want to synchronize it and the AltiServ servers—that is, when emails or voice mails are deleted from one service, they are automatically deleted from the other server as well.</p> <p>If you choose this option, you must type in the Exchange Server Address. The name must be just the name of the machine or the fully qualified domain name.</p>

Setting Area Code Toll Definitions

The Area Codes window provides for setting exceptions to toll call rule standards regarding area codes and prefixes. To use a common example, the system treats calls that begin with **1** as long distance toll calls. You can use the Area Codes window to specify treatment of 800 and 888 numbers as free calls; this configuration enables the system to properly handle such numbers.

You can set up three types of exceptions, which are explained in more detail in the window itself.

- **Local Call Definition.** Calls that begin with **1** but are free (e.g., 800).
- **10 Digit Dialing.** Local calls that require dialing area codes but do not require dialing **1** first.
- **1 + 10 Digit Dialing.** Calls within the home area code that require 1 + Area Code + Number.

Accessing Area Codes Setup

To access the Area Code window, select **System Configuration...** on the **Management** menu, then click the **Area Codes** tab.

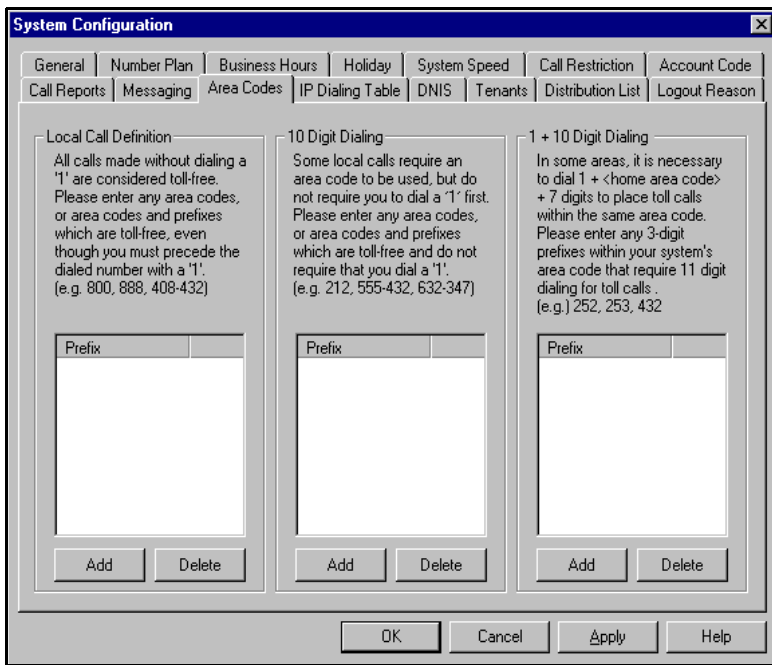


Figure 15. Area Codes window, System Configuration

Adding and Deleting Entries

To add entries to one of the three lists, click **Add** below the appropriate list box. In the dialog box that appears, type a number and click **OK**.

To delete an entry, select it and click **Delete**. You can select multiple entries for deletion by using **Ctrl-click**. Click **Apply** to save your changes and **OK** to save and close the window.

You can type an area code alone, or an area code + prefix if needed. When you type the area code and prefix, optionally you can connect them with a single hyphen—for example, 510-487, or 212-677. The optional hyphen is for your convenience and readability. Using the same examples, 510487 and 212677 are also valid entries.

Defining an IP Dialing Table

To use an Altiserv-to-Altiserv connection for voiceover IP, you need to configure the routing in the IP Dialing Table for each Altiserv system.

Note: To enable VoIP, you must have at least one Triton VoIP board installed and configured. (The IP Dialing Table is disabled unless there is at least one VoIP board installed.) You also must have assigned an IP Trunk Access code, as discussed in “Assigning Trunk, Feature, IP Trunk, & Route Access” on page 5-6, and you must set the VoIP codecs as discussed in “Setting VoIP Codecs” on page 8-11.

About the Location ID Digit Length

In the IP dialing table, you define the addresses of the remote locations and set a **Location ID Digit Length**. The dialing length sets the length of the **Location ID**, the number you define in the dialing table to identify each remote location.

The Location ID is used in dialing: the user dials the IP trunk access, followed by the location ID to identify the remote location, followed by the remote extension. For example, if the *IP trunk access* is **8**, the *location ID* is **27**, and the *extension* to reach is **837**, the user dials **8 27 837**.

The Location ID Digit Length can be set to None, 1, 2, or 3—a seemingly simple choice. However simple it seems, though, it needs to be given some thought before it is set. Location IDs are used system wide, and a coordinated configuration is recommended. It is highly recommended to use the same length for the location ID for all networked AltiServ systems. It may also be advantageous to use the same location IDs at all locations. For example, if the location ID for the Chicago office is 12 when dialed from both San Francisco and New York, users who travel will find it easier to work at multiple locations.

Use Caution Before Changing the Dialing Length

The dialing length can be changed without having to re-install or re-start AltiWare IP. However, if this number is changed, the location IDs are all altered—so that it is advisable to keep the original length if it works well.

If you increase the location ID length, the number 0 is added to the front of the location IDs. For example, if you change the length from 2 to 3, location IDs 02 and 27 will become 002 and 027 respectively.

If you decrease the number of digits in the location ID, the last digit is dropped from location IDs. For example, Location ID 240 becomes 24. There is an exception to this truncation method: if the leading digit is 0, it is dropped. For example, 048 becomes 48.

Defining the IP Dialing Table

To access the IP Dialing Table window, select **System Configuration...** on the **Management** menu, then click the **IP Dialing Table** tab.

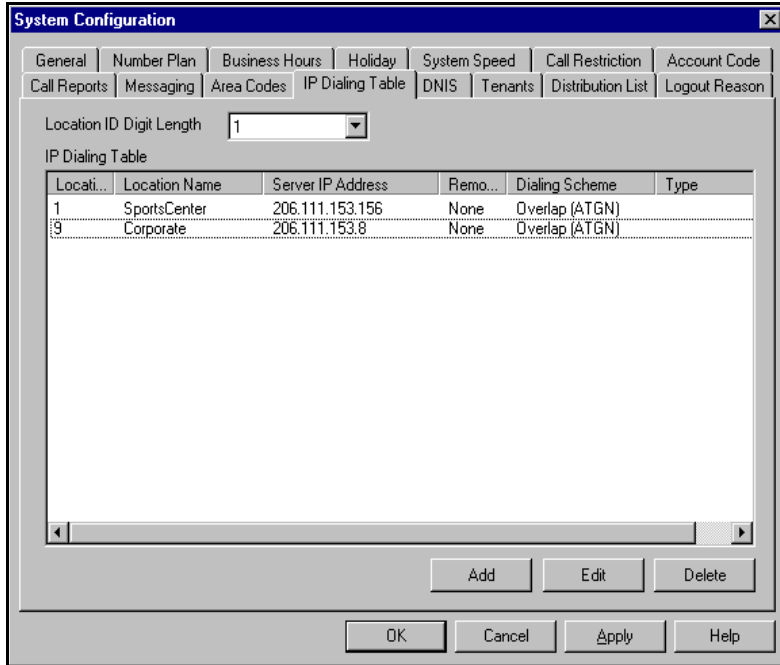


Figure 16. Dialing Table window, System Configuration


Setting the Location ID Digit Length

Set the length in the **Location ID Digit Length** drop-down list, noting the discussion about the length in the previous section.

Defining Remote Locations

To add a location, click the Add button to open an entry dialog box:

Defining an IP Dialing Table

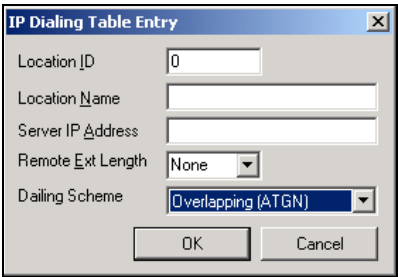

Define the attributes for the entry:

Parameter	Description
Location ID	A unique dialing number to connect to the remote location. The length of the number is of course the Location ID Digit Length described in “About the Location ID Digit Length” on page 5-28.
Location Name	A descriptive name of up to 15 characters to identify the location. This name may be used by Caller ID.
Server IP Address	<p>The remote server’s address in one of the following formats:</p> <ul style="list-style-type: none">• RFC assigned IP address (e.g. 100.100.100.100). IP addresses with prefixes of 10.0.0.0/8, 172.16.0.0/12 or 192.168.0.0/16 can only be used within private networks (Intranets).• Fully qualified DNS name (e.g., newyork.altigen.com), of up to 64 characters. <p>This IP address format is recommended over DNS names, since with the IP address, the application does not need to resolve the name.</p>
Remote Ext. Length	The length of extension digits at the remote location. Valid entries are None - 7, with “None” meaning not specified. Specifying the remote extension length is optional but highly recommended, since this information tells the system how long to wait for another entry before outpulsing (sending the digits).

Parameter	Description
Dialing Scheme	<p>Overlapping (ATGN) is best used with analog trunks to allow the terminal to omit part of the digits required to complete a call while buffering the remaining digits.</p> <p>Enbloc, used with digital (ISDN) trunks, allows the terminal to include all of the digits required to complete a call.</p>

Configuring DNIS Routing

When an incoming call comes through a trunk with DNIS or DID numbers, the system can route the call to the proper extension, Auto Attendant or operator based on the DNIS or DID number collected.

Note: DNIS supports only incoming T1, PRI, and analog DID trunks, and in the case of T1 and PRI DNIS works with incoming trunks that are *not* set up as tie trunks.

In order to locate an entry in the DNIS table for an incoming call, a full match is required. If there is no match in the **DNIS** routing table set up in this window, the system tries to match the number based on the DID number entered in the **General** page of **Extension Configuration** (see “Setting up Extensions” on page 8-3). If there is still no match, the system routes the call according to the **In Call Routing** page defined in **Trunk Configuration**.

To access DNIS routing, select **System Configuration...** on the **Management** menu, then click the **DNIS** tab.

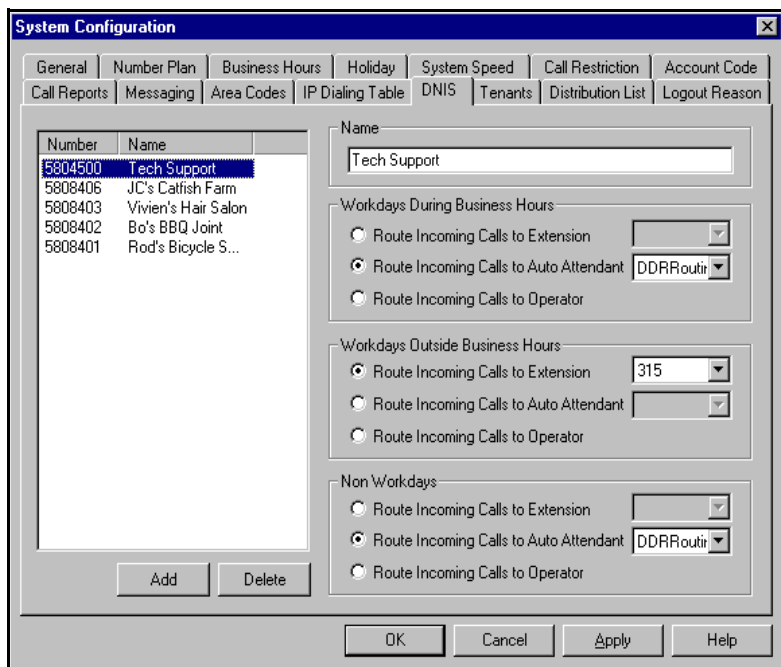


Figure 17. DNIS window, System Configuration

Adding and Deleting DNIS Route Entries

To add entries to the DNIS routing table, click the **Add** button. In the dialog box that appears, type in a **DNIS Number** and a descriptive **DNIS Name**, then click **OK**.

The number and name entries have the following requirements:

- The **DNIS Number** must be devoid of all characters EXCEPT “-” (hyphen), “*” (asterisk), and the numbers **0–9**. For example, 2529876 is an acceptable entry.
- The **DNIS Name** is descriptive and optional; it can be used to remind you about the nature of the number and routing. For example, you might give the 2529876 number the name, “Tech Support.”

To delete an entry, select it in the DNIS number list, then click **Delete**.

Defining the Routing

After adding an entry, you define it by first selecting it in the list. When you select an entry, its name and other defined attributes, if any, appear in the options at the right of the window. You can edit any of these attributes.

For each number, you can set routing for three distinct time periods defined in the Business Hours window (see “Setting Business Hours” on page 5-8):

- During Business Hours
- Outside Business Hours
- Non Workdays

Within each of these three time slots, you have the following routing options for incoming calls:

- Route to a particular extension selected in the drop-down list
- Route to a particular Auto Attendant number selected in the drop-down list
- Route to the operator

Using a Tenant Table

If several small businesses or groups want to share an Altiserv system, specific trunks can be assigned so that each company or group has its own set of extensions for outbound calling. Each business or group can be set up as a *tenant* in Altiserv, where you use the Tenants window to define the tenants, their call restrictions and call tracking.

The tenant IDs are matched on the one hand to extensions and on the other hand to trunks, so that extensions are matched to trunks, or, more precisely, extension tenant IDs are linked to trunk tenant IDs. This configuration eliminates the need to set up separate access codes for each tenant. Instead, all extensions can dial the *Route Access code* for outbound calls.

For information on Route Access, see “Assigning Trunk, Feature, IP Trunk, & Route Access” on page 5-6.

To access the Tenants window, select **System Configuration...** on the **Management** menu, then click the **Tenants** tab.

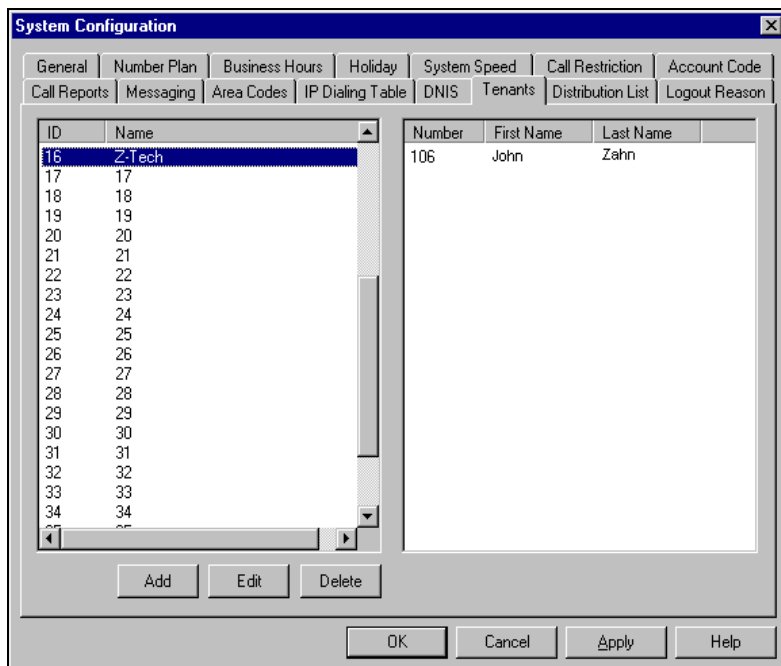


Figure 18. Tenant window, System Configuration

Configuring the Tenant Table

Configuring the tenant table involves first adding entries to the tenant list, then using Extension Configuration and Trunk Configuration to assign extensions and trunks, respectively, to tenant IDs.

To create tenant entries:

1. In the Tenant window, click the **Add** button to open a small Tenant Configuration dialog box.
2. In the dialog box, type in the **Tenant Name** and click **OK**. Then click the **Apply** button in the Tenant window. The tenant ID is assigned automatically and sequentially.
3. Repeat the above steps for all the tenants you want to add, then click **OK** to close the System Configuration window.

To assign extensions to tenant IDs:

1. Select **Extension Configuration...** on the **Management** menu to open the Extension Configuration General window.
2. For each extension you want to assign to a tenant ID:
 - a. In the Extension list, select and highlight the extension you want to assign to a tenant ID. Each extension can be assigned to only one tenant ID.
 - b. Select a tenant ID in the **Tenant** drop-down list under Personal Information, then click **Apply**.
3. Repeat the previous step for each extension you want to assign. When you're done, click **OK** to close the Extension Configuration window.

To assign trunks to tenant IDs:

1. Select **Trunk Configuration...** on the **Management** menu to open the Trunk Configuration General window.
2. For each trunk you want to assign to a tenant ID:
 - a. In the trunk list, select and highlight the trunk you want to assign to a tenant ID.
 - b. Select a tenant ID in the **Tenant Selection** drop-down list, then click **Apply**.
3. Repeat the previous step for each trunk you want to assign. When you're done, click **OK** to close the Trunk Configuration window.

Important: When creating Tenant entries for IP extensions, the IP trunk must have the same Tenant Name assigned as the IP extension.

Modifying the Tenant Table

To delete a tenant from the tenant window:

Highlight the ID number and click **Delete**.

If you delete a tenant ID that has been assigned to an extension or to a trunk, the extension and trunk assignments are reset to N/A (no assignment).

To edit the tenant name:

Double-click the name in the Tenant window (or select the name and click Edit), then change the name in the dialog box that appears.

To change the extension-to-tenant ID assignment:

Open the Extension Configuration General window, as discussed in the steps on the previous section under “To assign extensions to tenant IDs;,” and use the **Tenant** drop-down list to change the tenant ID assigned to any extension.

If a tenant ID is already assigned, you must change or remove the assignment from the old extension before you can assign it to a new one.

Note: If an extension is assigned to **N/A** in the **Tenant** drop-down list, the extension is able to access all trunks, even though the trunks have been assigned to tenants.

To change the trunk-to-tenant ID assignment:

Open the Trunk Configuration General window and use the **Tenant Selection** drop-down list to change the tenant ID assigned to any trunk.

Note: If a trunk is assigned to **N/A** in the **Tenant Selection** drop-down list, the trunk is accessible to all extensions, even though there are tenant assignments.

Creating Distribution Lists

The System Distribution Lists provide for forwarding voice mail messages to multiple recipients defined as list members. To forward a voice mail to all list members, a user need only enter the two-digit ID instead of entering numerous individual extensions.

You can create up to 100 distribution lists, each composed of up to 64 extensions. The extension list member can represent another distribution list.

Note: The *system* distribution lists discussed here are different from the *extension* distribution lists, which are configured through the phone sets or the Altiview or Altiview user applications.

To access the Distribution List window, select **System Configuration...** on the **Management** menu, then click the **Distribution List** tab.

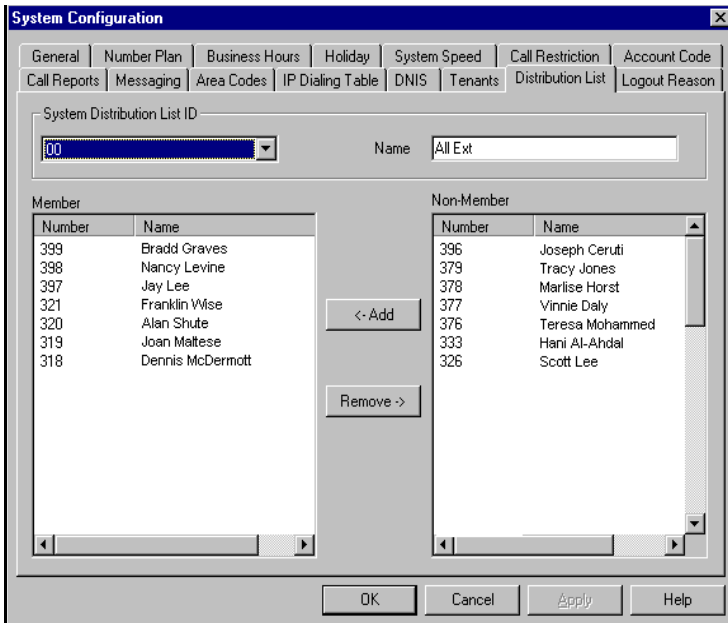


Figure 19. Distribution List window, System Configuration

Defining a Distribution List

1. In the Distribution List window, select an ID (0 – 99) in the **System Distribution List ID** drop-down list.

The list name, if any, now appears in the **Name** box; the members of the list are now displayed in the **Member** box, and other available extensions are displayed in the **Non-Member** box.

2. To give the list a name or change the existing name, type a descriptive name into the **Name** box.
3. To **add** a member, select the name(s) in the **Non-Member** list and click the **Add** button to move it to the **Member** list.

To **remove** a member, select the name(s) in the **Member** list and click the **Remove** button to move it to the **Non-Member** list.

You can select multiple names by using Ctrl-Click.

4. Click **Apply** to save your changes, or click **OK** to save and close the System Configuration window.

Setting Logout Reason Codes

In a workgroup environment, logout reason codes allow agents to specify why they are signing off from the workgroup, and the manager can view that information. If logout reasons are required, the system requests a reason at logout from the phone set and from the AltAgent application.

The Logout Reason window allows you to enable or disable the required entry of a logout reason, and it provides for defining up to 20 reason codes. A logout history can be tracked and stored for future analysis.

To access the Logout Reason window, select **System Configuration...** on the **Management** menu, then click the **Logout Reason** tab.

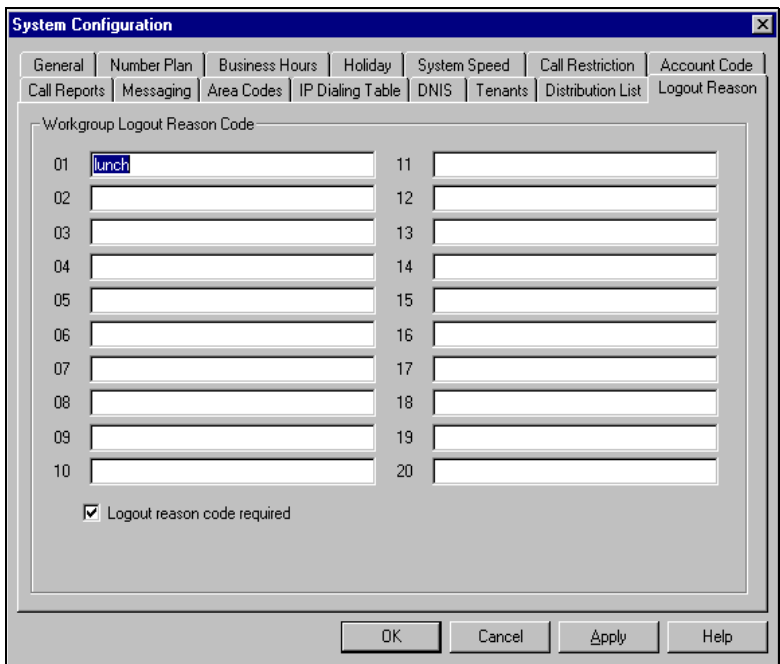


Figure 20. Logout Reason window, System Configuration

To require logoff reasons, check the **Logout reason code required** check box. If you don't want to require reason codes, deselect the check box.

To define reason codes, type the associated reason into the text box next to the code you want to associate with the reason.

Board Configuration

Board attributes and functions are accessible in the Boards window in the AltWare desktop.



Figure 1. Board window

For the board you want to configure, double click the board's icon in the **Boards** window to open the **Board Configuration** window.

Important: To implement some board configuration changes, you must shutdown and restart AltGen Switching Services by first choosing Shutdown Switching on the Services menu, which also closes AltAdmin, and then restarting AltAdmin.

Using the Triton Resource Board

The Triton Resource Board is a PCI bus telephony board that provides the ability for one extension to monitor other extensions (as set up in the Extension Configuration Monitor List, discussed in “Setting Up Monitor Lists” on page 8-48), and the barge-in ability. The Resource Board requires no complex configuration; you install it and run it. The Board ID must be the range of 0 to 15, and each Altiserv system supports a maximum of 2 boards.

Once installed and the system powered up, the board is displayed in the Board View window on the AltAdmin desktop, and you can use the barge-in and silent monitoring features without further board configuration.

Without the Resource Board installed, supervisors will hear an error tone if they try to perform a monitoring or barge-in operation.

Configuring the Quantum Board

Double click the board’s icon in the **Boards** window to open the **Board Configuration** window.

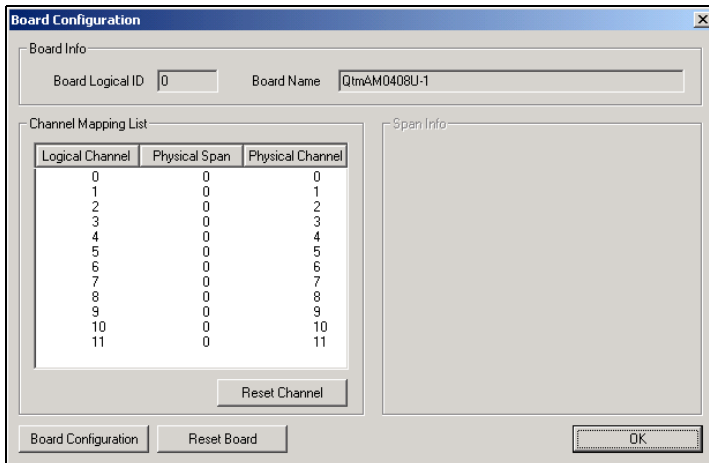


Figure 2. Board Configuration window (Quantum Board)

Use the Board Configuration window for the Quantum board to view the following attributes:

Parameter	Description
Board Info	<p>Board Logical ID: assigned by Altiserv.</p> <p>Board Name: the type of board installed in the system and board ID.</p> <p>Note: For Quantum boards in a <i>Windows 2000</i> system:</p> <ul style="list-style-type: none">the physical board ID 0 is not supportedthe valid physical board IDs are 1–15
Channel Mapping List	<p>Logical Channel, Physical Span, and Physical Channel for the entire board.</p> <p>To reset the channel, select the channel to reset and click the Reset Channel button, then click OK.</p> <p>Note: Depending on whether the channel is a line or a trunk line, double clicking a channel in this window invokes either a Line Properties window (see “Quantum Line Properties” on page 8-15, or a Trunk Line Properties window (see “Quantum Trunk Properties” on page 7-6).</p>
Span Info	Not available for Quantum boards.
Board Configuration	Opens a diagnostic dialog box.

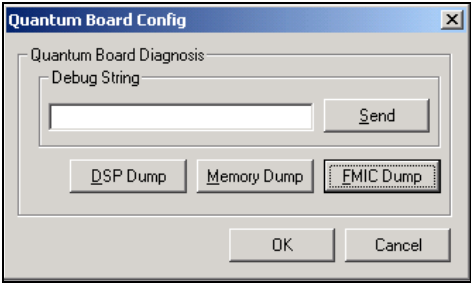


Figure 3. Quantum Board Debug

You can send a debug string to the board, or you can do a DSP Dump, Memory Dump, or FMIC Dump.

Parameter	Description
Reset Board	Resets the board, after you confirm by accepting a warning that <i>resetting a board will disconnect all calls in progress on that board</i> . Important: Be sure to inform all users before resetting a board.

Configuring the Triton Analog Extension Board

Double click the board’s icon in the **Boards** window to open the **Board Configuration** window.

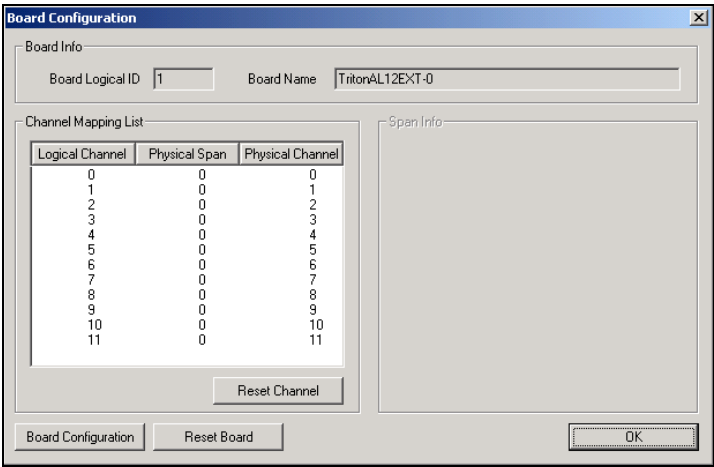


Figure 4. Board Configuration window (Triton Analog)

Use the Board Configuration window to view the following attributes:

Parameter	Description
Board Info	Board Logical ID: assigned by Altiserv Board Name: the type of board installed in the system and board ID. Note: This is informational only and cannot be edited.

Parameter	Description
Channel Mapping List	<p>Shows the board Logical Channel, Physical Span, and Physical Channel.</p> <p>To reinitialize channels, select the channel to reset and click the Reset Channel button, then click OK.</p> <p>Note: This is informational only and cannot be edited.</p> <p>Note: Double clicking a channel in this window invokes a channel configuration window. Refer to the Line Properties button in Extension Configuration. See “Setting the Line Properties” on page 8-14.</p>
Span Info	Not available for Triton Analog Extension boards.
Board Configuration	Displays the board’s serial number.
Reset Board	<p>Resets the board, after you confirm by accepting a warning that <i>resetting a board will disconnect all calls in progress on that board</i>.</p> <p>Important: Be sure to inform all users before resetting a board.</p>

Configuring the Triton Analog Trunk LS/GS and LS Boards

The Triton Analog Trunk board is a long form factor PCI telephony card that supports 12 trunks, and is available in two models; loop start/ground start (LS/GS) and loop start (LS). Both models have the same features regarding LS. The LS/GS board is required when ground start trunks may be required.

Double click the board’s icon in the **Boards** window (see Figure 1) to open the **Board Configuration** window.

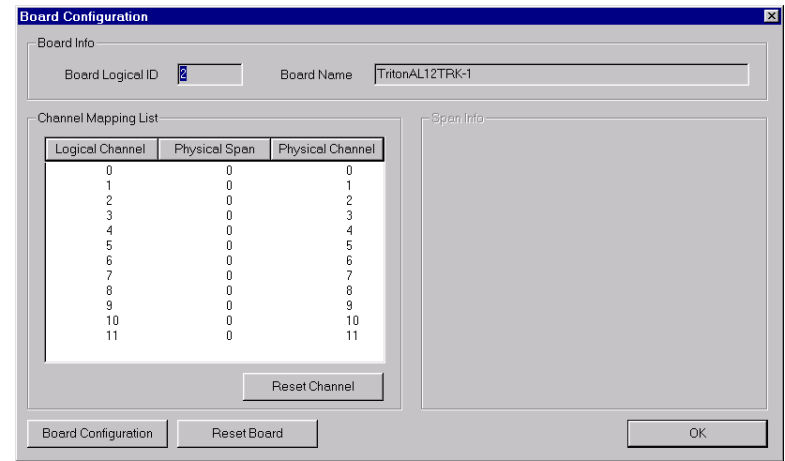


Figure 5. Board Configuration window (Triton Analog Trunk)

The Board Configuration window contains the following attributes:

Parameter	Description
Board Info Group	Board Logical ID: assigned by Altiserv. Board Name: the type of board installed in the system and board ID. Note: This is informational only and cannot be edited.
Channel Mapping List Group	Shows the board Logical Channel , Physical Span , and Physical Channel . To reinitialize channels, select the channel to reset and click the Reset Channel button, then click OK . Note: This is informational only and cannot be edited. Note: Double clicking a channel in this window invokes a channel configuration window. See “Triton Analog Trunk Properties” on page 7-9.
Span Info	Not available for Triton Analog Trunk LS/GS and LS boards.

Parameter	Description
Board Configuration	Displays the board’s serial number.
Reset Board	Resets the board, after you confirm resetting by accepting a warning. Important: Resetting a board will disconnect all calls in progress on that board! Be sure to inform all users before resetting a board.

Configuring the Triton VoIP Board

Voice over IP for AltiWare OE

VoIP for AltiWare OE runs on an H.323 platform that allows voice calls to be made through an IP network. It includes an integrated VoIP gateway to convert voice calls into IP packets and transmit them through the IP network. It also has the capability of networking multiple AltiServes into a virtual PBX network. This enables calls to be made through the IP network, which allows for significant savings in toll charges.

Triton VoIP Board

The Triton VoIP board is used to provide voice processing resources for AltiWare OE, similar to the way Quantum telephony boards are used for analog trunks and extension lines. Unlike the Quantum telephony boards, however, only IP trunks are provided on the Triton VoIP board. AltiWare VoIP uses DSP engines residing on the Triton VoIP board to perform the voice processing functions needed for H.323 devices. Quantum and Triton boards are connected via MVIP connectors.

The Triton VoIP board is available as a 12-port and 30-port board.

Important: Triton 30-port VoIP boards are recommended for use with IP extensions only or for tie-trunk configurations to other 30-port VoIP boards. Additionally, to prevent users from directly accessing the 30-port boards—which use the G.711 codec only—for calls to AltiWare servers or other IP gateways that may require the G.723 codec, it is recommended that the trunk access code is set to “None” for trunks on 30-port IP boards. (See “Setting General Trunk Attributes” on page 7-3 for more

detail on setting access codes.) If you still want users to have access to this trunk for outgoing calls, you can set it up through Outcall Routing (see *Chapter 9, Out Call Routing Configuration*).

Features

The following features are automatically enabled during AltiWare OE installation.

PCI Plug and Play

Triton VoIP boards fit into standard PCI slots. Once installed, it is recognized by AltiWare OE and appears on the Boards window of AltiWare Administrator.

Device Driver

A kernel mode device driver is implemented for the Triton VoIP board. The device driver provides access to resources on the Triton VoIP board to applications.

Port Specifications

See *Chapter 2, System Limitations*, for limitations on configuring Triton VoIP boards and ports.

Network Configuration Guidelines for VoIP

Real-time applications such as voice communications require a networking environment that meets certain requirements to deliver and maintain good voice quality. The following network configuration guidelines are highly recommended when using AltiWare's VoIP features. ISP/Intranet Quality of Service (QoS)

- If you subscribe to the public IP network or use your own Intranet, make sure the maximum network delay is less than 150 milliseconds.
- Also, the typical packet loss rate should be less than 5 percent.

WAN Bandwidth

- If you are running G.723.1 compression, you should reserve 17 kbps WAN link bandwidth for each channel.

- You should reserve a minimum of 75 kbps WAN link bandwidth for each IP G.711 channel.
- When a small data application (e.g. one FTP transfer session) is running across the same WAN as AltiWare IP, make sure bandwidth is reserved for data traffic. An example would be, if you have 64 kbps WAN link, you can run one G.723.1 session concurrently with one FTP file transfer session, provided that the router fragments each TCP packet to 500 bytes.
- The Jitter Buffer should be adjusted according to the bandwidth allocated to data traffic. For example, a long Ethernet packet (approximately 1500 bytes) traversing through a WAN which is allocated with 256 kbps of data traffic bandwidth will take about 50 milliseconds. The Jitter Buffer value should be set to this WAN link transmission delay plus the typical network jitter delay. Refer to VoIP Trunk Configuration for more information on how to configure the Jitter Buffer.
- If you have heavier data applications running concurrently, the bandwidth reserved for data traffic should be increased.
- If your router supports multilink or TCP fragmentation, configure your WAN router to use smaller packet sizes, e.g. 500 bytes.

WAN Router Configuration

- The router which connects your LAN and the WAN should support priority queuing.
- Configure the router so that the IP/UDP packets being sent to and from an IP station have higher priority than the packets generated by other stations on the same network. Please consult your router manufacturer for more information on setting up this configuration.

Firewall Configuration

Please note the following very **important** guidelines when working with a firewall on your network:

- If a firewall is used to protect your network access security, reconfigure the firewall (as described in “Firewall Considerations” on page 6-23) to open up TCP and UDP ports to the IP system’s IP address. This allows IP’s voice and H.323 packets to pass through the firewall freely. If the firewall supports H.323 protocol, configure the firewall using H.323 instead of opening up the specific ports.

- Ensure that the rules to permit IP's H.323 traffic are at the beginning of your access filter list. This will minimize the delay of latency-sensitive voice packets. This is **ESPECIALLY** important with long access lists and/or slow routers.

Network Using NAT

If you plan to connect to your AltiServ system via the Internet and your router or Internet access provider is using Network Address Translation (NAT), please note that most NAT implementations **DO NOT** support H.323.

- You are probably using NAT if **both** of the following conditions apply:
 - Your AltiServ server's IP address matches any of the following numbers (where x is any number from 0-255):
 - 10.x.x.x
 - 172.16.x.x to 172.32.x.x
 - 192.168.x.x
 - You are able to connect to the Internet directly **WITHOUT** using a proxy server.
- Contact your router/firewall vendor to obtain a software update for your networking equipment, or obtain routable address space from your Internet provider. If you are unsure whether or not you are using NAT, contact your router/firewall vendor or Internet provider.

Network Configuration Guidelines for the Alti-IP 600

The following guidelines (specific to the Alti-IP 600 Phone) should be taken into consideration as a precursor to configuring your network for use with NAT (see *Network Configuration Guidelines* below).

- DHCP is recommended to reduce the risks for duplicating IP addresses. AltiServ provides seamless support for AltiGen IP Phones using dynamic IP addresses. Select Dynamic IP address for IP Extensions in AltiAdmin.
- A switch is recommended at the corporate network, rather than a hub, for IP phone connection. This can reduce packet loss ratio.

- If there are not enough IP addresses in the corporate network, refer to “Private and Public Network Configuration (AltiWare with Both Private and Public IP Addresses)” on page 6-18. If DHCP is used in this configuration, the administrator will need to perform the following for the Alti-IP 600:
 1. Configure the DHCP server to assign a private network IP address for each phone based on the phone’s MAC address (printed on the label on the bottom of the IP Phone.
 2. Private IP address needs to be added to AltiServ and TFTP server as well.
 3. Launch an AltiGatekeeper with private IP address and point to AltiWare’s private IP address.

Configuration Guidelines for NAT

Note: This section only applies to Alti- IP 600 phones or NetMeeting integrated with AltiView. For third party IP Phones, refer to AltiGen’s NAT Application Note.

The following section discusses the use of NAT (Network Address Translation) with AltiWare IP functionality. Configurations and limitations for using NAT are addressed, and network diagrams explain the topology of these configurations. The first 3 examples involve AltiWare configurations for remote IP phones with a public IP address, with a private IP address behind NAT, and with both private and public IP addresses, respectively. The last example involves configuration for a remote branch office environment where multiple IP phones require connection to AltiWare.

Notes:

- When AltiWare and the local IP phone both use a public IP address and a remote IP phone is behind NAT, it is recommended that you use the NAT configurations as described in “Public Network Configuration (AltiWare with Public IP Address)” on page 6-14.
- When AltiWare and local IP phones use private IP address behind NAT, it is recommended that you use the NAT configurations as described in “Private Network Configuration (AltiWare with private IP address and behind NAT)” on page 6-16.

- When a public IP address is used in the corporate network and there is insufficient public IP address space for the IP phones, it is recommended that you use the NAT configurations as described in “Private and Public Network Configuration (AltiWare with Both Private and Public IP Addresses)” on page 6-18.
- When the remote offices have more than 1 (one) IP phone behind NAT, it is recommended that you use the VPN configurations as described in “VPN Network Configuration (Connecting to AltiWare with VPN)” on page 6-20. You may also apply this configuration in conjunction with the first 3 examples.
- For single remote IP phones, it is recommended that you use the NAT configurations as described in the first 3 examples.

IP Phone Configuration

When configuring the IP phone, you should specify the server’s IP address, referred to as AWIP “AltiWare’s IP address.” To configure AWIP for AltiGen IP phone, please refer to “AltiGen IP Phone Quick Reference” and edit the AW Server setting at the SYSTEM menu. For NetMeeting integrated with AltiView, the AWIP is the AltiView’s login server IP address.

H.323 NAT

The NAT router must support H.323. The router should know the H.323 protocol and be able to translate the private IP address into a public IP address in H.323 packets. Normally, you should configure the router to forward all the H.323 traffic to a specified IP address of H.323 endpoint behind the NAT. This H.323 endpoint can be one of AltiWare's or the IP phone. (The IP address of this H.323 endpoint is referred to as H323FWIP - "H.323 Forward IP address.")

Private IP address

Only the private IP address is used in private network - the public router will not route the packet that has a private IP address as its destination. (All IP addresses beginning with 192.168.x.x are referred to as private IP addresses.)

Remote IP Phone Connecting Through DSL or Cable Modem

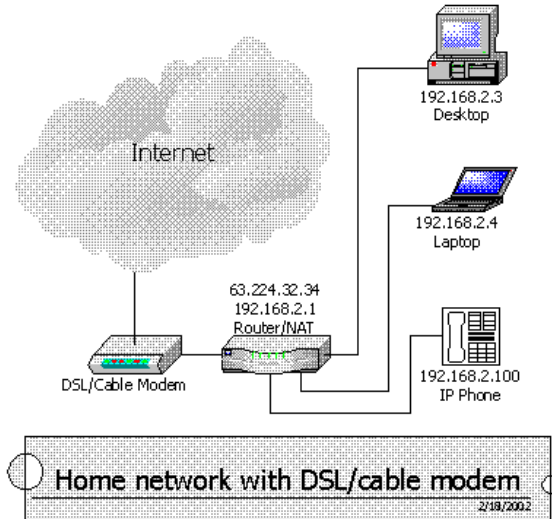


Figure 6. Home Network with DSL/Cable Modem

Figure 1 shows a typical home network layout with DSL/cable modem with an IP phone and PCs. A router that supports H.323 over NAT is required between the DSL/Cable Modem and IP phone and PCs, if the DSL/Cable Modem does not support H.323 over NAT. If this router provides multiple 10/100 BaseT ports for devices behind NAT, the IP phone and PCs plug into these ports. Otherwise, a hub or switch is necessary to connect this router, IP phone and PCs.

In the case where the DSL/Cable Modem supports H.323 over NAT, the router and the DSL/Cable Modem can be converged into a single system. Please refer to "Setup" on page 6-14 for detailed configuration of IP phones and routers.

Public Network Configuration (AltWare with Public IP Address)

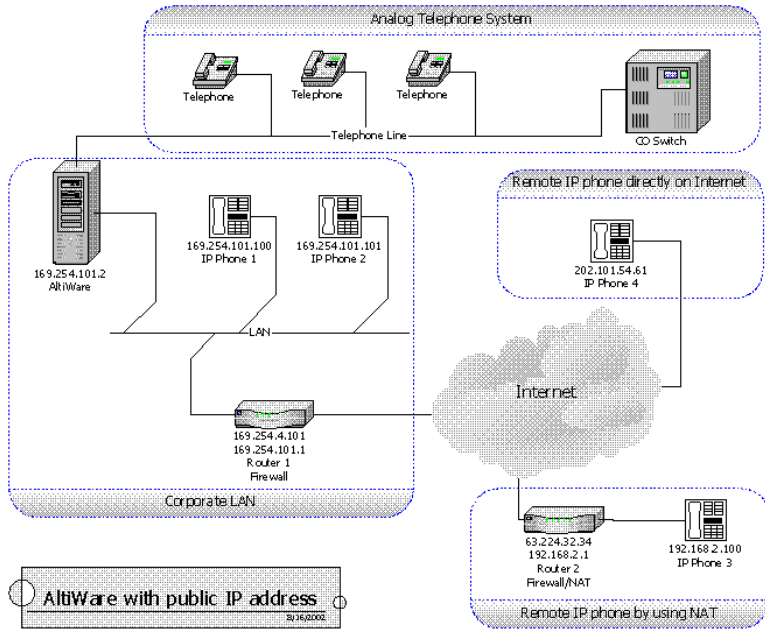


Figure 7. AltWare with Public IP Address

Figure 2 shows a network layout in which AltWare is installed and running on a host with public IP address 169.254.101.2. The local IP phones, IP Phone 1 and IP Phone 2, use public IP addresses 169.254.101.100 and 169.254.101.101, respectively. There are two remote IP phones. IP Phone 3 with private IP address 192.168.2.100 connects to the Internet via the Router 2, which must also support H.323 NAT. Router 2 can also sit behind a DSL/Cable Modem. Another remote IP phone, IP Phone 4, with public IP address 202.101.54.61, connects to the Internet directly.

Setup

The following components should be configured:

For the corporate LAN:

- **AltWare**

The public IP address of Router 2 should be configured as the IP address of this IP extension in AltWare for IP Phone 3. If it is

changed dynamically, then assign dynamic IP address configuration for that extension.

- **IP Phone 1 and IP Phone 2**

When configuring the local IP phones, IP Phone 1 and IP Phone 2, you should set up the AWIP to AltiWare's IP address, which is 169.254.101.2.

- **Router 1**

Router 1 is a normal router and the firewall is optional. It is recommended that the user install a firewall for security reasons. However, you should configure the firewall to allow the H.323 traffic to reach AltiWare. For firewall considerations, refer to "Firewall Considerations" on page 6-23.

For the Remote IP phone by using NAT:

- **IP Phone 3**

When configuring remote IP Phone 3, you should set up the AWIP to AltiWare's IP address, which is 169.254.101.2. Note that only one (1) IP phone can be behind the NAT and connect to the AltiWare through the H.323 NAT.

- **Router 2**

Router 2 is a router supporting H.323 NAT with the remote IP phone connected. You need to set up the H.323FWIP for this H.323 NAT to the private IP address of IP Phone 3, which is 192.168.2.100. For information on how to set up the H.323 traffic forwarding for H.323 NAT, please refer to "Setting up H.323 Traffic Forwarding for H.323 NAT" on page 6-24.

For the Remote IP Phone Directly on Internet:

- **IP Phone 4**

When remotely configuring IP Phone 4, you should set up the AWIP to AltiWare's IP address, which is 169.254.101.2.

For an H.323 IP Call from Another AltiWare on Internet:

Another AltiWare can make a H.323 IP call to this AltiWare by calling the IP address 169.254.101.2.

Private Network Configuration (AltiWare with private IP address and behind NAT)

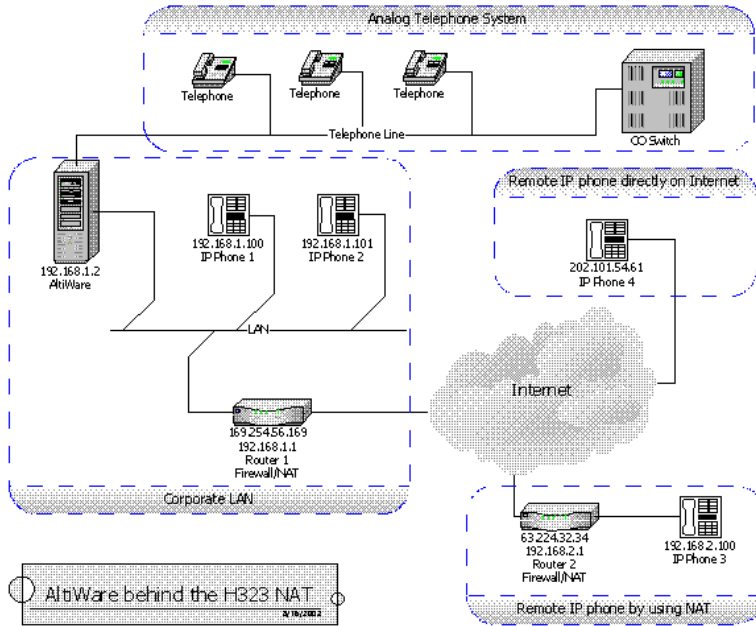


Figure 8. AltiWare behind NAT

Figure 3 shows a private network - 192.168.1.0, where the AltiWare is installed and running on a host with a private IP address 192.168.1.2.

Router 1 is a H.323 NAT router. The local IP phones, IP Phone 1 and IP Phone 2, use the private IP addresses 192.168.1.100 and 192.168.1.101, respectively. There are two remote IP phones; IP Phone 3 with a private IP address 192.168.2.100 connects to the Internet via Router 2, which must also support H.323 NAT. Router 2 can also sit behind a DSL/Cable Modem. Another remote IP phone, IP Phone 4, with a public IP address 202.101.54.61, connects to the Internet directly.

Setup

For the Corporate LAN:

- **AltiWare**

The public IP address of Router 2 should be configured as the IP address of this IP extension in AltiWare for IP Phone 3. If it is

changed dynamically, then assign dynamic IP address configuration for that extension.

- **IP Phone 1 and IP Phone 2**

When configuring local IP Phone 1 and IP Phone 2, you should set up the AWIP to AltiWare's IP address 192.168.1.2.

- **Router 1**

Router 1 is also a H.323 NAT. You need to set up the H.323FWIP for this H.323 NAT to the private IP address of AltiWare 192.168.1.2. For information on how to set up the H.323 traffic forwarding for H.323 NAT, please refer to “Setting up H.323 Traffic Forwarding for H.323 NAT” on page 6-24.

For the Remote IP Phone Using NAT:

- **IP Phone 3**

When configuring remote IP Phone 3, you should set up the AWIP to Router 1's public IP address, which is 169.254.56.169. Note that only ONE (1) IP phone can be behind the NAT and connect to the AltiWare through the H.323 NAT.

- **Router 2**

Router 2 is a router supporting H.323 NAT with the remote IP phone connected. You need to set up the H.323FWIP for this H.323 NAT to the private IP address of IP Phone 3, which is 192.168.2.100. For information on how to set up the H.323 traffic forwarding for H.323 NAT, please refer to “Setting up H.323 Traffic Forwarding for H.323 NAT” on page 6-24

For the Remote IP Phone Directly on Internet:

- **IP Phone 4**

When configuring remote IP Phone 4, you should set up the AWIP to Router 1's public IP address, which is 169.254.56.169.

For an H323 IP Call from Another AltiWare on Internet:

Another AltiWare can make an H.323 IP call to this AltiWare by calling Router 1's public IP address, which is 169.254.56.169.

Private and Public Network Configuration (AltiWare with Both Private and Public IP Addresses)

(Supported in Release OE 4.5 and higher)

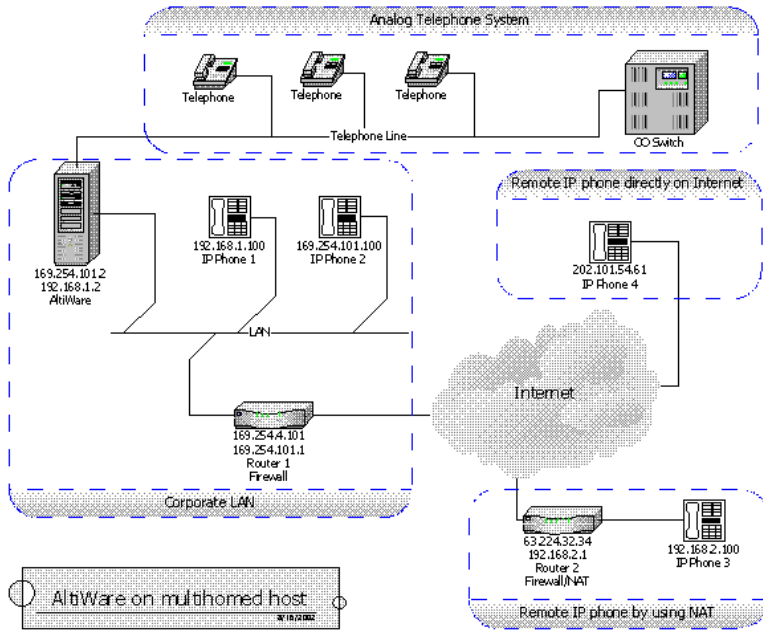


Figure 9. AltiWare on Multi-Homed Host

In the case of insufficient public IP addresses for local IP phones, IP phones can be located in a private network. With private IP addresses assigned, when assigning two IP addresses (one public and one private) to AltiWare, H.323 NAT is not required in the local network.

Figure 4 shows this network layout, where the AltiWare is installed and running on a multi-homed host with private IP address 192.168.1.2 and public IP address 169.254.101.2.

IP Phone 1 uses the private IP address 192.168.1.100 and IP Phone 2 uses the public IP address 169.254.101.100. There are two remote IP phones. IP Phone 3 with private IP address 192.168.2.100 connects to the Internet via the Router 2, which must also support H.323 NAT. Router 2 can also sit behind a DSL/Cable Modem. Another remote IP phone one, IP Phone 4, with a public IP address 202.101.54.61, connects to the Internet directly.

Setup

For the Corporate LAN:

- **AltiWare**

The public IP address of Router 2 should be configured as the IP address of this IP extension in AltiWare for IP Phone 3. If it is changed dynamically, then assign dynamic IP address configuration for that extension.

Important: If there are two network cards on this multi-homed host, when configuring the network cards, you should only set the default gateway for the public interface network card. PLEASE LEAVE THE DEFAULT GATEWAY FOR PRIVATE INTERFACE NETWORK CARD EMPTY.

- **IP Phone 1**

When configuring the local IP phone with private IP address, IP Phone 1, you should set up the AWIP to AltiWare's private IP address, which is 192.168.1.2.

- **IP Phone 2**

When configuring the local IP phone with public IP address, IP Phone 2, you should set up AWIP to AltiWare's public IP address, which is 169.254.101.2.

- **Router 1**

Router 1 is a normal router and the firewall is optional. It is recommended that the user install a firewall for security reasons. However, you should configure the firewall to allow the H.323 traffic to reach AltiWare. For firewall considerations, refer to “Firewall Considerations” on page 6-23.

For the Remote IP Phone Using NAT:

- **IP Phone 3**

When configuring remote IP phone 3, you should set up the AWIP to AltiWare's public IP address, which is 169.254.101.2. Note that only one (1) IP phone can be behind the NAT and connect to the AltiWare through the H.323 NAT.

- **Router 2**

Router 2 is a router supporting H.323 NAT with the remote IP phone connected. You need to set up the H.323FWIP for this H.323 NAT to the private IP address of IP Phone 3 192.168.2.100. For information on how to set up the H.323 traffic forwarding for H323

NAT, please refer to “Setting up H.323 Traffic Forwarding for H.323 NAT” on page 6-24.

For the Remote IP Phone Directly on Internet:

- **IP Phone 4**

When configuring remote IP Phone 4, you should set up the AWIP to AltiWare's public IP address, which is 169.254.101.2.

For an H.323 IP Call from Another AltiWare on Internet

Another AltiWare can make an H.323 IP call to this AltiWare by calling the AltiWare's public IP address, which is 169.254.101.2.

VPN Network Configuration (Connecting to AltiWare with VPN)

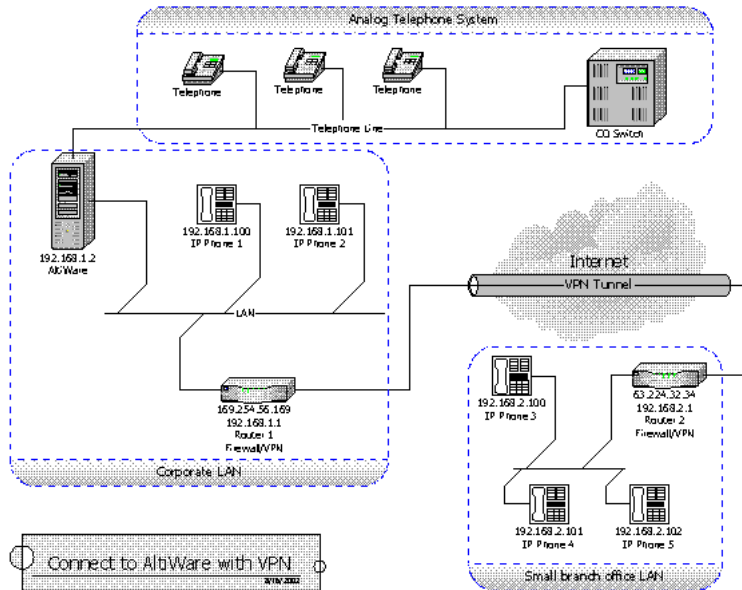


Figure 10. AltiWare with VPN

In a small branch office, there are more than one IP phones with private IP addresses that require connection to AltiWare. Due to fact that H.323 NAT only allows one IP phone behind it, a VPN solution can be used to meet this requirement.

Figure 5 shows a network layout in which there are two private networks, the corporate LAN and branch office LAN. The VPN tunnel connects the two private networks such that the two networks access each other with a private IP address.

In the corporate network, AltiWare and AltiGatekeeper are installed and running on a host with private IP address 192.168.1.2. This gatekeeper redirects requests from local IP phones and from remote IP phones through VPN.

Both Router 1 and Router 2 are VPN-capable and compatible with each other. (It is recommended that the routers come from same vendor.) A VPN tunnel exists between these two routers. The local IP phones, IP Phone 1 and IP Phone 2, directly connect to the corporate network with private IP address 192.168.1.100 and 192.168.1.101. And the three remote IP phones, IP Phone 3, IP Phone 4 and IP Phone 5, connect to the branch office network with private IP addresses 192.168.2.100, 192.168.2.101 and 192.168.2.102, respectively.

Setup

For the Corporate LAN:

- **AltiWare**

AltiWare is installed and running at same host with private IP address 192.168.1.2.

- **IP Phone 1 and IP Phone 2**

When configuring the local IP Phone 1 and IP Phone 2, you should set up the AWIP to AltiWare's IP address, which is 192.168.1.2.

For the Branch office LAN:

- **IP Phone 3, IP Phone 4 and IP Phone 5**

When configuring the remote IP phones, IP Phone 3, IP Phone 4 and IP Phone 5, you should set up the AWIP to AltiWare's IP address, which is 192.168.1.2.

For the VPN Tunnel between the Two Private Networks:

You **must** set up a VPN tunnel to connect the two private networks. The VPN setup procedure may be complicated and is generally performed by a professional IT technician.

The following minimum guidelines need to be considered for setting up the VPN tunnel:

- **WAN Bandwidth** - should be greater than the aggregate of maximum VoIP session bandwidth usage. Each G.711 codec requires 17 Kbps and each G.723.1 codec requires 85 Kbps.
- **QoS** - if the IP WAN network provides QoS (Quality of Service), it should be configured to honor VoIP RTP packet transmission.

An easy example for a VPN resolution is with the Linksys EtherFast VPN router¹. Router 1 and Route 2 are routers supporting VPN. When configuring these VPN routers, the following information is needed. (Also, please refer to the Router's User Guide for more detailed information.)

Router 1's Setting

Local Secure Group: <i>(specifies the local network which can access the VPN tunnel at the corporate network)</i>	Subnet IP: 192.168.1.0 (Corporate Network)	Subnet Mask: 255.255.255.0
Remote Secure Group: <i>(specifies the remote network which can access the VPN tunnel at the branch office network)</i>	Subnet IP: 192.168.2.0 (Branch Office Network)	Subnet Mask: 255.255.255.0
Remote Security Gateway: <i>(specifies the public IP address of the remote gateway which can access the VPN tunnel at the branch office)</i>	63.224.32.34 (Router 2's public IP Address)	

Router 2's Setting

Router 2's public IP address should be a fixed IP address.

Local Secure Group: <i>(specifies the local private network in the branch office, which can access the corporate network through VPN)</i>	Subnet IP: 192.168.2.0 (Branch Office Network)	Subnet Mask: 255.255.255.0
Remote Secure Group: <i>(specifies the corporate network, which can be accessed by stations in this local private network through the VPN tunnel)</i>	Subnet IP: 192.168.1.0 (Corporate Network)	Subnet Mask: 255.255.255.0

¹ Linksys is for reference only. AltiGen has not certified this product or any other router at this time.

Remote Security Gateway:
(specifies the public IP address of the
corporate VPN-enabled gateway)

169.254.56.159 (Router 1's public IP Address)	
---	--

Firewall Considerations

If you are using a firewall in the AltWare OE 4.5 environment, the following are the network ports used:

Client	Server	TCP	UDP
AltAdmin ^a	AltWare DCOM	135	135
AltConsole	AltLink +	10025	
AltControl	AltLink+	10025	
AltReach	AltLink	10015	
AltView/AltAgent	AltLink+	10025	
	VM Service	10028	
Supervisor	AltLink+	10025	
	Internal/External CDR Logger	10027	
CDRSearch	AltLink+	10025	
	Internal/External CDR Logger	10027	
TAPI Client	TAPI Gateway	10026	
AltGen IP Phone	AltGen IP Phone Service	10032	
VoIP H.323/H.225	Gatekeeper		1718, 1719
VoIP Message Waiting	VoIP H.323/H.225	1720	
	VoIP Message Waiting	49151 (Quicknet IP ext only)	
VoIP H.245	VoIP H.245	From 49152 to N ^b	
VoIP RTP	VoIP RTP		
VoIP ATPS	VoIP ATPS	10032	
Web Client	AltLink+	10025	
	NetMeeting Chat	1720	
	plus VoIP ports described above		

Client	Server	TCP	UDP
Polycom			Between 2222-2242 and 1718/ 1719

- a. It is recommended that this be run only in an **intranet**.
- b. $N=49152 + (62 * \text{number of boards}) - 1$

Setting up H.323 Traffic Forwarding for H.323 NAT

When you configure the H.323 NAT router, it can forward the IP traffic to a specified private IP address based on the destination port in the TCP/IP or UDP packets. When an H.323 endpoint is behind the H.323 NAT, you should set up the forwarding to a private IP address of this H323 endpoint.

If this H.323 endpoint is AltiWare, the NAT router must be configured to forward the following ports to the H.323 endpoint's private IP address:

TCP	UDP	Description
10032	1718	for phone service
1720		for H.225
$49152 \sim N^a$		for H.245 and RTP/RTCP

a. $N=49152 + (62 * \text{number of VoIP boards}) - 1$

If this H.323 endpoint is an AltiGen IP Phone, the NAT router must be configured to forward the following ports to the H.323 endpoint's private IP address:

TCP	UDP	Description
1720		for H.225
30040 ~ 30042		for H.245
	30000 ~ 30001	for RTP/RTCP

If this H.323 endpoint is NetMeeting integrated with AltiView, you need to set all unknown TCP/UDP ports to be forwarded to the IP phone's private IP address. This is usually referred to as DMZ port forwarding in most NAT routers.

Setting Up an AltiWare-to-AltiWare IP Network

Two or more AltiWare systems can be networked together to provide extension-to-extension connections via IP trunk calls. Users may dial a remote AltiWare's auto attendant or direct dial to an extension, without having to dial out through the PSTN. A diagram illustrating a multiple AltiWare-to-AltiWare connection is provided below and is referred to as an example throughout the configuration instructions below.

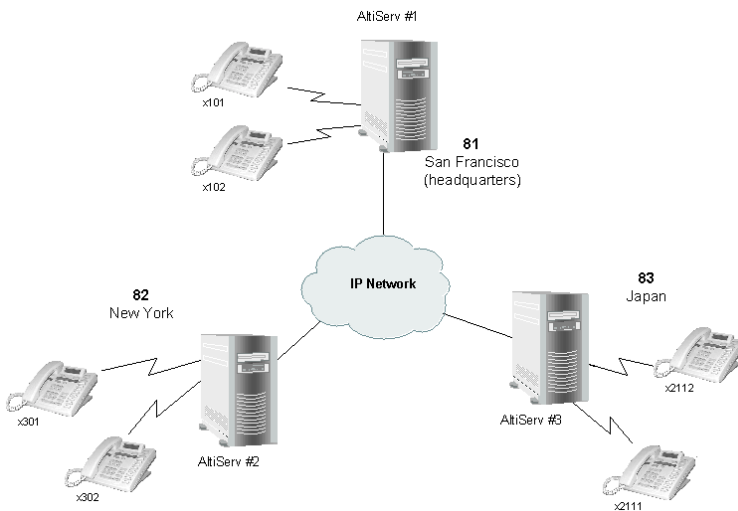


Figure 11. AltiServ-to-AltiServ Connection

Follow the steps below to configure IP trunks for an AltiWare-to-AltiWare tie-trunk line connection:

1. Confirm that the correct number of Triton VoIP boards are installed and connected by checking the **Boards** window on the Main Window of AltiWare Administrator. Refer to "Boards View Window" on page 4-5 for more details about this window.
2. Assign the IP trunk access code on the **Number Plan** tab window of **System Configuration**. See "IP Trunk Access" on page 5-7.

3. Configure general trunk parameters on the **General** tab window of **Trunk Configuration**. See “Setting General Trunk Attributes” on page 7-3.
4. Configure the dialing plan for connection to remote AltiWare systems on the **IP Dialing Table** tab window of **System Configuration**. Set the **Number of Dialed Digits** to “None.” Refer to “Defining the IP Dialing Table” on page 5-29.
5. Set the VoIP codecs so that servers use the same codec. See “Setting VoIP Codecs” on page 8-11.
6. Repeat steps 1 through 5 for all local and remote AltiWare systems that are to be networked via tie-trunk line connection.

This completes the AltiWare-to-AltiWare network connection. Your organization is now ready to make and receive IP trunk calls through public or private IP networks.

Note: Extension users should refer to the *AltiView* and *AltiServ User Guide* for instructions on how to dial a remote AltiServ. Also, be sure to distribute the Remote Locations Dialing Chart with your organization’s unique dialing plan. This chart is available in the *AltiView* and *AltiServ User Guide*.

Board Installation

Double click the board’s icon in the **Boards** window (see Figure 1) to open the **Board Configuration** window.

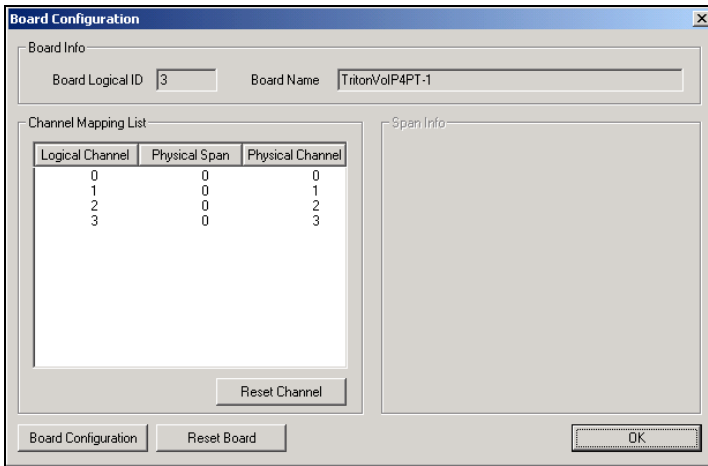


Figure 12. Board Configuration window (VoIP Board)

The **Board Configuration** window for the Triton VoIP board displays the same options as the Quantum board, which are discussed in “Configuring the Quantum Board” on page 6-2.

The **Board Configuration** button invokes the **Triton VoIP Trunk Properties** window, which displays the board serial number and displays line settings. Refer to “Triton VoIP Trunk Configuration” on page 7-13 for more detail.

Troubleshooting—Common Symptoms and Solutions

The following are some of the most common problems you may encounter and a list of steps to troubleshoot and resolve these problems.

Poor Voice Quality

When voice quality is poor, try the following:

1. **Perform a Loop-Back Test.** Call yourself by dialing out and dialing back into yourself. If you don’t have any problems performing this test, the problem is most likely in the network or at the remote site.
2. **Check Traffic Between AltiWare IP Stations.** Open the **IP Trunk Current Traffic Statistics** window and the **AltiWare IP Cumulative Traffic Statistics** window in AltiWare Administrator or AltiAdmin to view network traffic.

3. **Check the RTP and RTCP Settings.** Make sure UDP port numbers 49152-49199 are not assigned to other applications. RTP/RTCP is the acronym for Real-Time Transport (Control) Protocol, a transport protocol for real-time applications used to transport packetized voice packets over the IP network.
4. **Check Network Configurations.** Follow all network configuration guidelines provided under “Network Configuration Guidelines for VoIP” on page 6-8. Make sure the router, WAN bandwidth, and Jitter Buffer are configured properly.

Cannot Make a Connection

1. **Check Network Connectivity** using “ping.”
2. **Check Network Firewall Settings.** See “Network Configuration Guidelines for VoIP” on page 6-8 for more details.
3. **Check IP Address of Destination System**
4. **Check the RTP and RTCP Settings.** Make sure UDP port numbers 49152-49199 are not assigned to other applications. RTP/RTCP is the acronym for Real-Time Transport (Control) Protocol, a transport protocol for real-time applications used to transport packetized voice packets over the IP network.
5. **Check the AltiWare IP Dialing Table for Dialed Digits Length.** Refer to “Defining an IP Dialing Table” on page 5-27.
6. **Check if Called Extension is a Workgroup or has Multiple Call Waiting Enabled.** When the called party is a workgroup pilot number or has Multiple Call Waiting enabled, the caller is placed on hold and hears ringback or music.

IP Trunk Does Not Appear in Trunk View

When an IP trunk doesn't appear in the Trunk View, there are two possible causes:

1. **Device Driver is Not Running** - check the device driver. Make sure it's installed and working properly.

Windows NT 4.0 does not support Plug and Play. Therefore, the PnP ISA Enable Driver (PNPISA.SYS) must be installed if it is not installed already. Refer to the Microsoft Web site for installation instructions.

2. **Triton VoIP Board is Not Installed Properly** - Refer to the *Quick Installation Guide* for more details on proper installation of the Triton VoIP board.

Configuring the Triton T1/PRI Board

Through AltAdmin, the Triton T1/PRI board can be configured for either digital T1 or PRI (Primary Rate Interface).

Both T1 and PRI carry 24 pulse code modulation (PCM) signals using time-division multiplexing (TDM) at an overall rate of 1.544 Mbps. Voice T1 provides twenty-four 64K channels with robbed bit signaling. PRI provides twenty-three 64K channels, using one 64K channel for D channel messaging.

The Triton T1/PRI board is used to provide voice processing resources for AltWare OE, similar to the way Quantum telephony boards are used for analog trunks and extension lines. AltWare OE uses DSP engines residing on the Triton T1/PRI board to perform the voice processing functions needed for either T1 or PRI service. Quantum and Triton boards are connected via MVIP connectors.

For information on how to install Triton T1/PRI boards, refer to the *Quick Installation Guide* provided with every board package.

Important: Configuration for Triton T1/E1/PRI boards can only be done at the local system. These boards cannot be configured by a remote AltAdmin.

Service Parameters for T1

To subscribe to T1 service, certain parameters are required to establish service. The information provided below identifies the recommended and supported parameters for T1 service.

T1 Service Request Information

When ordering T1 service, provide the following service request information:

Equipment Information

Product Manufacturer - Altigen Communications, Inc.

Product Name - Altiserv PBX Phone System

CSU/DSU - ADTRAN T1 ACE (recommended) or other CSU/DSU

Technical Information for T1 with Voice

Signaling Protocol:

- E&M Wink Start (recommended)
- E&M Immediate Start
- Ground Start
- Loop Start (not recommended)

Trunk Type:

- DID
- 2-Way DID (recommended)
- DOD

Framing:

- Super Frame (SF)/D4
- Extended Super Frame (ESF) (recommended)

Line Coding:

- Alternate Mark Inversion (AMI)
- B8ZS (recommended)

DNIS, Caller ID - DTMF (Dual Tone Multi-Frequency)

Physical Termination - RJ-48X or RJ-48C

Wire: 4 wires

800 Service: you decide

Termination Impedance - 100 ohms

Type of Registered Services Provided

BN 1.544 Mbps SF without power

DN 1.544 Mbps SF B8ZS without power

1KN 1.544 Mbps ANSI ESF without power

1SN 1.544 Mbps ANSI ESF, B8ZS without power (recommended)

Service Order Code

SOC 6.0P AS.2

T1 Channel Assignment

Trunk Type: In, Out, or 2-Way (recommended)

Channels Assigned: 24 (Enter partial channels if you wish to subscribe to both voice and data service.)

Hunting: Most Idle, Least Idle, Ascend, Descend

DNIS Digits/Signal: 3/DTMF (can be 3 to 10 digits)

Caller ID Signal: DTMF, if available (Not every service provider provides Caller ID over T1 lines.)

CSU/DSU Requirements

The CSU (channel service unit) is a device used to connect a digital trunk line coming in from the phone company to the PBX. A CSU can terminate signals, repeat signals and respond to loopback commands sent from the central office.

Service Parameters for PRI

To subscribe to PRI service, certain parameters are required to establish service. The information provided below identifies the recommended and supported parameters for PRI service.

PRI Service Request Information

When ordering PRI service, provide the following service request information:

Equipment Information

Product Manufacturer - AltiGen Communications, Inc.

Product Name - AltiServ PBX Phone System

CSU/DSU - ADTRAN T1 ACE (recommended) or other CSU/DSU

Technical Information for PRI with Voice

Switch Type:

- 5ESS (recommended)
- DMS (recommended)
- NI-2 (recommended)
- 4ESS

- MEGACOMM

Framing:

- Super Frame (SF)/D4
- Extended Super Frame (ESF) (recommended)

Line Coding:

- Alternate Mark Inversion (AMI)
- B8ZS (recommended)

Physical Termination: RJ-48X or RJ-48C

Wire: 4 wires

PRI Channel Assignment

D Channels Assignment: 24th channel (channel ID 23)

Note: AltiServ can configure any channel in a PRI span to be the D channel. The default setting is the last channel. Every span should select a D channel within the span. OE 3.5A and higher does not support shared D channel (NFAS) or back up D channel.

Hunting: Most Idle, Least Idle, Ascend, Descend

DNIS Digits: can be 3 to 10 digits

CSU/DSU Requirements

The CSU (channel service unit) is a device used to connect a digital trunk line coming in from the phone company to the PBX. A CSU can terminate signals, repeat signals, and respond to loopback commands sent from the central office.

Board Configuration

Double click the board's icon in the **Boards** window (see Figure 1) to open the **Board Configuration** window.

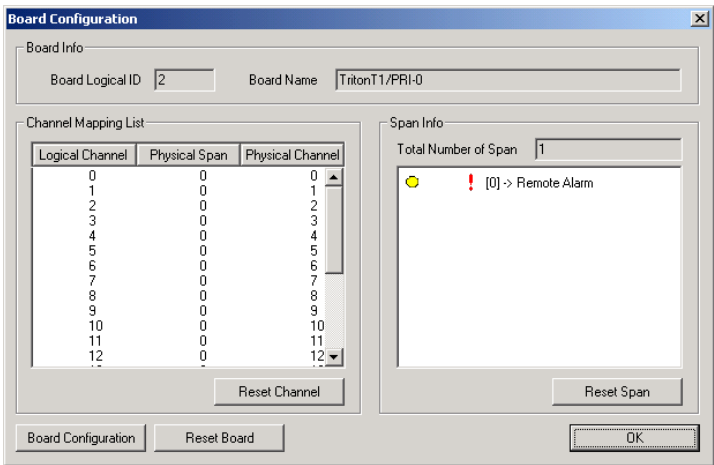


Figure 13. Board Configuration window (Triton T1/PRI Board)

The **Board Configuration** window for the Triton T1/PRI board displays the same options as the Quantum board, which are discussed in “Configuring the Quantum Board” on page 6-2, but there are additional options available. The Board ID must be in the range 0–5.

- The **Board Configuration** button invokes a configuration dialog box.

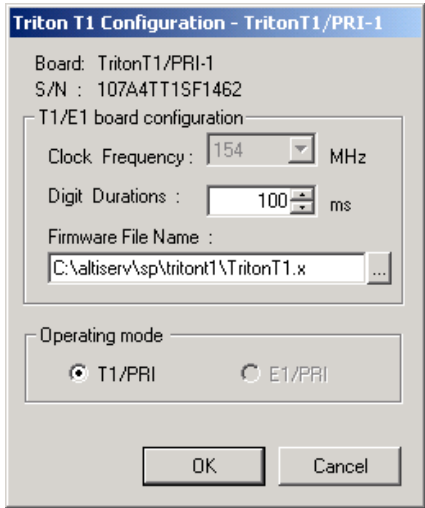


Figure 14. Triton T1 Configuration dialog box

This dialog box displays the board serial number and allows you to reconfigure the **Clock Frequency**, **Digit Duration**, and the **Firmware**

File Name. The **Operating mode** is automatically displayed as T1/PRI or E1/PRI.

- The **Span Info** window displays the **Total Number of Spans** on the board and the status of the span in the Span Info window. To reset the span, click the **Reset Span** button. Double clicking a span in this window will invoke a configuration window, as discussed in the following section.

See “T1 Clocking” on page 6-38 and the Status Messages table beginning in the next section.

Triton T1 Configuration - Triton T1/PRI Dialog Box

Double clicking the span line for a Triton T1 board in the **Span Info** window invokes a **T1/PRI Configuration** dialog box.

Triton T1 Configuration - TritonT1/PRI-1

Span: 0
Status: OK

Statistics since: Fri 02/07/03 16:09:01

Frame Errors: 0	Line Code Errors: 0
OOF Errors: 0	Bit Errors: 0
Rec Frame Slips: 0	Xmt Frame Slips: 0

Clear

Frame Type: ☐ SF ☒ ESF

Line Code: ☐ AMI ☒ B8ZS

Zero Code Suppression: None

CD Bits Handling: Set CD = AB

☐ System Clock Master

T1/E1/PRI Configuration OK Cancel

Figure 15. Triton T1/PRI Configuration dialog box

Reading the Status Messages

If the span is working, the Status line displays OK. This status line is updated every 3 seconds. If there is an error, a message is displayed. The following table lists the types of error messages and the appropriate actions.

Table 1: Span Status Error Messages

Error Message	Meaning	Action
Hardware Failure - NO ANSWER	Major hardware problem. Board is not responding to commands.	Set board as MVIP master. Reset Board.
Hardware Failure - NO CLOCKS	No clock signal is detected on T1 interface drop.	Reset Board. If this does not work, board must be replaced.
HDLC Failure - NO HDLC FRAMES	HDLC = High level Data Link Control. No HDLC framing is detected on the selected D Channel. This is a PRI-specific issue.	Check with CO on D Channel usage for possible mismatch between your selection of D channel and CO's selection. OR CO may have locked D Channel. Contact CO to unlock.
Line Failure - NO SIGNAL (ALOS)	ALOS = Analog Loss of Signal	Check T1/PRI cable and change if necessary. If cable is okay, CO is not sending any signal. Contact CO.
Line Failure - BLUE ALARM (AIS)	AIS = Alarm Indicator Signal	CO is sending Blue Alarm. Contact CO.
Line Failure - YELLOW ALARM (RAI)	RAI = Remote Alarm Indicator	Cable is broken. If there are no frame slips, contact CO. If frame slips exist, set this board as the master.

Table 1: Span Status Error Messages

Error Message	Meaning	Action
Setup Failure - NO VALID FRAME	No valid framing is detected.	Possible span mis-configuration (i.e., ESF is selected but the actual framing is SF, or vice versa). Check span configuration.
Setup Failure - RED ALARM (BPV)	BPV = Bi-Polar Violation	Location condition, equipment problem. For excessive BPV, check AMI/B8ZS setting.
Setup Failure - RED ALARM (LCV)	LCV = Line Code Violation	Check the MVIP bus master setting. OR Have CO perform a line test to check for a faulty cable or line.
Setup Failure - RED ALARM (OOF)	OOF = Out of Frame. Excessive frame errors.	Check the MVIP bus master setting. OR Have CO perform a line test to check for a faulty cable or line.
Clock Sync Failure - FRAME SLIPS'	Conflict between transmit and receive clocks. The MVIP bus master-ship is set improperly.	Check MVIP bus master setting.

Reading the Statistics

The **Statistics** is an informational display of accumulated statistics (counters) for the errors that have occurred since the last system reboot or statistics clearing. There may be non-zero values when configuring the T1 span for the first time. You can clear these fields with the **Clear** button.

- **Frame Errors** - number of framing bit errors. In T1 mode, a framing bit error is defined as an incorrect FS-bit value. The counter is suppressed when framer loses frame alignment.

- **OOF Errors** - the Out Of Frame counter registers every time the T1 chip is forced to re-frame when receiving a frame with severe errors.
- **Rec Frame Slips** - the Receiver Frame Slips counter shows the number of frame slips for the receiver.
- **Line Code Errors** - Line Code Error is defined as an occurrence of a bi-polar variation or excessive zeroes.
- **Bit Errors** - Bit Errors are defined as a CRC-6 error in ESF, FT-bit error in SLC-96 and F-bit or sync bit error in SF.
- **Xmt Frame Slips** - Transmit Frame Slips counter shows the number of frame slips for the transmitter.
- **Clear** button - use the **Clear** button to reset the statistics counters.

Note: For ideally synchronized systems, **Transmit** and **Receive Frame Slips** counters should be '0.' Continuous update of the frame slips counters means that transmit and receive frequencies are not equal. In this case, you should check the system and MVIP clock setup.

Setting the Configurable Options

- You can set the **Frame Type** to either **SF** or **ESF**.

SF (Superframe Format) consists of twelve (12) consecutive frames.

ESF (Extended Superframe Format) consists of twenty-four (24) consecutive frames.

- You can set the **Line Code** to either **AMI** or **B8ZS**.

AMI (Alternate Mark Inversion) is the line coding format in T1 transmission systems whereby successive ones (marks) are alternately inverted and sent with opposite polarity of the preceding mark. **B8ZS** (Binary 8 Zero Substitution) sends two violations of the bipolar line encoding technique, rather than inserting a one for every seven consecutive zeros.

- You can set the **Zero Code Suppression** to **None** (default setting), **Jam Bit 8**, **GTE** or **Bell**.

Zero Code Suppression inserts a "one" bit to prevent the transmission of eight or more consecutive "zero" bits; **Jam Bit 8** forces every bit 8 to a one; **GTE** Zero Code Suppression replaces bit 8 of an all zero channel byte to a one, except in signaling frames where bit 7 is forced

to a one. **Bell** Zero Code Suppression replaces bit 7 of an all zero channel byte with a one.

- **CD Bits Handling** is for display only.
- If you click the **T1/PRI Configuration** button you can set channels to either T1 or PRI, as discussed in “Setting up T1 or PRI Channels on the Triton T1/PRI Board” on page 6-39.
- You can set the **System Clock Master** *if* you have a back-to-back configuration and you want this span to be the master clock to the system. (Only one clock master should be selected in a back-to-back system.) See the following discussion.

T1 Clocking

Depending on the configuration of the T1 boards and span for your AltiServ system(s), the **System Clock Master** setup should be set according to the follow conditions:

- If all of the T1 boards are connected to an FXO (Foreign Exchange Office) or CO, the **System Clock Master** check box *must NOT be checked* for any of the T1 boards.
- If two AltiServ systems are connected back-to-back with a T1 span, the **System Clock Master** check box *must be checked* for only one of the T1 boards.
- If two T1 boards in the same AltiServ system are connected back-to-back with a T1 span, the **System Clock Master** check box *must be checked* for the T1 board that *has not been designated by the MVIP setting as the system’s master clock to drive the MVIP bus*.
- If four T1 boards are in the same AltiServ system, where each pair is connected back-to-back with a T1 span:
 - The **System Clock Master** check box *must be checked* for one of the T1 boards from the first pair, that *has not been designated by the MVIP setting as the system’s master clock to drive the MVIP bus*.
 - The other two T1 boards of the second pair must have its **System Clock Master** check box *unchecked*

Important: In all back-to-back cases, the **MVIP Clock Configuration** should be set to “**Manual**,” and the board *connected to* the board configured as the back-to-back clock master *must be designated* at the MVIP bus master.

Setting up T1 or PRI Channels on the Triton T1/PRI Board

Use the **T1/PRI Configuration** button (see Figure 15) to invoke the **T1/PRI Configuration** window. The Triton T1/PRI Board can be configured to either T1 or ISDN PRI through the configuration options within the window.

Note: In a tie-trunk configuration, set the trunks to “Out of Service” before changing the trunk type from T1 to PRI or vice versa. Otherwise, the system will generate garbage call records to your internal or external logger service. See “Setting General Trunk Attributes” on page 7-3 for details.

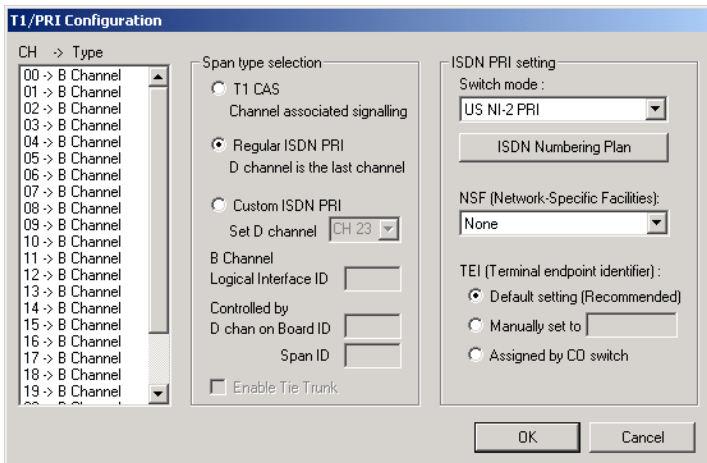


Figure 16. T1/PRI Configuration window

The **CH -> Type** list displays the channel types.

Setting the ISDN PRI Switch Mode

If you select a Span Type of Regular ISDN PRI or Custom ISDN PRI in the T1/PRI Configuration Window, use the following guidelines to set the ISDN PRI Switch mode.

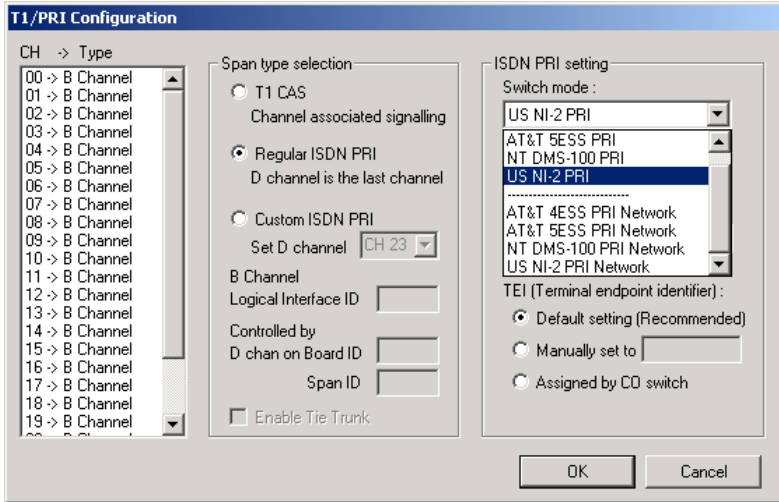


Figure 17. ISDN PRI Switch Mode

The top four settings are used for a connection to a CO switch:

- AT&T 4ESS PRI
- AT&T 5ESS PRI
- NT DMS-100 PRI
- NI-2 PRI (default)

The bottom four settings are used for a PRI tie trunk configuration where two AltiServ systems are connected back to back. In such a configuration, one AltiServ system must be configured as Network and the other as User. For example, set one to US NI-2 PRI Network and the other to US NI-2 PRI.

- AT&T 4ESS PRI Network
- AT&T 5ESS PRI Network
- NT DMS-100 PRI Network
- NI-2 PRI Network

Selecting Span Types

- **T1 CAS** - select this option to associate all channels on the span to T1channel associated signaling.
- **Regular ISDN PRI** - select this option to indicate 23B+D ISDN PRI span and to designate the last channel as the D channel.
- **Custom ISDN PRI** - select this option to set the D channel to the desired location.

For future use: The following two settings will be used in conjunction with the Custom ISDN PRI setting in a future release:

— Set the **D Channel** using the drop-down list.

— Type in a **B Channel Logical Interface ID**

- **Enable Tie Trunk** - check this box to enable a tie trunk. Note that tie trunks must terminate to a system also configured as a tie trunk.

Configuring an ISDN Numbering Plan

The **ISDN Numbering Plan** button invokes the **PRI ISDN Numbering Plan** dialog box. This function allows you to select how AltiServ will identify and code the Called Number for six different types of calls. This coding instructs the CO on how to interpret the number being sent to it.

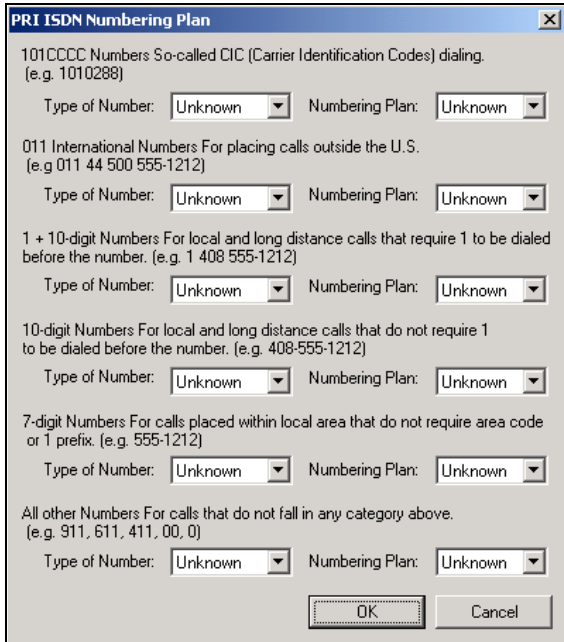
The image shows a Windows-style dialog box titled "PRI ISDN Numbering Plan". It contains six sections, each with a description of a number type and two dropdown menus labeled "Type of Number:" and "Numbering Plan:". All dropdown menus are currently set to "Unknown". The sections are: 1. "101CCCC Numbers So-called CIC (Carrier Identification Codes) dialing. (e.g. 1010288)" 2. "011 International Numbers For placing calls outside the U.S. (e.g. 011 44 500 555-1212)" 3. "1 + 10-digit Numbers For local and long distance calls that require 1 to be dialed before the number. (e.g. 1 408 555-1212)" 4. "10-digit Numbers For local and long distance calls that do not require 1 to be dialed before the number. (e.g. 408-555-1212)" 5. "7-digit Numbers For calls placed within local area that do not require area code or 1 prefix. (e.g. 555-1212)" 6. "All other Numbers For calls that do not fall in any category above. (e.g. 911, 611, 411, 00, 0)" At the bottom right are "OK" and "Cancel" buttons.

Figure 18. PRI ISDN Numbering Plan dialog box

The **PRI ISDN Numbering Plan** dialog box displays the six *classes* of numbers (call type) that can be sent to a CO:

- 101CCCC Numbers - CIC (Carrier Identification Codes) dialing.
- 011 International Numbers - for placing calls outside the U.S.
- 1+10-digit Numbers - for local and long distance calls that require dialing 1 before the number.
- 10-digit Numbers - for local and long distance calls that do not require 1 before dialing.
- 7-digit Numbers - for calls placed within the local area that do not require an area code or a 1 prefix.
- All Other Numbers - for calls that do not fall into any category above, i.e. 911, 311.

For each class, select the type of *number/numbering plan* from the drop-down list:

- **Type of Number:**
 - Unknown
 - International
 - National
 - Network Specific
 - Subscriber Number
- **Numbering Plan:**
 - Unknown
 - ISDN
 - National
 - Private

The setting 'Unknown' is used when the user or network has no knowledge of the numbering plan. In this case, the number digits field is organized according to the network dialing plan.

Setting the NSF

The **NSF (Network-Specific Facilities)** is used with PRI to instruct the CO to route a call to a specific carrier or long distance service. Use the drop-down list to identify the type of carrier service you wish to use for your ISDN PRI lines.

The choices in the list depend on the specific switch and your long distance service provider. An example of such service includes AT&T Megacom.

Note: If your CO requires specific NSF features to be present in the call setup packet, please contact AltiGen's Technical Support department with such information from the CO and they will help you configure it.

Setting a TEI

The **TEI (Terminal Endpoint Identifier)** defines which terminal device is communicating with the CO switch for a given message. PRI messages involve point-to-point configuration in which each side already knows the source of any message received. ISDN messages involve point to multi-point locations in which the source can only be identified by the TEI.


Configuring the Triton T1/PRI Board

Select one of the following TEI settings:

- **Default setting** - this is the recommended setting.
- **Manually set to** - should always be set to 0. Typically, a zero (0) is used for TEI on a PRI connection. In some cases where a shared D channel is used, other TEI values might be required to identify which span will be used for a call.
- **Assigned by CO switch** - do not use this setting unless advised by your CO.

Installing a Channel Service Unit (CSU) to the Triton T1 or T1/E1/PRI Board

1. Connect the CSU (Adtran model T1 CSU ACE used as an example) to the T1/PRI or T1/E1PRI board using an RJ-48C or RJ-48X cable.
2. Connect the CSU to the network termination box using an RJ-48C or RJ-48X cable.

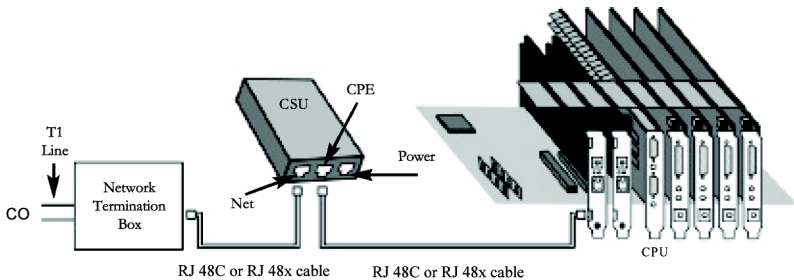

AltiGen T1 Socket (RJ-48)	Refer to your CSU manufacturer's manual for the proper pinout.
Pin 1=Receive Ring (INPUT)	
Pin 2=Receive Tip (INPUT)	
Pin 4=Transmit Ring (OUTPUT)	
Pin 5=Transmit Tip (OUTPUT)	

Troubleshooting—Common Symptoms

The most common problems when installing T1 or PRI services:

1. The service provider misconfigures your T1/PRI service or terminates your service improperly.
2. T1 is installed but not turned on because there is no termination device for a period of time.

3. T1 is turned on but channel is not in service.

AltiAdmin provides basic troubleshooting information in the T1 Span Configuration window, described in “Triton T1 Configuration - Triton T1/PRI Dialog Box” on page 6-34.

Several diagnostic tools are available that can help troubleshoot these situations, such as a T1 watcher (“T-Berd”) or a multimeter. For more information, check the Communication Technology Corp. web site at www.commtech.com.

Trunk Configuration



7. Trunk Configuration

Trunk attributes and parameters are set using the **Trunk Configuration** window. The attributes and options available depend on the type of board and trunk.

Trunks that are out of service are automatically tested by the system every 15 seconds. Once the situation is corrected, the trunk will be brought back to service automatically. If none of the trunks are available when an outside call is placed, the caller will hear the system prompt: “All outside lines are busy, please try again later.”

There are three ways to access the **Trunk Configuration** window:

- Select the **Management** menu, then select **Trunk Configuration...**
or,
- Click the **Trunk Configuration** icon on the Quick Access toolbar or,
- Double-click a trunk listing in the **Trunk View** window.

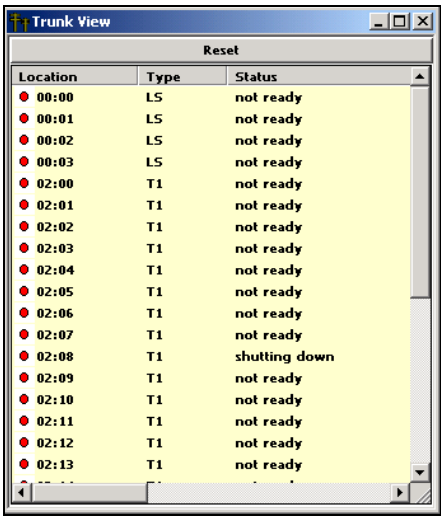


Figure 1. Trunk View window

However you open the Trunk Configuration window, the **General** window appears.

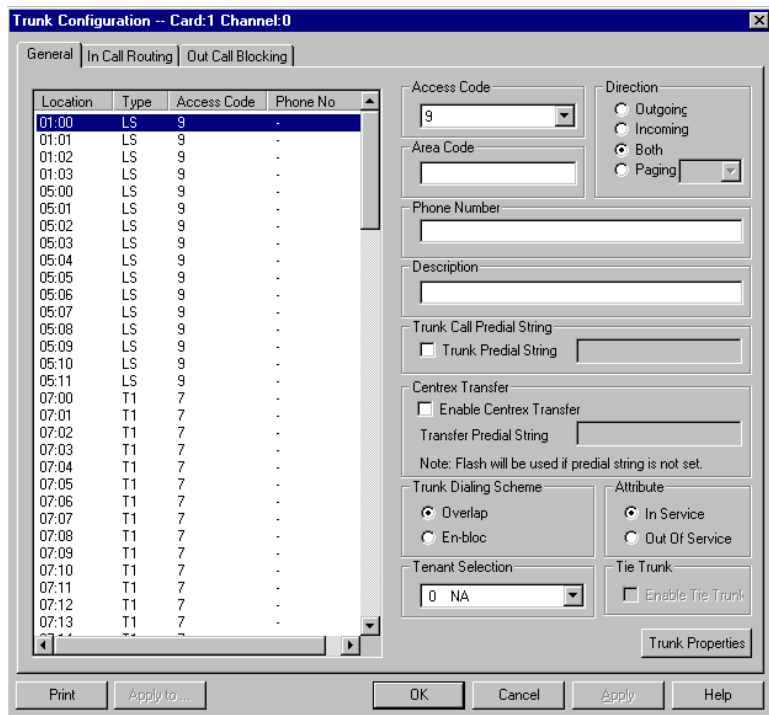


Figure 2. General window, Trunk Configuration

Selecting Trunks to Set Attributes

The title bar of the Trunk Configuration window displays the card and the channel of the selected trunk.

The list on the left shows all the configured trunks. The location format is the same as in the Trunk View window, that is, *slot:channel*—for example, channel 15 on the board in slot 1 is location 01:15.

When you select a trunk in this list, the options and parameters for the trunk appear in the settings in the right of the window.

Configuring One or Multiple Trunks

To customize trunk characteristics, you work on one trunk at a time. To apply the same configuration to multiple trunks, use the **Apply To...** button. This pops up a list of all trunks, with all of the trunks selected by default. Deselect the trunks you don't want to apply changes to, then click **OK**. (Note that you cannot use the mouse to drag over and select multiple items; you must use the Shift and Ctrl keys.) This applies changes to multiple trunks for **only the attribute or option that you changed**.

Setting General Trunk Attributes

Select the channel to view its current attributes, as discussed in the previous section. You can then set or change the following attributes. If an option is grayed out, it is not available for that type of trunk:

Attribute	Description
Access Code	<p>Access code to the selected trunk. If you need to use access codes other than 9, you must first set this up on the Number Plan window of System Configuration ("Setting a System Number Plan" on page 5-4). This option is not available for a DID trunk.</p> <p>Note: It is recommended that you set this value to "None" for trunks on 30-port VoIP boards. This will prevent users from directly accessing the 30-port boards—which use the G.711 codec only—for calls to AltiServ servers or other IP gateways that may require the G.723 codec. If you still want users to have access to this trunk for outgoing calls, you can set it up through Outcall Routing (see <i>Chapter 9, Out Call Routing Configuration</i>).</p>
Area Code	<p>The local area code for each trunk. Enter a three-digit area code. If left blank, the trunk assumes the home area code defined in the General window of the System Configuration window. <i>This configuration is for each trunk in the system and will negatively affect features such as Zoomerang if the area code is not configured properly.</i> This is not available for a DID trunk.</p>

Attribute	Description
Direction	<p>The trunk direction can be Outgoing only, Incoming only, Both Outgoing and Incoming, or for Paging.</p> <p>Outgoing and Both are not available on an analog Quantum DID trunk, which is an Incoming trunk. The Both option is the system default.</p> <p>Note: When incoming calls are received on an Outgoing only trunk, they are immediately disconnected.</p> <p>Paging is only available for analog (CO) trunks and is used for paging or broadcasting purposes. This option enables a third party paging device directly to the trunk port.</p> <p>When this option is selected, the system assigns a default unused paging ID. You can assign a different ID in the drop-down list. The range of paging IDs are from 00 to 99, which allows AltiServ to be connected to up to 100 paging systems through trunks for multi-zone paging applications. If the manually selected paging ID is used by another trunk, the current paging ID is not changed.</p> <p>The trunk paging is accessed using the Overhead Paging by Trunk (# 45 Feature Code). For example, a user dials '#4508' to connect to a paging system through the trunk with paging ID of 08.</p> <p>The Overhead paging feature requires paging equipment to provide loop start CO trunk characteristics. This option <i>is not</i> supported on ground start trunks.</p> <p>The Paging option and the Overhead Paging option (in "Audio Peripheral Configuration" on page 11-1) are different and independent of one another. The Overhead Paging option is to set up the audio out port of the Quantum board for use with the #44 overhead option built into the system.</p>
Phone Number	<p>The phone number, without the area code, assigned to the location. If the wiring changes and a new phone number is assigned to the location, you must update the information in this field.</p>

Attribute	Description
Description	Descriptive information such as the company name for the assigned Phone Number, or appropriate agency if this trunk provides 911 access.
Trunk Dialing Scheme	<p>Overlap or En-bloc dialing.</p> <ul style="list-style-type: none"> • Overlap allows the terminal to omit part of the digits required to complete a call, while the remaining digits are buffered. Use Overlap Dialing for analog trunks and for T1 (robbed bit) for best results. • En-bloc allows the terminal to include all of the digits required to complete a call. Use En-bloc Dialing for digital (PRI-ISDN) trunks.
Centrex Transfer	Applies to analog and T1 trunks if the trunk is supported by Centrex. This option must be selected to forward calls to an outside number through a Centrex switch. If the Centrex provider requires a particular string to be sent before the dialed number, enter the string in the Transfer Predial String box. If no string is set as a predial string, FLASH is used.
Attribute	In Service makes the trunk available for use. Out of Service prevents the trunk from being used (for example, while performing maintenance).
Tenant Selection	The Tenant group assignment for the trunk, configured from the Tenant Table window in System Configuration , discussed in “Using a Tenant Table” on page 5-33. <i>If no tenant is selected, any extension can use this trunk to make an out call.</i>
Enable Tie Trunk	Allows hop-on and hop-off dialing for an ISDN/PRI, or T1 trunk. When this box is checked, any incoming call to the selected trunk can be sent with ANI/DNIS information. To use this feature, Hop-off must also be enabled under System Configuration Call Restrictions, as discussed in “Defining System Call Restrictions” on page 5-12. Also, the board must be configured to allow for tie trunks. See “Setting up T1 or PRI Channels on the Triton T1/PRI Board” on page 6-39.

Attribute	Description
Trunk Properties	Opens a dialog box that allows you to configure low-level, hardware-specific properties for each trunk. The options vary depending on the type of board and trunk; this is discussed in subsequent sections.

Quantum Trunk Properties

To configure a Quantum channel, select a Quantum channel from the trunk channels list in the Trunk Configuration window, then click the **Trunk Properties** button or double-click the list entry to view the **Quantum Trunk Line Properties** dialog box.

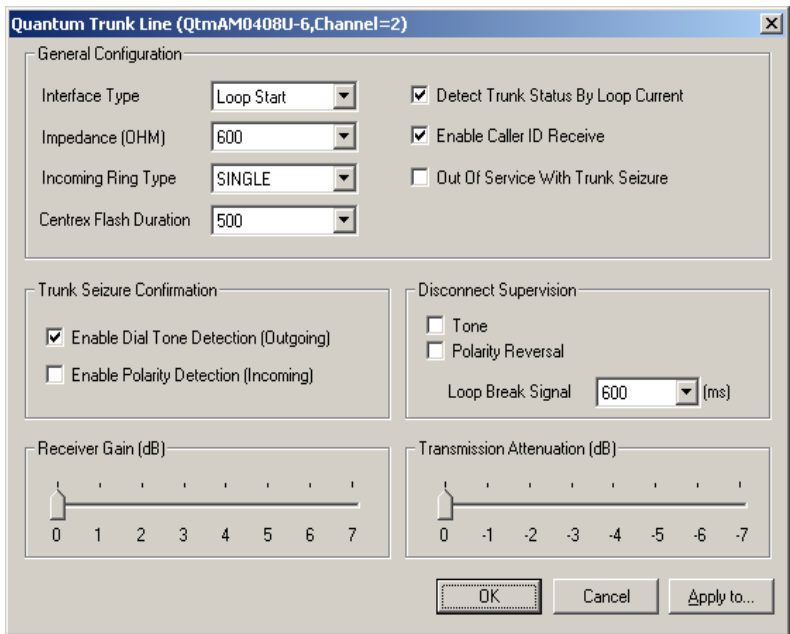


Figure 3. Quantum Trunk Line Properties window

Note that you can use **Apply to...** on this dialog box to apply changes to other trunks of the same type. See “Configuring One or Multiple Trunks” on page 7-3.

Quantum Trunk General Configuration

Parameter	Description
Interface Type	Select from: <ul style="list-style-type: none"> • Loop Start • Ground Start • DID (Wink Start)—available only if the selected trunk is a DID trunk
Impedance	The resistance of electrical current to alternating current, measured in OHMs . Impedance occurs when power or signal is transferred from one circuit to another. The setting options are: <ul style="list-style-type: none"> • 600 OHMs (domestic setting) • 900 OHMs (international setting, depending on the country) • External
Incoming Ring Type	Select single or double .
Centrex Flash Duration (ms)	Specifies the Flash Duration time in milliseconds, with a range from 50 ms to 1000 ms. This setting complements the Centrex Flash Support option in the General window for the trunk.
Detect Trunk Status By Loop Current	When selected, causes detection of the Quantum trunk status using a loop current.
Enable Caller ID Receive	Select for user to receive caller ID digits.
Out of Service With Trunk Seizure	When selected, if the trunk is set to <i>Out of Service</i> , the Quantum service provider will busy out (seize) the trunk. The CO will treat this trunk as a busy line and WILL NOT place a call to this trunk. (By default, this option is unchecked.)

Parameter	Description
Trunk Seizure Confirmation	<p>Select from:</p> <ul style="list-style-type: none">• Enable Dial Tone Detection (Outgoing)—detection of outgoing dial tone.• Enable Polarity Detection (Incoming)—detection of incoming polarity. Polarity detection is used when the CO or the connected PBX provides polarity reversal on the tip and ring.
Disconnect Supervision	<p>Select from:</p> <ul style="list-style-type: none">• Tone—busy tone (reorder tone, fast busy tone, error tone, etc.) or dial tone (continuous tone, etc.). This should be used in conjunction with drop in loop current. For COs who cannot guarantee loop break, this may be the only option.• Polarity Reversal—a reversed battery signal. You can set the Loop Break Signal to either 200 or 600 ms.
Receiver/Transmission Gain	<p>Slide setting adjusts the incoming volume from -6 dB to 6 dB for every Quantum Trunk channel.</p> <p>The default setting is 0 dB, and it is highly recommended not to change this setting.</p> <p>Caution: Setting the volume too high will cause distortion in voice quality and/or missed DTMF digits.</p>

Triton Analog Trunk Properties

To configure a Triton Analog Trunk channel, select a Triton Analog Trunk channel from the trunk channels list in the Trunk Configuration window, then click the **Trunk Properties** button or double-click the list entry to view the **Configuration** dialog box.

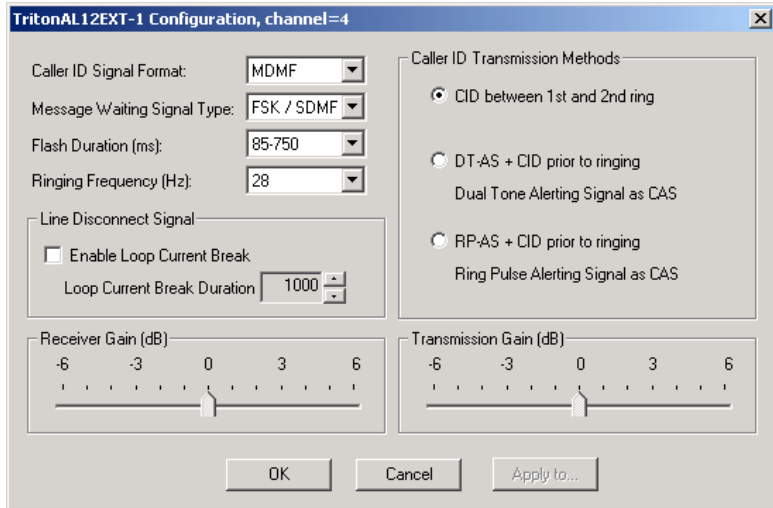


Figure 4. Triton Analog Trunk Properties window

Note that you can use **Apply to...** on this dialog box to apply changes to other trunks of the same type.

Parameter	Description
Caller ID Signal Format	Message format with which to send Caller ID information: <ul style="list-style-type: none"> • None • SDMF—Single Data Message Format for supporting and sending a single data type, such as phone numbers. • MDMF—Multiple Data Message Format for supporting and sending multiple data types, such as name and number information. • DTMF—Dual Tone Multi-Frequency for push button or touch tone dialing.

Parameter	Description
Message Waiting Signal Type	Type of Message Waiting indicator for the phone set: <ul style="list-style-type: none"> • None • FSK/SDMF—Frequency Shift Keying with and Single Data Message Format. • FSK/MDMF—Frequency Shift Keying with Multiple Data Message Format.
Flash Duration (ms)	Specifies the Flash Duration time in milliseconds, with the following set ranges: 85-750, 50-600, 100-700, 150-800, 200-900, 300-1000.
Ringing Frequency (Hz)	Select the frequency in Hertz that is necessary for the equipment attached to this line, set to either 28 or 20 .
Line Disconnect Signal	The loop break desired for answering supervision. Select the Enable Loop Current Break check box and select the Loop Current Break Duration in milliseconds.
Caller ID Transmission Methods	Select the type of caller ID transmission method: <ul style="list-style-type: none"> • CID between 1st and 2nd ring—caller ID transmitted between first and second ring. • DT-AS + CID prior to ringing—dual tone alerting signal sent prior to ringing. • RP-AS + CID prior to ringing—ring pulse alerting signal sent prior to ringing.
Receiver/Transmission Gain	Slide setting adjusts the incoming volume from -6 dB to 6 dB for every Triton Analog Trunk channel. The default setting is 0 dB , and it is highly recommended not to change this setting. Caution: Setting the volume too high will cause distortion in voice quality and/or missed DTMF digits.

Triton Analog Trunk LS/GS Properties

To configure a Triton Analog Trunk LS/GS channel, select a Triton Analog Trunk channel from the trunk channels list in the Trunk Configuration window, then click the **Trunk Properties** button or double-click the list entry to view the **Configuration** dialog box.

TritonAL12TRKGSLS-0 Configuration, channel=2

General Settings

Interface: **Loop Start** (dropdown)
 Impedance: **600 Ohm** (dropdown)
 Incoming Ring: **Single Ring** (dropdown)
 Caller ID receiving: **FSK** (dropdown)
 Centrex Flash Duration(ms): **500** (spin box)
☐ Out Of Service With Trunk Seizure

Trunk Seizure Confirmation

☒ Enable Dialtone Detection (Outgoing)
☐ Enable Answer Debounce (Incoming)

Disconnect Supervision

Loop Break Duration(ms): **600** (spin box)
☐ Tone Disconnect

Receive/Transmit Gain(dB)

Receive Gain: [Slider from -6 to 6, currently at 0]
 Transmit Gain: [Slider from -6 to 6, currently at 0]

OK Cancel Apply To

Figure 5. Triton Analog GSLS Trunk Properties window

Note that you can use **Apply to...** on this dialog box to apply changes to other trunks of the same type.

Parameter	Description
Interface Type	For the LS/GS model, can be one of the following: <ul style="list-style-type: none"> • Loop Start Trunk • Ground Start Trunk

Parameter	Description
Impedance	<p>The resistance of electrical current to alternating current, measured in OHMs. Impedance occurs when power or signal is transferred from one circuit to another. The setting options are:</p> <ul style="list-style-type: none">• 600 OHMs (domestic setting)• 900 OHMs (international setting, depending on the country)• Complex (for handling multi-component AC circuits used by CO)
Incoming Ring Type	Can be single or double .
Caller ID Receiving	Select as None , FSK or DTMF for when receiving caller ID digits.
Centrex Flash Duration (ms)	Specifies the Flash Duration time in milliseconds, with a range from 150 ms to 1000 ms.
Out of Service With Trunk Seizure	When enabled, the system automatically takes the trunk out of service whenever the trunk is seized.
Enable Dial Tone Detection (Outgoing)	Detects outgoing dial tone.
Enable Answer Debounce (Incoming)	Enables a time-out period of 2 seconds (for ignoring false CO disconnect signal), after answering an incoming call.
Loop Break Duration (ms)	Disconnects signal if CO breaks loop current. You can set the duration from 200 to 1000 ms.
Tone Disconnect	Busy tone (reorder tone, fast busy tone, error tone, etc.) or dial tone (continuous tone, etc.). This should be used in conjunction with drop in loop current. For COs who cannot guarantee loop break, this may be the only option.

Parameter	Description
Receiver/ Transmission Gain	<p>Slide setting adjusts the incoming volume from 6 dB to 6 dB for every Triton Analog Trunk channel.</p> <p>The default setting is 0 dB, and it is highly recommended not to change this setting.</p> <p>Caution: Setting the volume too high will cause distortion in voice quality and/or missed DTMF digits.</p>

Triton VoIP Trunk Configuration

To configure a Triton VoIP channel, select a Triton VoIP channel from the trunk channels list in the Trunk Configuration window, then click the **Trunk Properties** button or double-click the list entry to view the **Triton VoIP Trunk Line Configuration** dialog box.

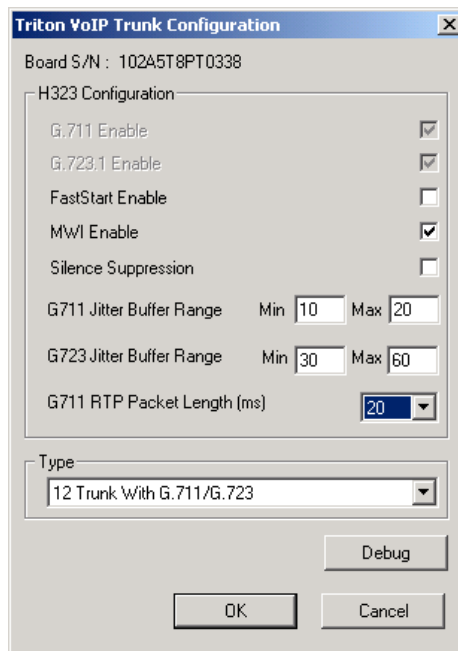


Figure 6. VoIP Trunk Configuration window

The primary configuration for the Triton VoIP is the **H.323 Configuration**, with the following settings:

Parameter	Description
G.711 Enable	Provides toll quality digital voice encoding and is not configurable—that is, you cannot deselect it. It guarantees interoperability when other voice compression (e.g. G.723.1) is not available or when better voice quality is desired.
G.723.1 Enable	Uses low rate audio encoding to provide near toll quality performance under clean channel conditions. This option is also not configurable. On the 30-port board, it cannot be selected; on the 12-port board, it cannot be deselected.
FastStart Enable	Fast connect feature allowing endpoints to establish channels without waiting for an H.245 connection to be opened.
MWI Enable	Message Waiting Indication (MWI) feature which activates a message waiting light on an IP phone to inform a user of unheard voicemail messages.
Silence Suppression	<p>Suppresses silence packets during VoIP sessions. When silence is detected during a call, AltiWare stops sending packets to the other side. When silence is detected during voice mail, the silence period is not recorded.</p> <p>AltiWare disconnects the voice mail session when a silence period exceeds 7 seconds during voice mail recording over VoIP.</p>
G711 Jitter Buffer Range (ms)	<p>Indicates the delay, in milliseconds, used to buffer G.711 voice packets received from the IP network. Voice packets sent over the IP network may incur different delays due to network load or congestion. The jitter buffer helps to smooth out the delay variation in the arriving voice packets and maintain voice quality at the receiving end. The initial values for the jitter buffer is 10 min. to 20 max milliseconds.</p> <p>The jitter buffer should be adjusted according to the WAN bandwidth allocated to data traffic.</p>

Parameter	Description
G723 Jitter Buffer Range (ms)	<p>Indicates the delay, in milliseconds, used to buffer G.723 voice packets received from the IP network. Voice packets sent over the IP network may incur different delays due to network load or congestion. The jitter buffer helps to smooth out the delay variation in the arriving voice packets and maintain voice quality at the receiving end. The initial value for the jitter buffer is 10 min. to 20 max milliseconds.</p> <p>The jitter buffer should be adjusted according to the WAN bandwidth allocated to data traffic.</p>
G711 RTP Packet Length (ms)	<p>Lets you configure the length of the RTP packets for G.711 in milliseconds. The RTP packet length can be set to 10, 20 or 30 milliseconds.</p> <p>Note: A maximum range of 30 ms is not supported for the Cisco router.</p>
Type	<p>Lets you select between a 12-port G.723.1 configuration and a 30-port G.711 configuration. This is available only with the 12-port board and 30-port upgrade license.</p>

Debugging the Triton VoIP Configuration

Click the **Debug** button in the Triton VoIP Configuration dialog box (see Figure 6) to open a small dialog box for typing and sending a debug string.

Triton T1/PRI Trunk Properties

To configure a Triton T1/PRI channel, select a Triton T1/PRI channel from the trunk channels list in the Trunk Configuration window, then click the **Trunk Properties** button or double-click the list entry to view the **Triton T1/PRI Trunk Line Properties** dialog box.

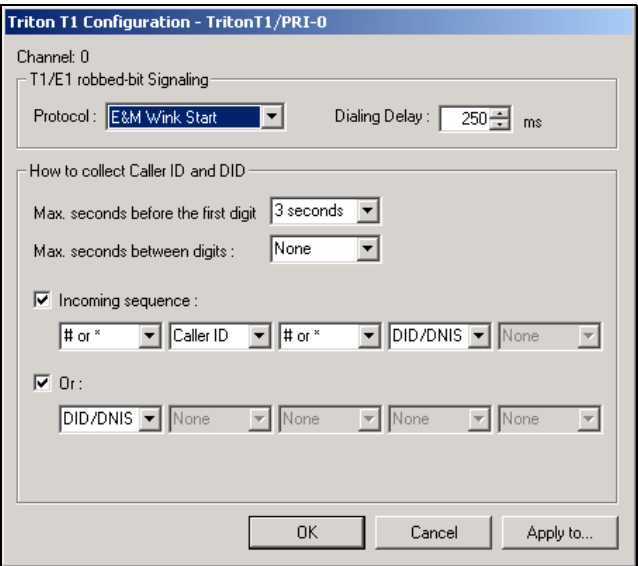


Figure 7. Triton T1 Configuration dialog box

The following are the parameters for the Triton T1 Configuration dialog box:

Parameter	Description
T1 robbed-bit signaling	
Protocol	You can set Protocol to one of the following: <ul style="list-style-type: none">• E&M Wink Start (default)• E&M Immediate Start• Ground Start• Loop Start For signaling from one board to another, only FXS (Foreign Exchange Subscriber) is supported. Loop Start and Ground Start protocols cannot be used for interfacing between two boards.
Dialing Delay	Specifies the delay, in milliseconds, after trunk seizure and before digit dialing. <i>Do not change this value unless advised.</i>
Caller ID and DID Collection	

Parameter	Description
-----------	-------------

You can select the maximum time-out delays, in seconds and the appropriate sequence of symbols to be collected for Caller ID and DID.

Max. seconds before the first digit	Maximum wait time before time-out for the system to identify this digit after either the first <i>ring</i> in ground start or loop start or the <i>wink</i> in wink start. The range is from 1-6 seconds, or <i>None</i> , with a default value of 3 seconds. <i>Do not change this value unless advised.</i>
--	---

‘**None**’ means **no** Caller ID or DID information will be collected. All other options will be grayed out. Use this option to disable Caller ID and DID collection.

Max. seconds between digits	Maximum wait time before time-out between two digits. Default value is ‘ None .’ <i>Do not change this value unless advised.</i>
------------------------------------	---

Selecting ‘**None**’ means the system will only wait for the sequence of digits that are collected within the length of time specified in the Max. seconds before the first digit field.

Incoming sequence	Select up to five incoming symbols to collect from the Caller ID or DID digits:
--------------------------	---

- None
- #
- *
- # or *
- Caller ID
- DID/DNIS

Selecting ‘**None**’ in any field of the sequence will terminate the sequence and automatically disable subsequent entries in the sequence.

The default sequence is:

“# or *” (and then) “Caller ID” (and then) “# or *” (and then) “DID/DNIS”

Parameter	Description
Or	<p>Sets up an additional, alternative sequence. You can select another set of up to five incoming symbols to collect.</p> <p>Not checking any box is equivalent to checking ‘None’ in the first field.</p> <p>The default sequence is:</p> <p>“DID/DNIS”</p>
Apply to...	<p>If appropriate, you can use this button, as described in “Configuring One or Multiple Trunks” on page 7-3, to apply the Caller ID Collection to multiple T1 trunks.</p>

Note: In order for back-to-back T1 and tie trunk T1 configurations to perform properly, it is recommended that you use the system’s default incoming call sequences:

☒ Incoming sequence :

or *

Caller ID

or *

DID/DNIS

None

☒ Or :

DID/DNIS

None

None

None

None

Caller ID and DID Incoming Sequence Example

The following is an **example** of a Caller ID and DID/DNIS incoming sequence window.

The screenshot shows a window titled "How to collect Caller ID and DID". It contains the following settings:

- "Max. seconds before the first digit" is set to "3 seconds".
- "Max. seconds between digits" is set to "None".
- The "Incoming sequence" checkbox is checked. Below it, there are two rows of dropdown menus:
 - Row 1: "# or *" (selected), "Caller ID", "# or *" (selected), "DID/DNIS", and "None".
 - Row 2: "DID/DNIS", "None", "None", "None", and "None".
- The "Or:" checkbox is also checked.

At the bottom of the window are three buttons: "OK", "Cancel", and "Apply to...".

Figure 8. Incoming Sequence window

When a call comes in, the system tries to match the incoming sequence to either the first or second Incoming Sequence Digit String sequence. If no match is found, no Caller ID or DID digits will be collected.

- The system waits 3 seconds for the first digit to arrive. If the symbol is a #, it continues with the first sequence. Otherwise, it looks for a match to the first (and only) symbol in the second sequence, the DID/DNIS number.
- For the example, let's say the system receives the #. It then waits 1 second between each digit for the next digit until all digits are received. The * symbol is a delimiter between Caller ID and DID digits.

In this example, the Altiserv system is expecting either the sequence #CID*DID or only DID digits for incoming calls. If no match is found for either sequence, no Caller ID or DID digits are collected.

Incoming Call Routing

To set incoming call routing for a trunk, select the trunk in the General window, then click the **In Call Routing** tab in the **Trunk Configuration** window to display the **In Call Routing** window. The trunk location appears in the title bar.

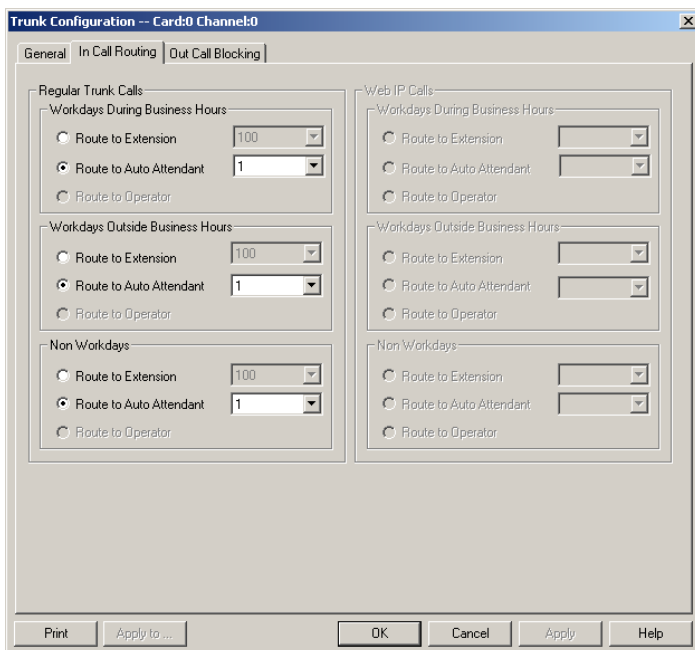


Figure 9. In Call Routing window, Trunk Configuration

For each trunk—or using **Apply to...** to apply the settings to multiple trunks—you can set routing for the three time periods defined in the System Configuration Business Hours window (“Setting Business Hours” on page 5-8):

- During Business Hours
- Outside Business Hours
- Non Workdays

Within each of these three time slots, you have the following routing options for incoming calls:

- Route to an extension selected in the drop-down list
- Route to an auto-Attendant number selected in the drop-down list
- Route to the operator

Outgoing Call Blocking

To set outgoing call blocking for a trunk, select the trunk in the General window, then click the **Out Call Blocking** tab in the **Trunk Configuration** window to display the **Out Call Blocking** window with the selected trunk location in the title bar.

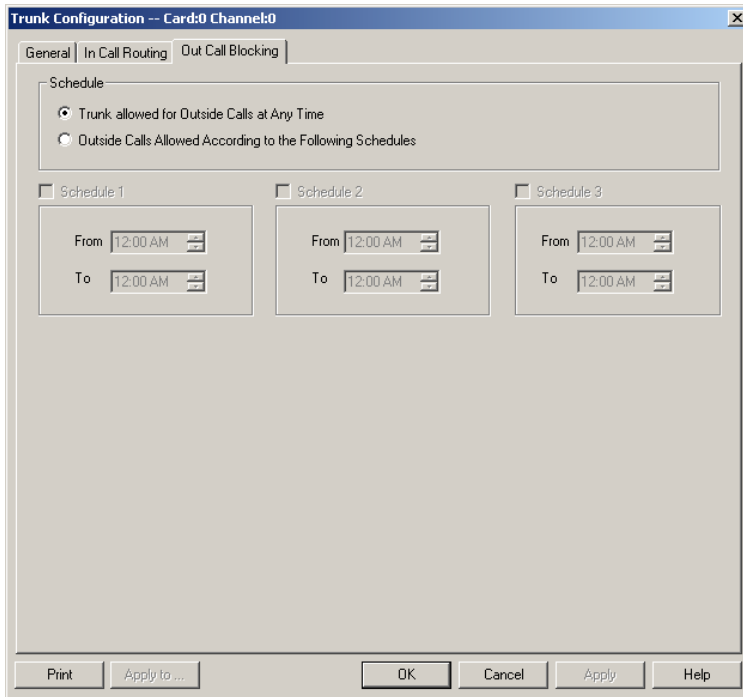


Figure 10. Out Call Routing window, Trunk Configuration

If you select **Trunk allowed for Outside Calls at Any Time**, call restrictions set in System Configuration, Outcall Routing, and Extension Configuration still apply to calls made on the trunk.

If you select **Outside Calls Allowed According to The Following Schedules**, you can then use the Schedule 1, 2, and 3 options to set up to three different time periods during which calls are allowed.

You can use **Apply to** to apply the settings to multiple trunks.

Extension and Group Configuration



There are four types of extensions:

- **Physical Extensions** are associated with a physical port and device, usually a telephone set. This is what most users think of as an *extension*. With the **ACC Site License**, a physical extension can be further categorized as an **agent**, which will identify the extension to the System Administrator as an eligible extension that can be added to a workgroup. See “Agent Check Box” on page 8-8 for more information.
- **Virtual Extensions** are not associated with a physical port. Virtual extensions can be used as message mailboxes and in telephone sharing environments. Users of a virtual extension can log in on any available station to access physical extension features using Feature Codes. With the **ACC Site License**, a virtual extension can be further categorized as an **agent**, which will identify the extension to the System Administrator as an eligible extension that can be added to a workgroup. See “Agent Check Box” on page 8-8 for more information.

You can create up to 2,000 total (physical + virtual) extensions.

- **Huntgroups.** The primary use of a huntgroup is similar to that of workgroups—when the huntgroup extension is dialed, the system hunts for an available member extension to which to route the call. You can use huntgroups for various purposes, for example, in selecting a huntgroup as a System Operator.

- **Workgroups.** The primary use of a workgroup is to have specific calls answered by a designated group of extension users—when the workgroup extension is dialed, the system hunts for an available member extension to which to route the call. You can use workgroups for various purposes, for example, in selecting a workgroup as a System Operator. Also, workgroups have more call handling options available.

The **ACC License** is required in order to create workgroups. When upgrading to 4.6 without an ACC License, existing workgroups are converted to huntgroups. Only agents can be part of workgroups.

IP extensions can be configured either as physical or virtual extensions.

After creating the extensions, you then work with the following settings, each of which is accessed by a tab in the Extension Configuration window.

- **General** setup—creating the extension numbers and assigning people to the extensions, creating group pilot numbers, and setting other basic parameters.
- **Group**—adding and removing group members.
- **Station Speed**—extension speed dial numbers.
- **Mailbox Settings**—capacity and features options for extension mailboxes.
- **Notification**—preferences and options for voice mail notifications.
- **Restrictions**—extension out-call restrictions.
- **Answering**—call forwarding, call waiting, and call handling preferences and options.
- **One Number Access**—special handling for designated VIP calls.
- **Monitor List**—extension rights to monitor other extension calls.

Three Configuration Windows in One

Certain configuration functions apply only to physical extensions—for example, configuring the physical line. Other functions apply only to group pilot numbers—for example, setting up incoming call routing to group members when the group extension is dialed. And some functions, or the lack of function, apply only to virtual extensions—for example, call waiting options do not apply to virtual extensions.

Generally, you work on extension configuration by selecting an extension in the General window, then clicking another tab to work on the settings in some other window. The features and functions available in the Extension Configuration windows vary depending on the type of extension selected.

When you select an extension in the General window—the first window you see when you first launch Extension Configuration—and work on it under other tabs, the extension number appears in the window title bar. For example, if you're setting up phone answering options, the group view of the window shows Group Handling options that do not appear in other views.

You can print the data in any of the windows by clicking the **Print** button.

Apply To Button

The extension configuration windows often allow you to apply changes to a particular extension or group or to select many extensions or groups to which to apply the changes.

Clicking the **Apply To** button pops up a list of all extensions to which the change can apply. All extensions are selected by default. You then de-select the ones you don't want, or de-select all and then select the ones you want. Note that you cannot use the mouse to drag over and select multiple items; you must use the Shift and Ctrl keys.

The **Apply To** button is disabled unless there is a change that can be applied to multiple extensions, and when you use it to apply changes to multiple extensions, it works on only those changed attributes that can be applied. For example, if you use **Apply To** on the General window after you changed the person's name, you do not re-assign the same name to others, because the name is not an attribute that uses **Apply to**.

Accessing Extension Configuration

To access Extension Configuration, either select **Extension Configuration...** from the **Management** menu, or click the **Extension Configuration** icon on the Quick Access Toolbar.

Setting up Extensions

The Extension Configuration General window provides for creating extensions and establishing their basic attributes.

Setting up Extensions

The General window is the default tab displayed when you open the Extension Configuration window. If you're viewing another Extension Configuration window, you can click the General tab to open the General window.

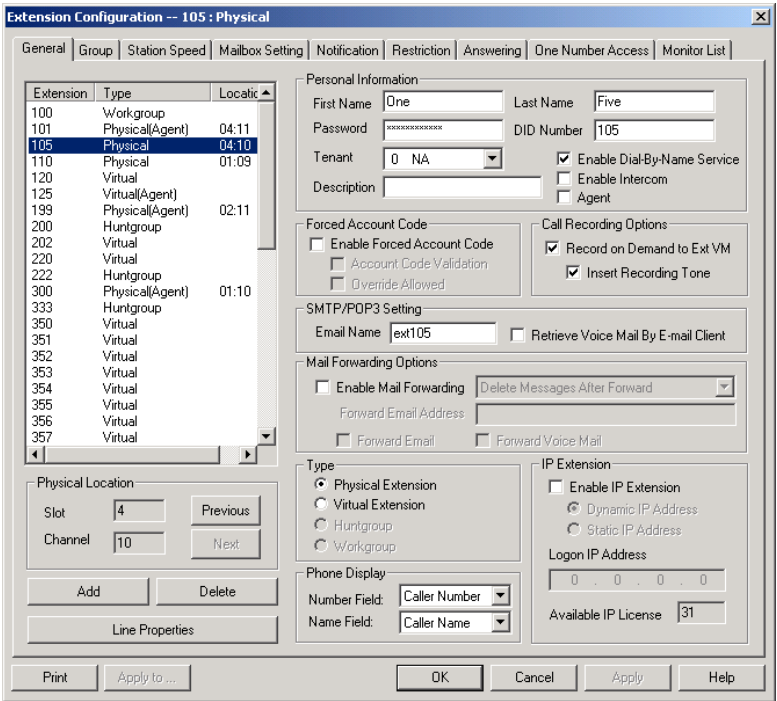


Figure 1. General window, Extension Configuration

Adding New Extensions

To add a new extension:

1. Click the **Add** button in the General window. The **Add New Extension** dialog box opens.

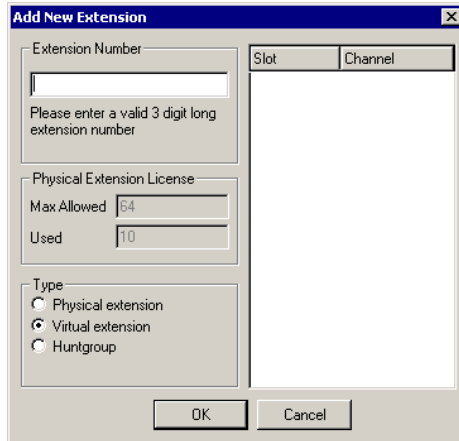


Figure 2. Add New Extension dialog box

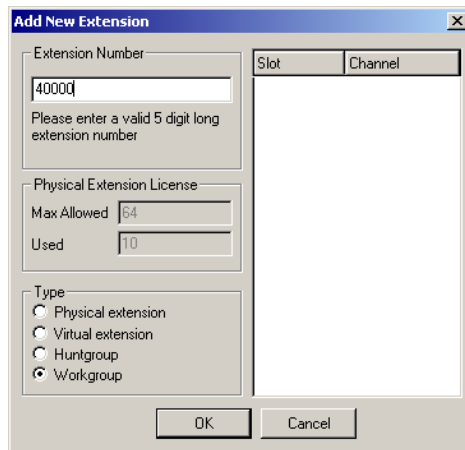


Figure 3. Add New Extension dialog box with ACC License

2. Type in an **Extension Number**.

The number must begin with a number assigned to be used for extension, and it must be the length assigned to extensions, both of which are set in the Number Plan in System Configuration as described in

“Setting a System Number Plan” on page 5-4.

3. Select the **Type** of extension from the options—**Physical**, **Virtual**, or **Huntgroup**. The **Workgroup** option is enabled with the **ACC License**.

Note: See the discussion of the different extension types on page 8-1. Note also that after the extension is created, you can change Virtual extensions to Physical, and vice versa, but you cannot change Physical or Virtual to Group or vice versa.

The **Physical Extension License** displays the maximum number of physical channels licensed to the user as well as the number of assigned, licensed physical channels.

4. Depending on the type of extension you’re creating, take one of the following actions:
 - If you’re setting a *virtual* or *group* number, you’re done. Click **OK**.
 - If you’re setting up a physical extension, select an available physical location—*slot* and *channel* for the line—then click **OK**.
The *slots* (logical board ID) and the *channels* (the ports) are displayed and available if they have not yet been assigned to an extension.

Establishing Basic Extension Attributes

After you create an extension, you can set other basic attributes in the Extension Configuration General window:

To set the Personal Information:

Type in the User Name, Password, DID, Tenant Group, and optional Description:

- **First Name** and **Last Name** of the extension user, each with a maximum of 32 characters.
- **Password** for the extension user. The default is the system default password set on the Number Plan tab of the System Configuration window.

A valid password cannot be the same as its extension number and must be 4–8 digits (numbers or letters A–Z) in length. Basic password patterns, such as repeated digits (1111), consecutive digit strings (1234), or digits that match the extension (Ext. **101** using **1012**, **9101**,

10101, etc.) are not allowed. The letters map to numbers (on a phone, for example) as follows:

Numbers	Letters	Numbers	Letters
2	A, B, C, a, b, c	6	M, N, O, m, n, o
3	D, E, F, d, e, f	7	P, Q, R, S, p, q, r, s
4	G, H, I, g, h, i	8	T, U, V, t, u, v
5	J, K, L, j, k, l	9	W, X, Y, Z, w, x, y, z

- **DID Number**—each extension can be assigned a DID number. This number does not have a fixed length, but the length must be long enough (range 2–16) for the system to match the DID incoming call.

It is **HIGHLY** recommended to use the full 10 digit DID number, not just the last few digits. This full number guarantees the system can send the correct number as the Caller ID on PRI lines. With fewer digits, the system sends the trunk’s *configured phone number* as the Caller ID. If the trunk number is not configured, the system *main number* is sent.

Also, if more than 12 digits are assigned for the DID number, when the extension makes an outbound call through PRI trunks, all the digits will be sent to the target number. If the target number is not able to display all the digits, it may show “Unknown Number” in the Caller ID display.

Note: Please note the following information regarding Caller ID when using particular phones.

- Some phones (such as Nortel) can only display up to 12 digits for the Caller ID.
 - The Alti-IP 600 Phone can support up to 16 digits in the Caller ID display.
 - AltiTouch/AltiTouch Plus phones support up to 12 digits in the Caller ID display. If the phone receives a Caller ID length longer than 12 digits, it will display “Unknown Number.”
- **Tenant**—a drop-down list of Tenant IDs (groups) to which the extension can be assigned. See “Using a Tenant Table” on page 5-33 for more information on Tenants.

Note: If an extension is assigned to **N/A** in the **Tenant** drop-down list, *the extension is able to access all trunks, even though the trunks have been assigned to tenants.*

- **Enable Dial-By-Name Service**—select this box to allow callers to search the extension list by employee name for this extension.

Note: The **Tenant** and **Enable Dial-by-Name Service** settings can be applied to multiple extensions by using **Apply To**, as described in “Apply To Button” on page 8-3.

- **Description**—Optional descriptive information such as cubicle number or job title.
- **Enable Intercom**—select this box to enable the intercom call feature for this extension. Pressing **#93** allows the user to make an intercom call to another intercom-enabled extension.

Note: Intercom is only available for extensions on Triton Analog Extension boards and AltiGen IP Phone extensions. The option is grayed out for extensions on Quantum boards.

Agent Check Box

Checking this box allows the extension to be added as a member of one or multiple huntgroups or workgroups. “(Agent)” will displayed in the extension’s **Type** field, next to the extension type. When selecting which extensions should be members of a *workgroup*, only *agents* can be assigned. And when the Administrator selects the **Group** tab, only *agents* will appear in the **Member/Not Member** lists.

Important Notes:

- An **Agent Seat License** is required any time an agent logs into a *workgroup*. If an Agent Seat License is not available, the system will not let the agent log in.
- Up to 30 agents total in a system is recommended.

Forced Account Code

These settings determine how callers use any account codes you have established when making outgoing trunk calls. For information on creating account/code associations, see “Creating Account Codes” on page 5-15.

- **Enable Forced Account Code**—selected, forces the user to enter an account code.
- **Account Code Validation**—selected, forces the user to enter a valid account code.
- **Override Allowed**—selected, prompts the user to enter an account code, or the user can press # to bypass the account code.

Call Recording Options

The system administrator can specify every extension's voice recording feature. Enabled, this feature will record an extension's incoming call conversation.

WARNING!

Listening in to or recording a conversation without the consent of one or both parties may be a violation of local, state and federal privacy laws. It is the responsibility of the users of this feature to assure they are in compliance with all applicable laws.

Note: The recording session starts when the call enters the connected state and ends when hang up or flash is pressed, or when the call is transferred.

- **Record On Demand to Ext VM** — when enabled, saves recorded calls to extension's voice mail box.
- **Insert Recording Tone**— (enabled only when **Record On Demand to Ext VM** is selected) plays a recording beep to alert the parties that the conversation is being recorded.

Note: For workgroup/agent/silent monitoring voice recording, the file format is ****.sm.r. For barge-in voice recording, the file format is ***.bgn.r

Calls can be silently monitored or barged-in on, *regardless* of agent login status.

Setting Email Options

In the General window, you can set the email options for the extension:

- **Email Name**—the user's email name without the @domain. The default email name is ext[*extension number*], that is, the letters “ext” followed by the extension number. For example, the default email name for extension 2497 would be **ext2497**.
- **Retrieve Voice Mail by Email Client**—selected, this sends voice mail to the user extension as an email attachment. Deselected, voice mail is retrieved as voice mail.
- **Enable Mail Forwarding**—selected, the user's email will be forwarded to the email address you specify in the **Forward Email Address** box. The address should be a full address, including the domain (for example, *jsmith@thecompany.com.*).

If you enable mail forwarding, you also specify what you want done with the original messages after they have been forwarded. In the drop down list you can choose to:

— **Delete Messages after Forward**

— **Keep the Messages as New**

— **Keep Messages as Saved**

Further, if you enable mail forwarding, you can use the check boxes whether you want to **Forward Email**, **Forward Voice Mail**, or both.

Changing the Extension Location or Type

Changing the Type

The type of extension is set when you create the extension: physical, virtual or huntgroup/workgroup pilot, described on page 8-1. After you create the extension, the type is displayed as a **Type** radio button list in the General window.

You can change a **Virtual** extension to a **Physical** one, and *vice versa*, but you cannot change either to a **Huntgroup** or **Workgroup** number, nor can you change a huntgroup or workgroup number to another type after it is created.

If you change the type to physical, you can also set the location and configure the line as discussed in the subsequent paragraphs.

Changing the Location

When you create a physical extension, you assign it a location or you accept an automatically assigned location. If you have available extensions, you can change the location in the General window.

To change the location, select the extension number in the list of extensions, then click the **Previous** or **Next** buttons to change the slot and channel settings until the location you want is displayed. Like other changes, this change isn't finalized until you click **Apply**.

Setting an IP Extension

The IP Extension option allows an H.323 compliant terminal device (IP phone) to connect to AltiServ. IP extensions have the same features as analog stations. For system requirements and limitations on setting up IP extensions, see *Chapter 16, Setting Up IP Extensions*.

To use the IP Extension option, check the **Enable IP Extension**, then set the IP addressing by choosing either **Dynamic** or **Static IP Addressing**. If you choose Static addressing, you need to type in a Logon IP Address.

The type of addressing you use affects users:

- **Using static IP addressing**, the extension user logs in from the station having the IP address. An advantage for virtual extensions is that the user doesn't have to log in at all; when the user connects to the system, the extension is immediately recognized as an IP extension. When physical extensions connect, on the other hand, the system prompts the user to log in. Static addressing is more convenient for users and may be preferred by users who work primarily at a specific location.

Important: If you enter the server's IP address as the **Logon**, IP trunk calls from another AltiServ system will receive a dial tone rather than the Auto Attendant. From the dial tone, callers can dial extension numbers on this system.

- **Using dynamic IP addressing**, the IP extension can log in from any IP address. However, the IP extensions must always log in via the Auto Attendant and log into voice mail to activate the IP extension. Users who travel may well prefer dynamic addressing.

Note: AltiGen IP Phone extension users should not activate their IP Phone by logging into voicemail — instead, **#27** should be used to log in.

Important: When you enable dynamic IP addressing, a physical extension on one AltiServ system can effectively disable the Auto Attendant for system-to-system IP calls to the second system. This happens if a physical extension on one system calls a second system via an IP trunk, logs into an extension, and

enables an IP connection. As long as the connection is active, all IP trunk calls from the first to the second system will receive a dial tone rather than the Auto Attendant. From the dial tone, callers can dial extension numbers on the second system.

Setting VoIP Codecs

The default codec for static IP extensions is G.711, which gives a bandwidth of approximately 64 kbps. This is appropriate for lease lines or high-speed connections. The default codec for dynamic IP extensions is G.723, which gives a bandwidth of approximately 6.4 kbps. This is appropriate for internet connections.

You can change these defaults and set dynamic IP addressing ranges and codecs for AltıServ-to-AltıServ connections using the VoIP Codec Configuration window.

To open the VoIP Codec Configuration window:

- Choose **VoIP Codec Configuration** from the **Management** menu.

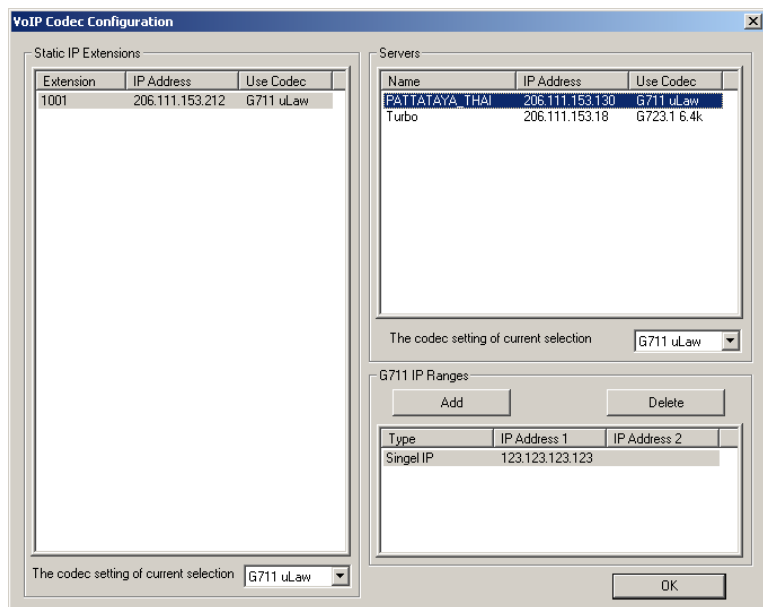


Figure 4. VoIP Codec Configuration window

Parameter	Description
Static IP Extensions	Lists IP extensions with static IP addressing you have created in the Extension Configuration window
Servers	Lists other AltiServ servers you have entered in the IP Dialing Table window, which have AltiServ-to-AltiServ connections to your server
G711 IP Ranges	Lists the G.711 dynamic IP address ranges you have created in the Add IP Codec Setting dialog box, described below

To set the codec of an IP extension with static IP addressing:

1. Select the extension in the **Static IP Extensions** list.
2. In the drop-down below the list, select the codec to use for this extension.

To set the codec for a connection to another AltiServ server:

1. Select the server in the **Servers** list.
2. In the drop-down below the list, select the codec to use for a connection to this server.

Note: AltiServ-to-AltiServ IP connections between systems using OE 4.6 must use the same codec.

To set ranges and values for dynamic IP addressing:

1. In the **G711 IP Ranges** list, click the **Add** button. The **Add IP Codec Setting** dialog appears.



Figure 5. Add IP Codec Setting

2. In the Add IP Codec Setting dialog, specify **Single** or **Range** to set a single dynamic IP address or a range of addresses.

3. Enter a **Start** value and, for a Range, an **End** value for the dynamic IP addresses your IP extension users can access.

You cannot use the minimum and maximum values (0.0.0.0. and 255.255.255.255).

4. Click **OK**.
5. Repeat these steps for every range or value you wish to make available for users of IP extensions with dynamic addressing.

Setting Ranges and Values with the 30-Port IP Board

If you do not have 12-Port IP boards in your system, and only have a 30-Port IP board, you must configure the system to use G.711 only.

To set ranges and values for dynamic IP addressing when only using a 30-Port IP Board:

1. In the **G711 IP Ranges** list, click the **Add** button. The **Add IP Codec Setting** dialog appears.

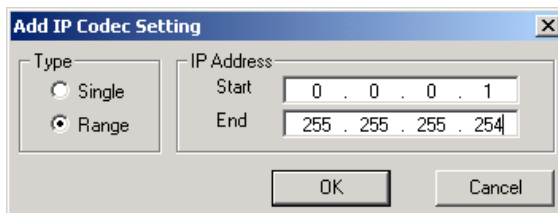


Figure 6. Add IP Codec Setting

2. In the Add IP Codec Setting dialog, specify **Range** to set a range of dynamic IP address.
3. Enter the **Start** value as **0.0.0.1**; for the **End** value, enter **255.255.255.254**.

You cannot use the minimum and maximum values (0.0.0.0. and 255.255.255.255).
4. Click **OK**.
5. From the main menu, go to the **VoIP Codec Configuration** window and change the **codec setting of current selection** of *all* servers and codecs to **G.711 uLaw**, then click **OK**. (By default, server codec is set to G.723.1.)

This will force all connections to be G.711 and allow remote users access to a range of IP addresses, instead of the users having to contact the administrator for the specific IP address.

IP and Physical Extension Login/Logoff Interaction

When an IP extension associated with a physical extension logs in, the physical extension is disabled. When the IP extension logs off, the physical extension is automatically enabled.

While the IP extension is logged in, the user can activate the physical extension on a phone using the #27 feature code. This logs off the IP extension.

Setting the Line Properties

For a physical extension, you can configure hardware options on the board port used for the extensions. To do so, select the extension number in the list of extensions, then click the **Line Properties** button to open a dialog box that is specific to the board using for the extension.

The Line Properties are somewhat different for **Quantum Board** than for **Triton Analog Station Boards**. The subsequent sections deal first with Quantum, then with Triton Analog Station.

Quantum Line Properties

If you select a Quantum board extension and click Line Properties, you'll see the Quantum Line Properties dialog box. Note that you can use the **Apply to** button to apply these hardware settings to one, some, or all ports on the board.

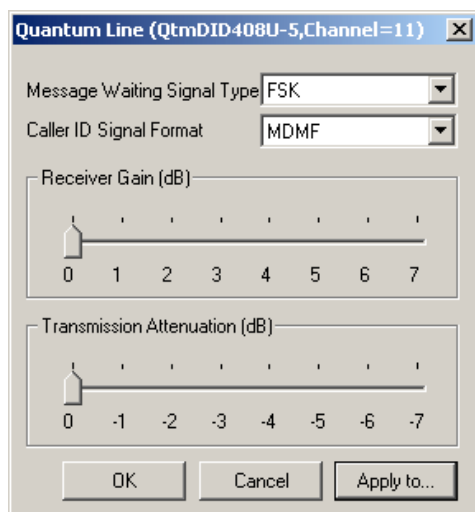


Figure 7. Quantum Line Properties dialog box for extensions

Configure the following hardware extension-specific features:

Parameter	Description
Message Waiting Signal Type	Type of Message Waiting indicator for the phone set: <ul style="list-style-type: none"> • None. • Voltage—voltage-based indicator. • FSK—Frequency Shift Keying indicator. • Tone—tone-based indicator.

Parameter	Description
Caller ID Signal Format	<p>Message format with which to send Caller ID information:</p> <ul style="list-style-type: none"> • None • SDMF—Single Data Message Format for supporting and sending a single data type, such as phone numbers. • MDMF—Multiple Data Message Format for supporting and sending multiple data types, such as name and number information.
Receiver Gain/Transmission Attenuation	<p>Incoming and outgoing volume for every extension. Unlike the Quantum board, these slide settings have positive and negative values. Both defaults are 0 decibels.</p>

Caution: Use caution in setting the Receiver Gain or the Transmission Attenuation. If either setting is too high, the result will be distortion in voice quality.

Triton Analog Station Line Properties

If you select a Triton Analog Station Board extension and click the **Line Properties** button, you'll see the *Triton Analog Station Line Properties* dialog box. Note that you can use the **Apply to...** button to apply these hardware settings to one, some, or all ports on the board.

You can also access this window by double-clicking a span in **Channel Mapping List** of the Triton Analog Station Board configuration window.

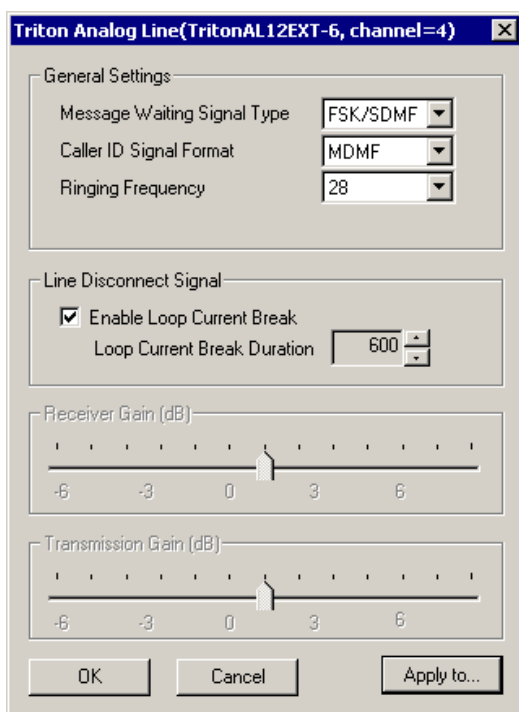


Figure 8. Triton Analog Station Line Properties dialog box

Configure the following hardware extension-specific features:

Parameter	Description
Message Waiting Signal Type	FSK or None .
Caller ID Signal Format	SDMF , MDMF , or None .
Line Disconnect Signal	The loop break desired for answering supervision, either 200 or 600 ms . Note: If the extension uses a 390 phone with Intercom service, set this to 750 ms .
Ringing Frequency	Select the frequency in Hz that is necessary for the equipment attached to this line.
Receiver Gain/Transmission Attenuation	Incoming and outgoing volume for every extension. Unlike the Quantum board, these slide settings have positive and negative values. Both defaults are 0 decibels.

Caution: If the Receiver Gain or the Transmission Attenuation setting is too high, the result will be distortion in voice quality.

Phone Display Options

For analog and IP phones, the administrator can select what information is to be displayed. Depending on the number of display lines on the LCD, the phone can be set up to show two lines of specific caller information on the display.

In the **Phone Display** field, use the **Number Line** and **Name Line** drop-down lists to select the caller information to display:

- **Caller Number**
- **Caller Name**
- **DNIS Number**
- **DNIS Name**
- **IVR Data**

- **User Data**

Note: For most phones, the number line can only display a number. If the **Number Line** is set to **Caller Name**, **DNIS Name**, **User Data** or **IVR Data**, the phone may display “Unknown” on the number line.

Alti-IP 600 Phone Display Notes

For the Alti-IP 600, the **Name Line** displays caller information under the following conditions:

- If **Name Line** is set to **Caller Name**, it will display caller name. If there is no name information, the number will be displayed.
- If **Name Line** is set to **Caller Number**, it will display the caller number. If there is no number information, “Unknown” will be displayed.
- If **Name Line** is set to **DNIS Name**, it will display DNIS name. If there is no name information, the DNIS number will be displayed.
- If **Name Line** is set to **DNIS Number**, it will display the DNIS number. If there is no number information, “Unknown” will be displayed.

Setting up Groups

What is a Huntgroup?

The primary use of a huntgroup is similar to that of workgroups — when the huntgroup extension is dialed, the system hunts for an available member extension to which to route the call. You can use huntgroups for various purposes, for example, in selecting a huntgroup as a System Operator.

Huntgroups vs. Workgroups

As of Release 4.6 and higher, huntgroups differ from workgroups in that huntgroups do not require special licensing (whereas workgroups require Agent Seat Licenses to be available any time an agent logs in). Workgroups also have more call handling options available.

AltiWare allows up to 32 groups to be configured and extensions can be assigned to multiple groups. Both agents and non-agents, can be assigned to huntgroups. Only agents can be assigned to workgroups.

There are three sets of Agent Configuration steps to set up groups:

- The first step is creating a group pilot number, a type of logical extension, as described in “Setting up Extensions” on page 8-3.
- Once the group pilot number is created, you can use the Group configuration window to set up parameters for the group.
- Once the group pilot number is created, you can use the Group window of Extension Configuration to assign physical extensions as members of the group.

Note: A feature of group membership is that all members are set to the “Logout” state at system startup or reboot.

Apply to Button

The group configuration window often allow you to apply changes to a particular group or to select many groups to which to apply the changes.

Clicking the **Apply to** button pops up a list of all groups to which the change can apply. All groups are selected by default. You then de-select the ones you don’t want, or de-select all and then select the ones you want. Note that you cannot use the mouse to drag over and select multiple items; you must use the Shift and Ctrl keys.

The **Apply to** button is disabled unless there is a change that can be applied to multiple groups, and when you use it to apply changes to multiple groups, it works on only those changed attributes that can be applied.

Establishing Group Membership

There are two different ways to attach extensions to groups.

1. If you select a **huntgroup** or **workgroup** in the Extension Configuration General window, then click the **Group** tab:
 - you open the *huntgroup* view of the group window, which provides for *adding extensions to the selected group* and *setting group queue handling options and group login status*
 - or
 - you open the *workgroup* view of the group window, which provides for *adding extensions to the selected group*, *setting group queue handling options and group login status*, and *queue overflow handling*.
2. If you select an **extension** in the Extension Configuration General window, then click the **Group** tab, you open the *Extension* view of the

group window, which provides for *assigning groups to the selected extension*.

This section discusses the first way first.

Important: Regardless of which way you add extensions to groups, the order in which you add extensions can have consequences. For example, one way of handling incoming huntgroup calls is to always send the call to the first extension, if available, the second if the first is not available, and so forth.

When you add an extension to a huntgroup, the extension is in the “Logout” state. The huntgroup member must manually log in.

Adding Extensions to Groups

To add extensions to a group, select the group number (huntgroup or workgroup) in the list of extensions in the General window, then click the **Group** tab. The group number appears in the window title bar.

For huntgroups, the Group window appears as follows:

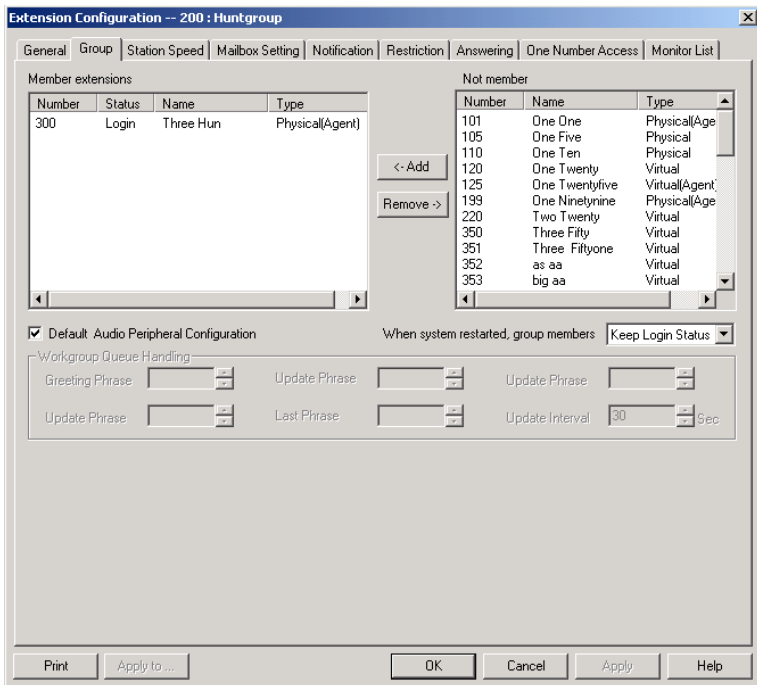


Figure 9. Huntgroup View of Group window, Extension Configuration

Setting up Groups

For workgroups, the Group window appears as follows:

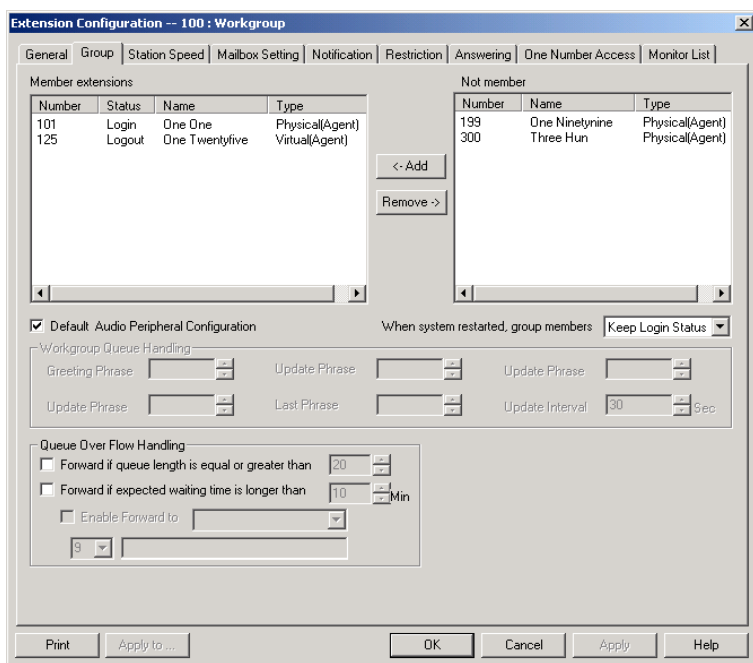


Figure 10. Workgroup View of Group Window, Extension Configuration

Adding or Removing Members

To add extension(s) to the selected group:

1. In the Group view of the group window, click the extension number(s) in the **Not Member** list.
2. Click **Add** to move them to the **Member** list.

Note: If the group pilot extension is configured to Ring All Available Members, the maximum number of members is 20. See “Setting Huntgroup Handling” or “Setting Workgroup Handling” for details.

To remove extension(s) from a group:

1. Click the extension number(s) in the **Member** list.
2. Click **Remove** to move them to the **Not Member** list.

Setting the Audio Peripheral Options

In the group view of the Group window, you can also set audio peripheral options—which greetings and updates to use, and so forth. For each group you can either use the system default audio peripheral configuration or you can set up a custom configuration.

The default audio peripheral setup is discussed in “Additional Setup” on page 11-1. Custom configuration involves choosing other phrases—a function set with the Auto Attendant as discussed in *Chapter 10, Auto Attendant Configuration*.

You can also use **Apply to** to apply the configuration to one, some, or all groups.

Setting Group Automatic Login/Logout

In the Group window, you can set options for automatic login/logout of group members whenever the system is restarted. Use the drop-down list to select from the following:

- Keep Login Status
- All Login (not supported for workgroups)
- All Logout

Handling Queue Overflow

In the workgroup view of the Group window, you can also set options for handling long queues or long wait times for callers. When a queue exceeds a set number of calls, or callers are waiting beyond a set length of time, calls are automatically forwarded to an Auto Attendant, voicemail box, extension, or outside number.

To set options for handling call overflow:

1. In the **Queue Overflow Handling** field group, set options for queue length and wait time. You can set one or both of these.
2. Set a call forwarding destination if the queue length and wait time settings are exceeded. If this option is not enabled, calls will go to the workgroup’s voicemail.

Note: If you choose an extension, this can be the same workgroup extension or another workgroup.

You can use **Apply to** to apply the configuration to one, some, or all groups.

Assigning Groups to Extensions

This is the second of the two ways (see “Establishing Group Membership” on page 8-21) to assign extensions as members of groups.

This method—selecting a physical or virtual extension and then clicking the **Group** tab—provides an extension view of groups. You can see all the groups to which the extension belongs, and you can change those assignments.

To open the Extension view of the Group window:

1. Select the Virtual or Physical extension number in the list of extensions in the General window.
2. Click the **Group** tab. The *Extension* view of the group window opens, with the extension number appearing in the window title bar.

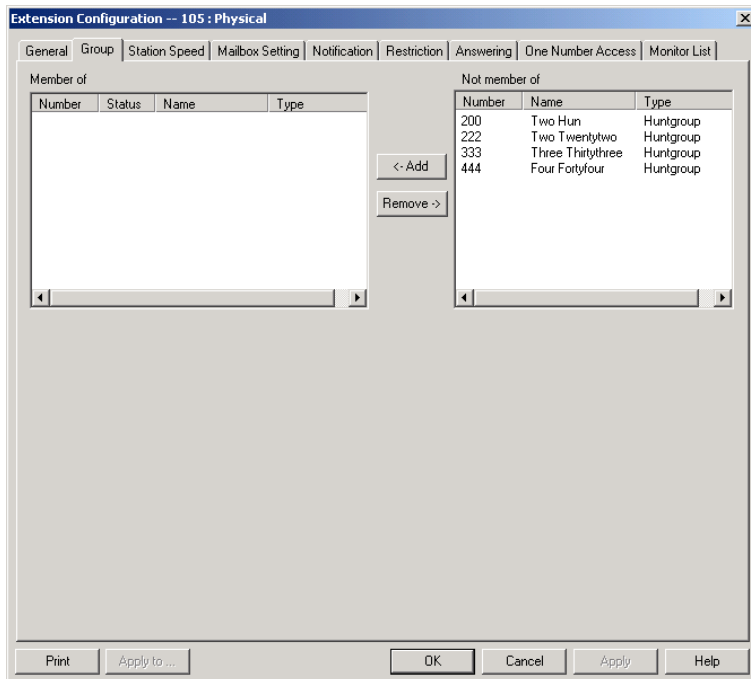


Figure 11. Extension view of Group window, Extension Configuration

Adding or Removing Group Assignments

To assign groups to the selected physical or virtual extension:

1. In the Extension view of the Group window, click the Group number(s) in the **Not Member** list.
2. Click the **Add** button to move them to the **Member** list.

Note: If the group extension is configured to Ring All Available Members, the maximum number of members is 20. See “Setting Huntgroup Handling” on page 8-45 or “Setting Workgroup Handling” on page 8-46 for details.

To remove groups assigned to a physical or virtual extension:

1. Click the group number(s) in the **Member** list.
2. Click the **Remove** button to move them to the **Not Member** list.

Setting Wrapup Time

In the Extension view, you can set the Wrapup Time for the selected physical extension. *This option doesn't appear for a virtual extension.* Wrapup time is a system delay before routing the next call to the extension, and it gives the agent time to finish up with notes, prepare for the next call, log out of the group, or hit the “Wait” button in Altiview after putting a call on hold and going back onhook. You can set a wrapup time of up to 29 minutes, 59 seconds.

To set the extension wrapup time:

1. Check the **Allow Wrap Up Time** box.
2. Using the drop-down lists, select the minutes and seconds for the delay. Be sure to set at least enough time (e.g. 5 seconds) to allow an agent to hit the “Wait” button in Altiview after putting the caller on hold and going onhook.

Setting Inter Call Delay

Like Wrapup time, Inter Call Delay can create time before the next call comes in. It can be set for any extension.

If the system is delaying the next call to a user extension based on the Wrapup Time setting, the Inter Call Delay setting is ignored.

However, if Wrapup Time does not apply—for example, if it is de-selected—then Inter Call Delay acts as follows:

- If the extension user hangs up and there are callers waiting in an extension or group queue, the ring is delayed for the number of seconds specified in the Inter Call Delay setting.
- If the extension user hangs up, there is no one waiting in a queue and a call comes in within the Inter Call Delay period, the call is put through immediately; the Inter Call Delay period is ignored.

To set the extension Inter Call Delay time:

1. Check the **Inter Call Delay** box.
2. Using the drop-down lists, select the seconds for the delay. The default is 15 seconds.

Operation Notes

- Conference calling may not work properly when an internal call is made to workgroup that has Ring All Available Members setting. If the internal extension is connect to an agent of this workgroup and then initiates a conference call to another agent in this workgroup, the first agent does not connect to the conference call.
- The system does not follow Busy Call Handling for a workgroup if no IP trunks are available for IP extension agent. Instead, the system will send the call to the workgroup's voice mail.

Setting up Station Speed Dialing

For each extension, you can set up to 20 station speed dial numbers. The numbers available are from 00–19, used following the extension speed dial access code, #77.

To work with Speed Dialing settings, select the extension number you want to work with from the list in the Extension Configuration General window, then click the **Station Speed** tab.


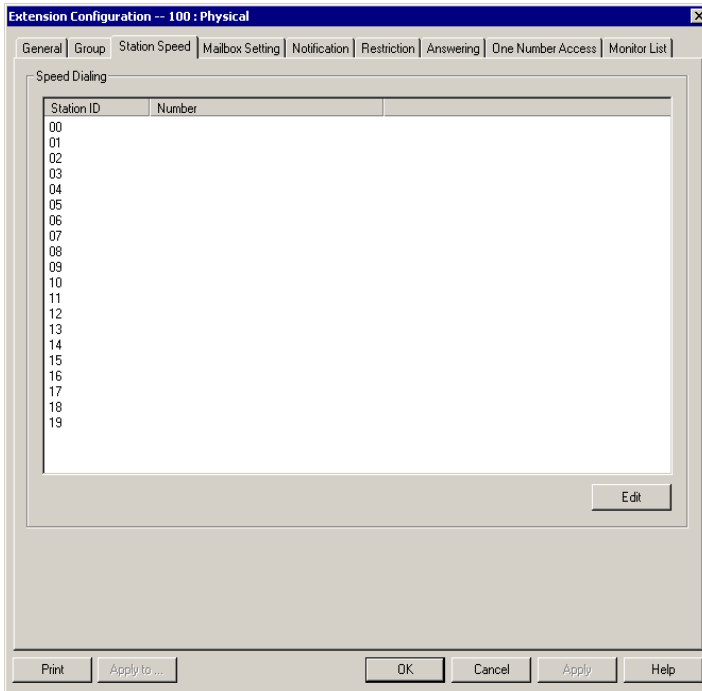


Figure 12. Station Speed Dialing window, Extension Configuration

Editing Speed Dial Entries

To add or edit an entry:

1. Double-click the **Station ID** number you want to work with, or select the number and click **Edit**. A dialog box appears:

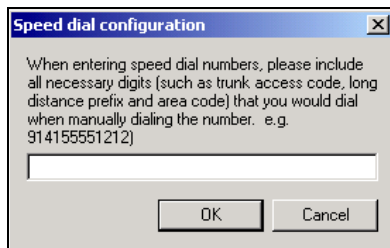

2. Type in the full number as you would dial it, with a maximum of 20 digits per entry. For example, the phone number 914085551212 comprises of **9** (trunk access code), **1** (long distance prefix), followed by **408** (area code), and finally the seven digit telephone number.

Valid digits include **0** through **9**, **#**, *****, and **(,)** comma. **The comma represents a one (1) second pause.**

Note: You can use **Apply to** to apply speed dialing numbers to one, some, or all physical extensions.

Setting the Mailbox Options

The Mailbox Settings define how voice messages are handled for an extension: whether the mailbox is information only or is full-featured, how messages are announced and processed, and how much capacity is allotted to message storage.

To work with mailbox settings, select the extension number you want to work with from the list in the Extension Configuration General window, then click the **Mailbox Setting** tab to open the Mailbox Setting window.

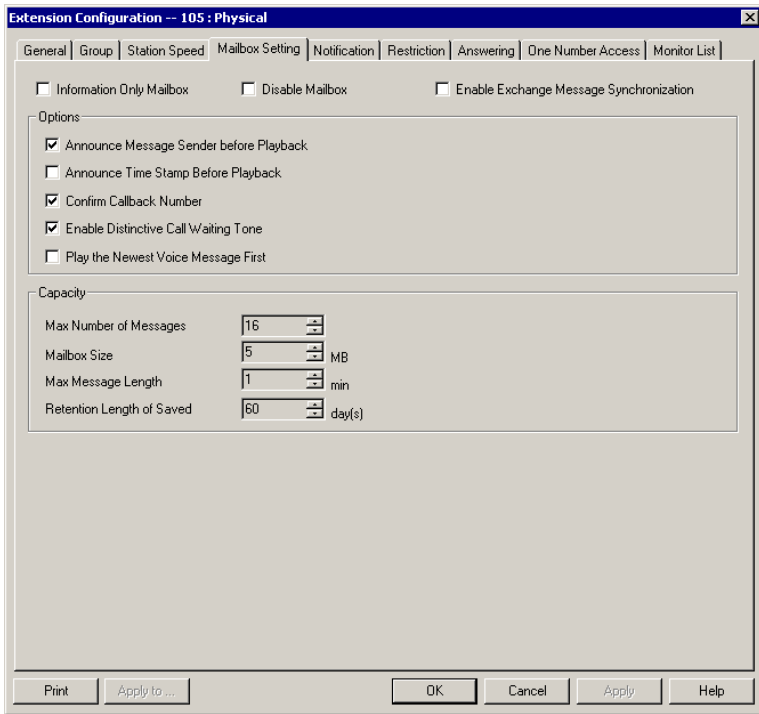


Figure 13. Mailbox Setting window, Extension Configuration

Note: You can use **Apply to** to apply mailbox settings to one, some, or all extensions.

Setting an Information-Only Mailbox

You can select the **Information Only Mailbox** check box to set virtual or physical extension mailboxes to Information Only, then click **Apply to** to set one or more extension mailboxes.

An Information Only mailbox allows callers to listen to customized recorded announcements but does not provide taking messages from the caller. To repeat the message, callers are instructed to press the # key.

You cannot set a group number mailbox to **Information Only**.

Disabling a Mailbox

When you disable a mailbox, the normal greeting is played but callers cannot leave messages.

Synchronizing with Exchange Server

If your system is set up to synchronize with an Exchange Server, you can select the **Enable Exchange Message Synchronization** check box to enable synchronization for voice mails. See “Setting E-mail Messaging (SMTP/POP3) Options” on page 5-25, and “Setting up an Exchange Server” on page 14-10.

Setting Mailbox Playback Options

You can use the following checkboxes to turn on or off options for listening to playback of recorded messages. These options apply to both new messages and saved messages, and they can be applied to multiple extensions using **Apply to**.

Parameter	Description
Announce Message Sender Before Playback	Selected, the user hears the name of the message sender (internal sender only) before listening to recorded Altigen Voice Mail System messages.
Announce Time Stamp Before Playback	Selected, the user hears the timestamp (time and date) of each message before playback.
Confirm Callback Number	Selected, system confirms the accuracy of the caller's number.
Enable Distinctive Call Waiting Tone	Selected, the user hears three different call waiting tone cadences to distinguish between internal, external, and operator calls (see “Distinctive Ring” on page 5-3).
Play the Newest Voice Message First	Selected, voicemails are played in reverse order of their delivery when the user retrieves them.

Setting Mailbox Capacities

You can set various mailbox capacities with the following options:

Parameter	Description
Max Number of Messages	Maximum number of messages stored in the user's mailbox. The range is 1–999 , defaulting to 100.
Mailbox Size	Mailbox size in MBs of stored messages. The range is 1–500 MB, with a default of 50.
Max Message Length	Maximum length of voice messages in minutes. The range is 1–30 minutes, with a default of 5 minutes.
Retention Length of Saved Messages	Number of days saved messages are archived by the system. The range is 1–90 days, with a default of 60.

These options can be applied to multiple extensions using **Apply to**.

Setting Message Notification Options

The Notification tab of Extension Configuration provides for setting notification options on new incoming email as well as voice messages.

To work with notification settings, select the extension number from the list in the Extension Configuration General window, then click the Notification tab to open the Notification window.

Setting Message Notification Options

Extension Configuration -- 100 : Physical

General | Group | Station Speed | Mailbox Setting | **Notification** | Restriction | Answering | One Number Access | Monitor List

Message Notification

☒ None
☐ Urgent Voice Messages Only
☐ All Voice Messages
☐ All Voice Messages and E-Mails

Notification or Reminder Message by Calling a

☒ Phone ☐ Pager ☐ Extension Any []

For Phone and Pager options, choose the trunk access code from the drop down list, and enter the number in the edit box (e.g. "14155551212").

Send Notification or Reminder Message

☐ 5 Seconds after Dialing
☒ 0 Seconds after Answered

Schedule

☐ Non-Business Hours
☒ From 12:00 AM To 12:00 AM
☐ Any Time

Print Apply to ... OK Cancel Apply Help

Figure 14. Notification window, Extension Configuration

Individual users can also configure **Message Notification** within the AltiGen Voice Mail System.

Note: You can use **Apply to** to apply notification settings to one, some, or all extensions.

Setting the Message Types for Notification

Select the types of messages for which the extension user is notified:

- **None**—selected, the user is *not* notified with a call regarding newly received messages. Selecting this option does not prevent the user from getting message waiting indicators or stutter dial tone when new messages are received.
- **Urgent Voice Messages Only**
- **All Voice Messages**
- **All Voice Messages and E-mails**

Setting the Type of Notification

There are three options for sending the notification or reminder message: **phone**, **pager**, or **extension**.

To use the **Extension** option, select the **Extension** radio button, then type the extension number into the text box. For the **Phone** and **Pager** options, first specify the trunk or route access code using the drop-down list next to the **Extension** radio button. The **Any** option means to locate any available trunk. Then type in the number with all relevant dialing prefixes other than the trunk code, using a maximum of **80** digits.

Note also the following considerations:

- Using the **Phone** option, see “Outcall to Cellular or PCS Phone Numbers” on page 8-35.
- For the **Pager** option, the system calls the specified pager number and then dials the system main number (as set in the System Configuration General window), which is then displayed on the user’s pager.

For the operator-assisted paging function, the operator phone number **and** the pager number must be entered in the **<phone number>*<pager number>** format. For example, if the phone number to call the pager operator is **7654321** and the pager number to page the user is **12345678**, the notification outcall number that needs to be entered is **7654321*12345678**. When the pager operator answers the Message Notification call, Altiserv announces the **pager number and the System Main Number** (as configured on the **General** window of **System Configuration**), which will be displayed on the user’s pager. The operator is also given the option to repeat these numbers by pressing ‘#’.

Outcall to Cellular or PCS Phone Numbers

When an outcall is made by the system (for One-Number-Access, Message Notification, Zoomerang, Call Forwarding, etc.) to a cellular or PCS phone, it may ring the phone once but not necessarily present the call and make a connection. This will happen if the ringback tone played by the cellular service provider does not confirm to standard ringback tones. To work around this problem, instruct users to append a few commas (,) to the outcall (cellular) number when entering it. Each comma provides a one second pause.

Setting Notification Timing

You can set the type of delay detection and the duration (from 5 to 30 seconds) before the system sends the return phone number (the System Main Number as set in the System Configuration General window) after the system detects an answer when sending a notification:

- **Seconds after Dialing**—the delay (from 5 to 30 seconds) after *dialing* before the system sends the return phone number.
- **Seconds after Answered**—the delay (from 5 to 30 seconds) after a call is *answered* before the system sends the return phone number.

Setting Notification Business Hours

You can choose one of three options for when the extension user is to be notified of new messages:

- **Non-Business Hours**—notification only during non-business hours. Business hours are set in the System Configuration Business Hours window (“Setting Business Hours” on page 5-8)
- **From/To**—notification during a specified time of day. Select the hours in the **From** and **To** time scroll boxes
- **Any Time**—notification at all times (every day)

Enabling Message Notification

After configuring your message notification settings, to enable message notification, check the “**Allow Calls to be Transferred/Conferenced/Forwarded to an Outside Number**” field in the Restrictions page of Extension Configuration.

Configuring Calling Restrictions

Available restrictions on outgoing calls from extensions range from no restrictions to allowing internal calls only.

System calling restrictions, discussed under “Defining System Call Restrictions” on page 5-12, specify global restrictions for all extensions, and you cannot override the system settings when you configure extensions. Further, restrictions can be placed on *out call routing* calls, as discussed in *Chapter 9, Out Call Routing Configuration*.

To work with extension call restrictions, select the extension number you want to work with from the list in the Extension Configuration General window, then click the **Restriction** tab to open the Restriction window.

Figure 15. Restriction window, Extension Configuration

Note: You can use **Apply to** to apply call restriction settings to one, some, or all extensions.

Setting Call Restriction Options

You can use one of the following options in setting restrictions on an extension or on multiple extensions using **Apply to**.

- **No Restrictions on Outcalls.**
- **Internal Calls Only**—extension-to-extension.
- **Internal and Local Calls Only**—extension-to-extension and local calls only.

- **Allow Internal/Local Calls AND Restrict Other Calls by Allowing Certain Prefixes**—internal calls, local calls and prefixes you specify in the **Prefixes Allowed** boxes. Include all relevant prefix numbers, for example, starting with **1 +** prefix.
- **Allow Internal/Local Calls AND Restrict Other Calls by Disallowing Certain Prefixes**—*disallows* calls to outside numbers with prefixes you specify in the **Prefixes Disallowed** boxes. Include all relevant prefix numbers, for example, starting with **1 +** prefix.

Setting Other Call Restrictions

You can allow or restrict two other types of calls by using the following check boxes. You may choose to enable or disable these options—the default is set to **Allow Calls to be Transferred or Conferenced to an Outside Number** and **Allow Extension User to Make or Return Calls from within VM System**. These default settings reduce the risk of international toll fraud.

Caution: Allowing these options may increase the potential for toll fraud if they are not properly administered.

- **Allow Calls to be Transferred or Conferenced to an Outside Number**—selected, the extension user can transfer or conference calls to an outside telephone number.
- **Allow Extension User to Configure Forwarding, Notification and Reminder Call to an Outside Number**—selected, the extension user can forward calls and use Notification and Reminder Calls from within voice mail. Checking this box will enable Message Notification.
- **Allow Outside Caller to Make or Return Calls from within VM System**—selected, the extension user can make or return calls from within voice mail (i.e. Zoomerang).
- **Allow Outside Caller to Make or Forward International Call from within VM System**—selected, the extension user can make or forward international outgoing calls from within voice mail (i.e. Zoomerang).

Setting Answering Options

Answering options include forwarding, handling busy calls, handling no-answers, group call handling, and other options. Which options are available depends on the type of extension. Groups, virtual and physical extensions each use somewhat different answering options.

You can use **Apply to...** to apply call restriction settings to one, some, or all extensions. See “Apply To Button” on page 8-3 for more information on using **Apply to...** However, since the available options vary with the type of extension, you can only apply the choices to the same type of extension.

For example, If you are working with the settings for a virtual extension, you can use **Apply to...** to apply changes to one, some, or all virtual extensions, but not to physical or group pilot numbers.

To work with extension answering options, select the extension number from the list in the Extension Configuration General window, then click the **Answering** tab to open the Answering window.

The screenshot shows the 'Extension Configuration -- 204 : Physical' window with the 'Answering' tab selected. The window is divided into several sections with various settings:

- Forward All Calls:**
 - ☐ Enable Forward to [dropdown]
- Busy Call Handling:**
 - ☒ Enable Busy Call Handling
 - ☐ Forward to Extension [104]
 - ☒ Forward to Voice Mail
 - ☐ Place Caller in Queue
 - ☐ Forward to Auto Attendant [1]
- Call Waiting:**
 - ☐ Enable Single Call Waiting
 - ☐ Enable Multiple Call Waiting
 - ☐ Enable Live Call Handling
- Do Not Disturb:**
 - ☐ Enable Do Not Disturb
 - Enabling Do Not Disturb will take callers to Busy Handling without ringing the extension.
- No Answer Call Handling:**
 - ☒ Enable No Answer Handling
 - ☐ Forward to Extension [104]
 - ☒ Forward to Voice Mail
 - ☐ Forward to Member Voice Mail
 - ☐ Forward to Next Group Member
 - ☐ Forward to Auto Attendant [1]
- Number of Rings Before Handling:**
 - [4] (with +/- buttons)

At the bottom of the window are buttons for 'Print', 'Apply to ...', 'OK', 'Cancel', 'Apply', and 'Help'.

Figure 16. Answering Window (Extension View), Extension Configuration

Setting Answering Options

Extension Configuration -- 200 : Huntgroup

General | Group | Station Speed | Mailbox Setting | Notification | Restriction | **Answering** | One Number Access | Monitor List

Forward All Calls

☐ Enable Forward to []

Do Not Disturb

☐ Enable Do Not Disturb
Enabling Do Not Disturb will take callers to Busy Handling without ringing the extension.

Busy Call Handling

☒ Enable Busy Call Handling

☐ Forward to Extension [199]

☐ Forward to Group Voice Mail

☒ Place Caller in Queue

☐ Forward to Auto Attendant [3]

Call Waiting

☐ Enable Single Call Waiting

☐ Enable Multiple Call Waiting

☐ Enable Live Call Handling

Group Handling

☒ Ring First Available Member

☐ Ring Next Available Member

☐ Ring All Available Members

No Answer Call Handling

☒ Enable No Answer Handling

☐ Forward to Extension [199]

☐ Forward to Group Voice Mail

☐ Forward to Member Voice Mail

☒ Forward to Next Group Member

☐ Forward to Auto Attendant [3]

☐ Enable One Number Access

☐ Enable RNA Member Auto Log Out

Number of Rings Before Handling

[2]

Group RNA Handling

If all members RNA forward the call

☐ Enable Forward to []

[3]

Print | Apply to ... | OK | Cancel | Apply | Help

Figure 17. Answering Window (Huntgroup View), Extension Configuration

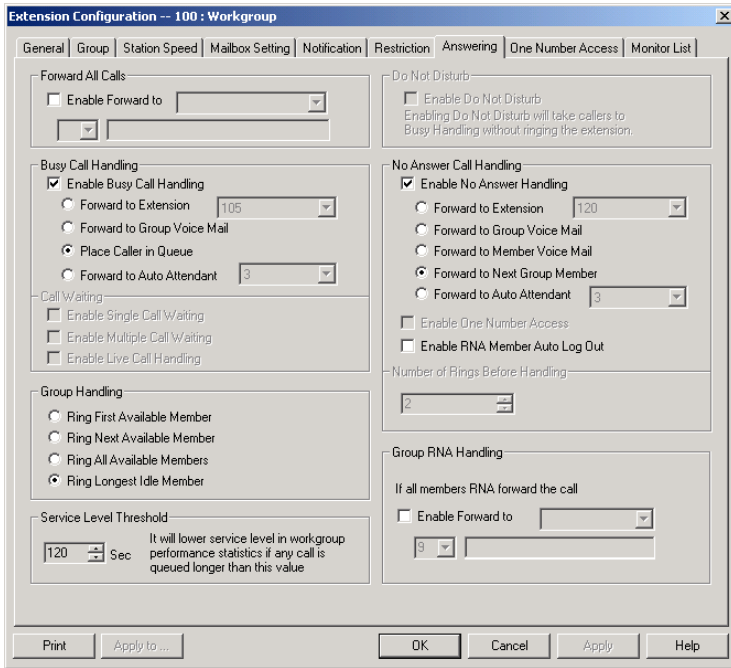


Figure 18. Answering Window (Workgroup View), Extension Configuration

Forwarding All Calls

Call Forwarding is available to all three types of extensions.

This is the Call Forwarding feature that is also accessible by the extension user by dialing **#36**.

A One Hop Limit to Call Forwarding for a Transferred Call

There is a one hop limit to call forwarding when the call that is being passed is a transferred call. For example, extension 100 receives a transferred call and forwards this call to extension 101; extension 101 is set to forward all calls to extension 102; extension 102 receives the call but **CANNOT** forward this call to another extension.

A 10-Hop Limit to Call Forwarding for Direct Calls

For direct calls, there is a “10-hop” limit to call forwarding. For example, extension 100 forwards to extension 101, 101 forwards to 102, 102 forwards to 103, and etc. through extension 120. A call to extension 100 will be forwarded to 101, which will forward to 102, which will forward to 103, and etc. until the call has been forwarded 10 times. At this point, the call will not be forwarded again; if the last extension in the forwarding chain does not answer, the call is sent to extension 100’s voice mail.

If there is a loop condition in the forwarding chain (for example, 100 forwards to 101, 101 to 102, and 102 back to 100), the call is sent to the first destination’s voice mail.

To enable call forwarding, select the **Enable Call Forward** to check box, then, using the drop-down list, indicate the forwarding destination. You can use **Apply to...** to act on multiple extensions, with the restrictions discussed in the previous section. The forwarding options are as follows:

- **To Voice Mail**
- **To an Auto Attendant**—select the Auto Attendant number to use in the drop-down list under the option. Auto Attendant settings are established in **Auto Attendant Select...** on the **Management** menu.
- **To an Extension**—select an extension from the drop-down list.
- **To an Outside Number**—this option is available if it is allowed in the **Other Call Restrictions** option in the **Restriction window**, as discussed in “Setting Other Call Restrictions” on page 8-38. Also, see “Outcall to Cellular or PCS Phone Numbers” on page 8-35.

If you choose **Outside Number**, select a trunk or route access code to use in the small drop-down list on the left, and type in the full prefix and phone number.

- **To the Operator**
- **To a Paging Trunk**—forwarding to a pager is *available for virtual extensions only*. Select the trunk to use in the drop-down list. The trunk must have been configured as a paging trunk in **Trunk Configuration...** of the **Management** menu.

Forwarding calls to a pager is possible but **not recommended** since callers will only hear what is heard when calling a pager and will not know to enter a return phone number unless instructed.

Handling Busy Calls

You have several options for handling calls while the extension is busy, and again, the options vary depending on the extension type. If you do not enable busy call handling, the caller simply hears a busy signal.

To enable the options, select the **Enable Busy Call Handling** check box, then select from the following options:

- **Forward to Extension**—Select an extension number in the drop-down list. See “A 10-Hop Limit to Call Forwarding for Direct Calls” on page 8-42.
- **Forward to Voice Mail**
- **Place Caller in Queue**—(*huntgroup/workgroup extensions only*)—places the call to the group queue.
- **Forward to Auto Attendant**—use the drop-down list to select an Auto Attendant to which to route the call. Auto Attendant settings are established in **Auto Attendant Select...** on the **Management** menu.

Setting Call Waiting Options

Call waiting options are available only if the **Enable Busy Call Handling** check box has been selected, and this option is *not available to group numbers*. However, the group pilot number does use the **Place Caller in Queue** option discussed in the preceding subsection.

- **Enable Single Call Waiting**—sets up single call waiting. This feature gives an alert tone (audio beep) to indicate that a call is waiting.
- **Enable Multiple Call Waiting**—enables a “personal queue” of multiple calls waiting. You must also select the **Place Caller In Queue** option under **Busy Call Handling** to enable this option. This allows the user to transfer or park the current call before picking up the next call in queue.
- **Enable Live Call Handling**—when enabled, allows an extension user to play a ringback tone when the called party is in voice mail, paging, transfer, or conference state.

Note: The call will be shown as “ringing” in AltConsole.

Enabling “Do Not Disturb”

This is not available for group numbers. Select the **Do Not Disturb** checkbox option to send all calls for the selected extension(s) to the extension’s voice mail. This feature is also accessible by the user at the user’s station by dialing **#33**. Note that this overrides any One Number Access settings for the extension.

Handling Unanswered Calls

The **No Answer Call Handling** function provide options for handling calls when no one answers the extension within a specified number of rings.

Except for Enabling One Number Access, these options are *not available to virtual extensions*. The *options are somewhat different in the physical and group extensions of the window*.

To enable these options, select **Enable No Answer Handling** box.

Use the **Number of Rings Before Handling** scroll box to select a number between 2 and 20 for the times the telephone rings before the call is handled by the system.

Select one of the following options for no answer call handling:

- **Forward to Extension**—Select an extension number in the drop-down list. See “A 10-Hop Limit to Call Forwarding for Direct Calls” on page 8-42.
- **Forward to Voice Mail** (*physical extensions only*)
- **Forward to Group Voice Mail** (*group extensions only*)
- **Forward to Auto Attendant**—use the drop-down list to select an Auto Attendant to which to route the call. Auto Attendant settings are established in **Auto Attendant Select...** on the **Management** menu.

Enabling One Number Access

This check box option is available to all extension types, but with qualifications:

- It is available to physical extensions only when the **Forward to Voice Mail** option is selected.
- It is *not* available when **Forward to Auto Attendant** or **Forward to Extension** is selected.

Enabling RNA Log Out

This “Ring No Answer” check box option is available only to workgroups, and only when **Enable No Answer Handling** is selected. When an agent is rung and there is no answer, that member’s extension is automatically logged out of the workgroup.

Setting Huntgroup Handling

For *huntgroup* numbers, the Extension Configuration Answering window lets you set the handling of normal inbound calls: how to route the incoming call to an extension, using one of the following options:

- **Ring First Available Member**—first *available* extension in a huntgroup. For example, if there are three member extensions in a huntgroup, the call is always sent to the *first* member configured in the huntgroup. If this member is busy, the call goes to the *second* member configured and so forth.
- **Ring Next Available**—an automatic call distribution method that attempts to evenly distribute calls among the huntgroup members. This method sends the call to the *next* member configured in the huntgroup (regardless of whether the previous member is busy or not).
- **Ring All Available Members**—all extensions in a huntgroup.

Note: When this option is enabled, a single huntgroup can have no more than 20 members set to Ring All. If members are using IP extensions, the system will require an equal or greater number of available IP ports than the number of IP extensions. For example, with 15 IP extensions set to Ring All in a single huntgroup, the system needs to have at least 15 IP ports available at any given time.

In addition, calls to huntgroups that have this option enabled

have higher priority than other huntgroup calls. Therefore, if an agent belongs to multiple huntgroups, one of which has this option enabled, a call to that huntgroup will be picked up before others, regardless of its Wait Time in the queue.

Setting Workgroup Handling

For *workgroup* numbers, the Extension Configuration Answering window lets you set the handling of normal inbound calls, and how to route the incoming call to an extension, using one of the following options:

- **Ring First Available Member**—first *available* extension in a workgroup. For example, if there are three member extensions in a workgroup, the call is always sent to the *first* member configured in the workgroup. If this member is busy, the call goes to the *second* member configured and so forth.
- **Ring Next Available**—an automatic call distribution method that attempts to evenly distribute calls among the workgroup members. This method sends the call to the *next* member configured in the workgroup (regardless of whether the previous member is busy or not).
- **Ring All Available Members**—all extensions in a workgroup.

Note: When this option is enabled, a single workgroup can have no more than 20 members set to Ring All. If members are using IP extensions, the system will require an equal or greater number of available IP ports than the number of IP extensions. For example, with 15 IP extensions set to Ring All in a single workgroup, the system needs to have at least 15 IP ports available at any given time.

In addition, calls to workgroups that have this option enabled have higher priority than other workgroup calls. Therefore, if an agent belongs to multiple workgroups, one of which has this option enabled, a call to that workgroup will be picked up before others, regardless of its Wait Time in the queue.

- **Ring Longest Idle Member**—the agent who has been off the phone the longest.

Group RNA (Ring No Answer) Handling

You have several options for handling calls when a group agent's extension is rung and there is no answer.

Note: If an incoming call encounters RNA for every agent in the group AND No Answer Call Handling is set to “Forward to Next Member”, the call will be forwarded according to these settings. If you do not set options here, the call will go to the group’s voice mail after ringing all agents.

To set options for group RNA handling, select the **Enable Forward to** check box, then, using the drop-down list, indicate the forwarding destination. You can use **Apply to** to act on multiple groups, with the restrictions discussed in the previous section. The forwarding options are as follows:

- To **Auto Attendant**—select the Auto Attendant number to use in the drop-down list under the option. Auto Attendant settings are established in **Auto Attendant...** in the main menu.
- To **Voice Mail**
- To an **Outside Number**—this option is available if it is allowed in the **Other Call Restrictions** option in the **Restriction window**, as discussed in “Setting Other Call Restrictions” on page 8-38. Also, see “Outcall to Cellular or PCS Phone Numbers” on page 8-35.

If you choose **Outside Number**, select a trunk or route access code to use in the small drop-down list on the left, and type in the full prefix and phone number.

- To an **Extension**—select an extension from the drop-down list.
- To the **Operator**

Setting a Service Level Threshold

For *workgroup* numbers only, you can use the **Service Level Threshold** scroll box to select the length of time in seconds that a call can be in queue before the call is logged in workgroup performance statistics as having exceeded the allowable service level limits. You can set the value to any number between 1–1200 seconds.

Configuring One Number Access

One Number Access (ONA) allows you to identify specified callers to be connected to the user without having to dial more than one number. The system searches for the caller and, if a match is found, searches for the user through specified forwarding numbers and connects the call if possible. If the system is unable to connect the call, it is sent to the extension user's voice mail.

Note: Options in the window are disabled unless One Number Access has been enabled as a **No Answer** option in the Answering window as discussed in "Enabling One Number Access" on page 8-45. Furthermore, if the **Enable Do Not Disturb** option is selected in the Answering window, the call is forwarded to voice mail regardless of ONA settings.

To configure ONA, select the extension number from the list in the Extension Configuration General window, then click the **One Number Access** tab.

The screenshot shows the 'Extension Configuration -- 100 : Physical' window with the 'One Number Access' tab selected. The window is divided into several sections:

- Option:**
 - ☐ Disable
 - ☐ Enable at anytime
 - ☐ Enabled during business hours only
 - ☐ Enabled during non-business hours only
 - ☒ Enabled based on the following schedules
- Schedule:**
 - ☒ Schedule 1 From: 12:00 PM To: 01:30 PM
 - ☐ Schedule 2 From: 02:30 PM To: 03:30 PM
 - ☐ Schedule 3 From: 04:30 PM To: 06:00 PM
 - ☐ Schedule 4 From: 12:00 AM To: 12:00 AM
- Caller ID Verification:**
 - ☒ Verify Caller ID based on the following
 - Five pairs of empty text boxes for caller ID verification.
- Forwarding Numbers:**
 - For outside numbers, choose the trunk access code from the drop down list, and enter the number in the edit box (e.g. "14155551212").
 - ☒ Forwarding Number 1 Any 102
 - ☐ Extension ☐ Outside number ☒ Check Password
 - ☐ Forwarding Number 2 Any
 - ☐ Extension ☐ Outside number ☐ Check Password
 - ☐ Forwarding Number 3 Any
 - ☐ Extension ☐ Outside number ☐ Check Password
 - ☐ Forwarding Number 4 Any
 - ☐ Extension ☐ Outside number ☐ Check Password

At the bottom, there are buttons for 'Print', 'Apply to ...', 'OK', 'Cancel', 'Apply', and 'Help'.

Figure 19. One Number Access window, Extension Configuration

Note: You can use **Apply to** to apply some ONA settings to one, some, or all extensions of the same type—physical to physical, huntgroup to huntgroup, etc., but only if the extensions are ONA enabled in the Answering window.

Enabling One Number Access

In the One Number Access window, you enable the function by selecting one of the following options:

- **Enabled at any time**
- **Enabled during business hours only**
- **Enabled during non-business hours only**
- **Enabled based on the following schedules**

If you select this last option, **Enabled based on the following schedules**, you can then select and set up to four different time periods—Schedules 1 through 4—using the **From** and **To** time drop-down lists.

After choosing any of the enabling options, you set the **Verify Caller ID** and **Forwarding** choices, and these are discussed below.

Note: You can also enable and set up One Number Access remotely through AltıReach.

Disabling One Number Access

You can disable ONA for the extension by clicking the **Disable** option. Disabling access in this window does not destroy the data you might have entered. For example, if you entered a group of Caller IDs to use to identify the caller, these will be available if you enable access at a future time.

Setting Caller ID Verification

You can select the **Verify Caller ID based on the following** checkbox and then type in up to 10 phone numbers in the text boxes. Whenever the system detects a call from one of the numbers entered here during the selected schedule, the system searches for you by dialing the numbers configured in the Forwarding Number fields.

Caution: *If ONA is enabled and no numbers are entered for Caller ID Verification, ONA is available to all callers.*

Caller ID verification entries should be complete phone numbers.

- **Domestic long distance** should be the area code + a seven digit number.
- **Local** numbers should be the seven digit number alone.

Using a Password Verification

You can also enter a random “password” number such as “5555” so that any caller who knows this password can use ONA to find you, regardless of where they are calling from. Once you’ve set this up, you need to instruct the caller to dial 1 during your personal greeting then enter the “password” to use ONA.

Specifying Forwarding Numbers

The **Forwarding Numbers** are used by the system to find the user when ONA is active. You can set up to four different numbers. When ONA is active, the system dials the forwarding number(s) in the order from Forwarding Number 1 through Forwarding Number 4. The Forwarding Number order does *not* correspond to the Schedule order—Forward Number 4 is *not* used first during Schedule Number 4.

You can forward to another extension, or to an outside number. You can use an outside number *only if* the extension is set to allow for **Transferred/Conferenced/Forwarded** calls, an **Other Call Restrictions** option in the Extension Configuration **Restriction** window.

When you use the outside number option, select a trunk or route access code in the drop-down list and type in the phone number as it would be dialed after keying the access code.

Enable the **Check Password** option to force users to enter their extension password when a call is forwarded to them via ONA. This ensures that only the owner of the forwarding extension can answer the call.

Note: If you disable this option, a call forwarded via ONA that is picked up by a voicemail box or answering machine will connect, and will not try any subsequent Forwarding Numbers.

Setting Up Monitor Lists

The **Monitoring List** window provides for setting up lists of extensions for which call processing events can be monitored by the user of a selected extension. Once this monitoring list is established, the application logging into the extension can receive AltiLink Plus events for the monitored extensions. The monitored list is available in the AltiView and AltiAgent Change Monitor windows.

Restrictions and Defaults

- Monitoring is effective for *physical* extensions only; only physical extensions can have monitoring rights, and only physical extensions can be monitored. If you place a virtual extension in a Monitor List, that extension will not show in the client user's Change Monitor window.
- If you add an extension (1001, for example) that belongs to Group A to the Monitor List for a member of Group B, the Group B member will only be able to pick up *personal* calls to 1001, not group calls.
- In AltiSupervisor, the user can monitor only the group(s) he or she logs in to, regardless of the monitoring rights assigned to his or her extension in AltiAdmin.
- Group pilot numbers in the Monitor list have no effect in AltiAgent or AltiView; regardless of the AltiAdmin settings, a user cannot monitor a group to which he or she does not belong, and a user *always* has monitoring rights to *every* member of a group to which he or she does belong.

Note: These restrictions can be overridden by third-party applications that make calls through AltiLink Plus.

Configuring a Monitor List

To set up a monitoring list, select the extension number to receive the monitoring rights from the list in the **Extension Configuration General** window, then click the **Monitor List** tab.

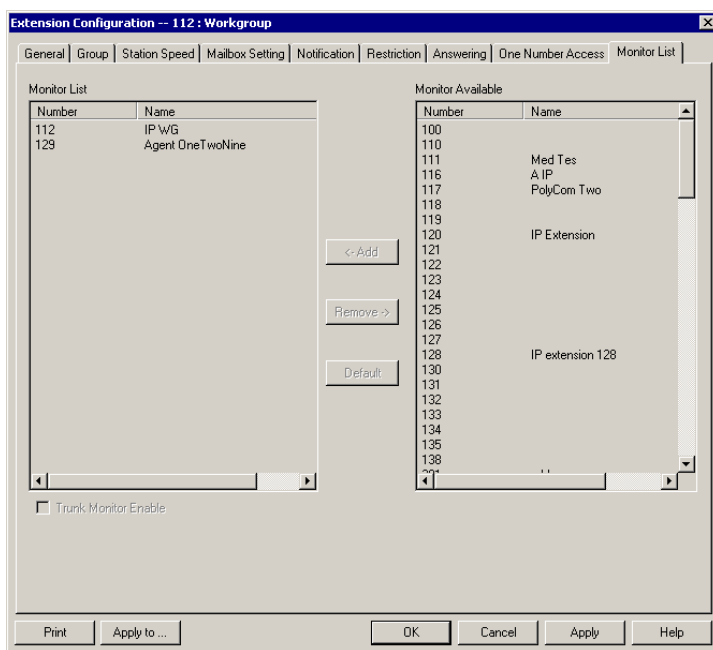


Figure 20. Monitor List window, Extension Configuration

To add members to the list:

1. From the **Monitor Available** list, select the extensions to add to the extension user's Altiview Change Monitor window.
2. Click **Add** to move the extensions to the **Monitor List**.

To remove members:

1. Select the extensions in the **Monitor List**.
2. Click **Remove**.

Select the **Trunk Monitor Enable** check box to allow monitoring of the Altiview Plus trunk events at the selected extension.

Click the **Default** button to return the settings to the default—the extension can monitor its own calls.

Out Call Routing Configuration

Out Call Routing Configuration allows you to define default routes for outgoing calls as well as special routing for specific prefixes.

A *route definition* consists essentially of a name and a group of trunks, listed in the order accessed for outgoing calls. You can assign different routing configurations—lists of route definitions—to local, national, international, and 911 outgoing calls. Access to the call routing trunks is set up through the System Configuration Numbering Plan, discussed in “Setting a System Number Plan” on page 5-4.

If you intend to use Out Call Routing for 911 calls, see the note, “About Call Routing and 911 Calls” on page 9-5.

Further, you can use the Out Call Routing Configuration window to create and assign exceptions to the normal routes for particular dialing patterns. That is, you can assign or restrict routing to specified dialing patterns.

About Restricting Outgoing Calls

Before using Out Call Routing to restrict outgoing calls, note that there are three AltWare functions dealing with restricting outgoing calls.

- The **Dialing Pattern** function, discussed in this section in “Setting Dialing Pattern Routing” on page 9-6, is used to set up blocks with specific exceptions. It also provides the ability to easily turn restrictions on or off.
- The **Call Restriction** function of System Configuration, described in “Defining System Call Restrictions” on page 5-12, provides for setting up global blocks to outgoing calls and global parameters, such as toll call prefixes, used for other restrictions.
- **Outcall restriction by extension** is discussed in “Configuring Calling Restrictions” on page 8-34.

The global restrictions established in the Call Restriction window take precedence over Dialing Pattern settings. You can’t set allow calling a number in the Dialing Pattern window if it is blocked in the Call Restriction window of System Configuration.

Accessing Out Call Routing Configuration

To access Out Call Routing Configuration, select **Out Call Routing Configuration...** on the **Management Menu**.

Working with Route Definitions

The **Route Definition** tab is the default view on the **Out Call Routing Configuration** window.

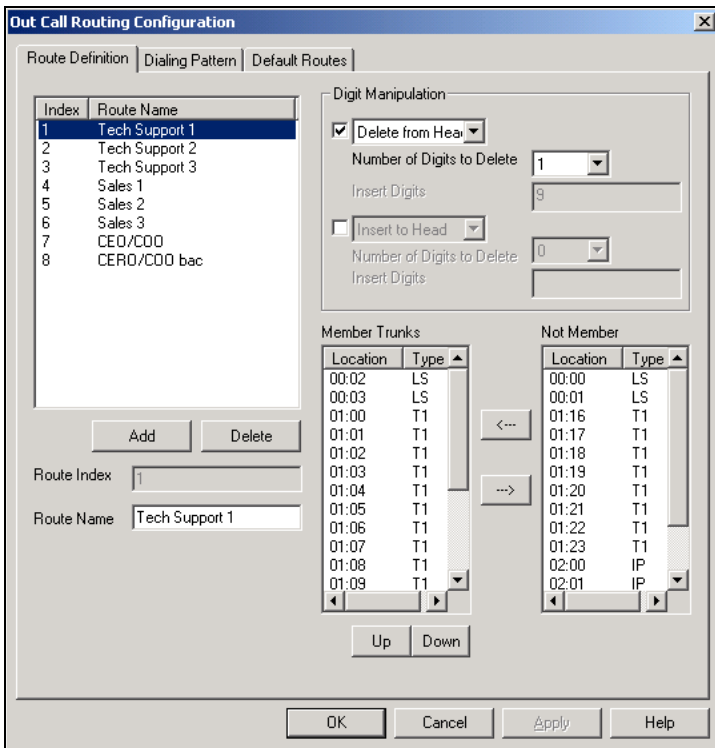


Figure 1. Route Definition window, Out Call Routing Configuration

Adding Route Definitions

To add a route definition:

1. Click **Add** under the route definition list. The **Add an entry** dialog box appears:

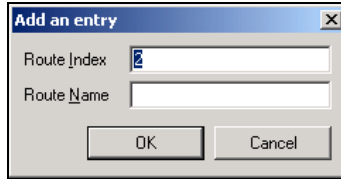


Figure 2. The Add an entry dialog box

2. Type in a name and index number:
 - The **Route Index** determines the position of the definition in the index list of the Route Definition window.
 - The **Route Name** can be descriptive.

After adding the route, you then define it as described in the discussion that follows.

Editing a Route Definition

To define a route definition:

1. Select and highlight the route in the definition list.
2. Make changes to the definition attributes. You can change the following attributes:

- **Route Name**

You can change the name but not the index number.

- **Digit Manipulation**

For each route, you can insert extra digits or remove prefix digits from the number dialed by the user. The number sent to the trunk will then have these digits added or removed.

- **Insert to Head** inserts a string of digits to the number before it is sent to the trunk. Type the digits into the **String to Insert** box.
- **Delete from Head** removes prefix digits from the number before it is sent to the trunk. Select the number of digits to remove in the **Number of Digits to Delete** box.

- **Member and Non Member Trunks**

Use this to define the trunks and trunk order for the route.

Member Trunks—displays the trunks assigned to the selected route. The order in which member trunks are added determines the order in which the trunks are accessed. (i.e. the first trunk listed is used first, the second trunk is used next, and so forth).

Not Member—displays the trunks, along with trunk location and type, which are not assigned to the selected route.

To add trunks to a route definition group, highlight the trunks you wish to add in the **Not Member** list, then click the left arrow to move the trunks to the **Member Trunks** list. Similarly, you can move trunks to the Non Member list to remove them from the definition.

Use the **Up and Down** buttons to set the order in which the trunks are accessed. Highlight the member trunk you wish to move, then click **Up** or **Down** to place the trunk in the desired position.

3. Click **Apply**.

Deleting a Definition

To delete a route definition:

1. Highlight the definition you want to delete in the route definition list.
2. Click the **Delete** button beneath the list.

Setting Default Routes

The **Default Routes** function allows you to create default routes for four types of outgoing calls: *local*, *long distance*, *international*, and *911*. The default routes are used for all Out Call Routing dialing except for special routing defined on the Dialing Pattern window described later.

Click the **Default Routes** tab in the **Out Call Routing Configuration** window to display the **Default Routes** window.

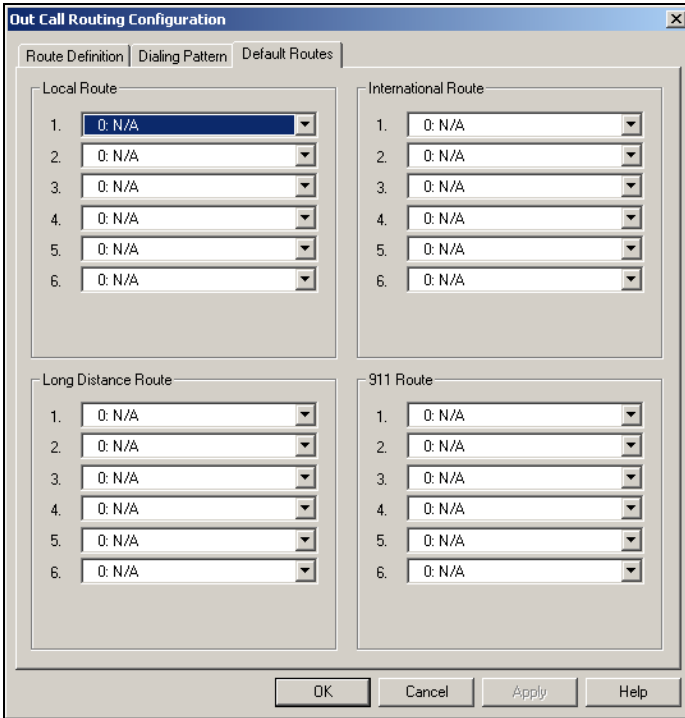


Figure 3. Default Routes window, Out Call Routing Configuration

For each of the four types of calls, you can use the drop-down lists to select up to six route definitions. The order you set, from 1 to 6, is the order used by the system when placing the call.

About Call Routing and 911 Calls

Important: If you use Call Routing for 911, make sure that the default 911 route is configured to the route that can accept 911 calling capability. Failing to do so may cause 911 direct dialing failure. You can leave the 911 default, in which case you need to let all extension users know that they need to dial 9+911 to call 911. It might be a good idea to have them sign a 911 dialing disclaimer stating that they understand and accept the 9+911 configuration.

Setting Dialing Pattern Routing

You can use the Dialing Pattern window to create or disallow routing for specific dialing patterns.

As noted in “About Restricting Outgoing Calls” on page 9-1, there are three AltiWare functions to restrict outcalls, of which the Call Restriction setup of System Configuration takes precedence.

The Dialing Pattern window provides for setting up blocks with specific exceptions. For example, you could use this window to block calls that begin with 767, but to accept and route calls to 767-2676, by disallowing a “767” entry while setting up and providing routing for a separate “767-2676” entry.

Click the **Dialing Pattern** tab on the **Out Call Routing Configuration** window to display a Dialing Pattern window.


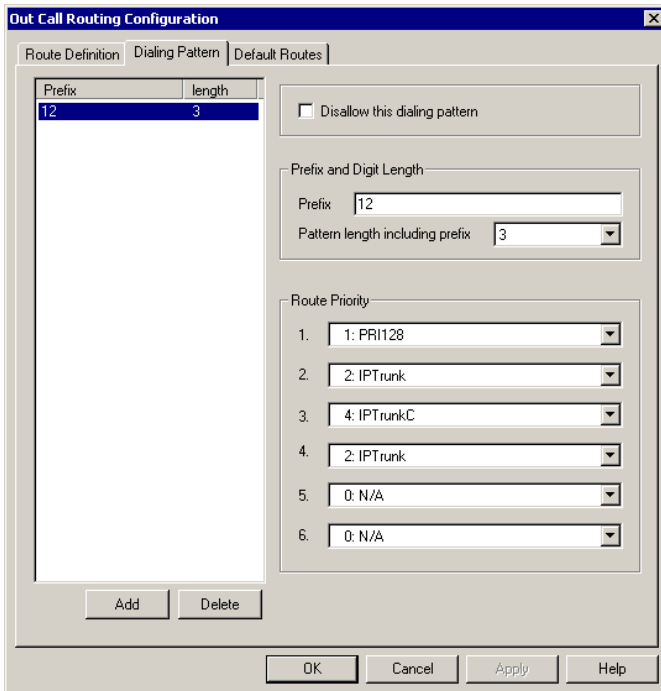


Figure 4. Dialing Pattern window, Out Call Routing Configuration

Adding a Dialing Pattern Definition

1. Click **Add** to open the Add an entry dialog box.

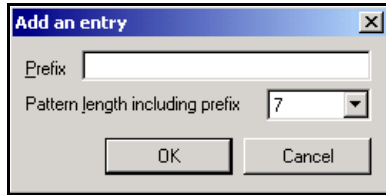

2. Type in a **Prefix** number, select the **pattern length**, then click **OK**.

Note: The pattern length tells the system to wait for n number of digits to be dialed before executing the route or disallowing the call. Selecting N/A creates a '?' symbol in place of number of the digits, and this indicates an unspecified number of digits.

After a route is added, you can edit to further define it as described in the following discussion.

Editing a Dialing Pattern

To edit, or define, a pattern, select and highlight the route in the prefix list, make changes to the attributes, then click **Apply**.

You can change the following attributes:

- **Prefix and Pattern length.** If desired, you can change the prefix number and pattern length for a prefix.
- **Disallow this dialing pattern** check box. Select this to block calls that match the dialing pattern.
- **Route Priority** boxes. These specify the trunk route(s) and the order of routes assigned to the prefix. Use the drop-down list to select the desired route used when the selected dialing pattern is found. Up to six routes can be assigned, and they are accessed in order from 1–6.

Note: The SIP Redirect Server fields are reserved for future use.

Deleting a Pattern

To delete a pattern, highlight the one you want to delete in the prefix list, then click **Delete**.

Example: 10-Digit Dialing

A sample use of dialing patterns is enabling 10-digit dialing, which some geographical areas require. Normally, Altiserv prepends a “1” to 10-digit numbers when users use single-click calling features such as zoomerang or calling from a Contacts list in Altiview or a TAPI-enabled application. This could cause some calls to fail. Here is how you would enable 10-digit dialing.


1. On the Route Definition tab, define a route that deletes one digit from the head.
2. On the Dialing Pattern tab, create a dialing pattern with **Prefix** set to <1+area code>, such as “1408,” and **Pattern length** set to “11,” where *area code* is different from the Altiserv system but requires 10-digit dialing.
3. Assign the Route Priority for this dialing pattern to the Index of the route definition you created above.
4. Repeat steps 2 and 3 above for other area codes requiring 10-digit dialing as necessary.

Reducing Dialing Delay For En-Bloc Trunks For Non-US/Canada Countries

When using a country code other than **USA & Canada** in System Configuration, there will be a 7 second dialing delay for en-bloc trunks. To reduce this delay, Out Call Routing Configuration can be used as a workaround.

To reduce dialing delay:

1. In the **Number Plan** page of **System Configuration**, select a digit for route access.
2. In the **Route Definition** page of **Out Call Routing Configuration**, add a route definition entry for en-bloc and assign the member en-bloc trunk(s).

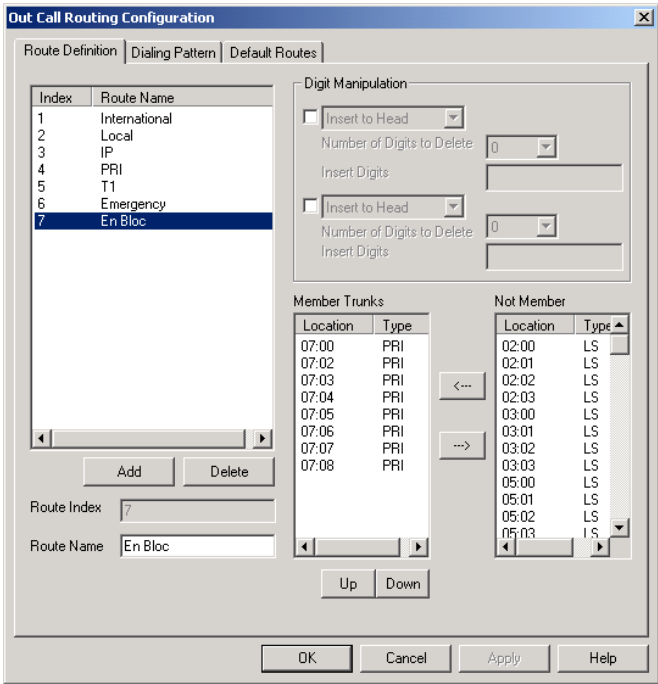

3. In the **Dialing Pattern** page of **Out Call Routing Configuration**, add dialing pattern definition entries for the following prefixes:
- prefix = 0, length = 11
 - prefix = 00, length = 14
 - prefixes = 1-9, each length = 7

In the **Route Priority** field, use the drop-down list to select the **En-Bloc** route definition (assigned in Step 2).

The Dialing Pattern page should look as follows:

Prefix	length
0	11
00	14
1	7
2	7
3	7
4	7
5	7
6	7
7	7
8	7
9	7

☐ Disallow this dialing pattern

Prefix and Digit Length

Prefix:

Pattern length including prefix:

Route Priority

1.

2.

3.

With this configuration, the system will see that all digits have been collected and will send digits to the CO, instead of waiting 7 seconds for the dialing to finish.

Auto Attendant Configuration



Auto Attendants perform simple call processing tasks such as transferring calls to extensions to the AltiGen Voice Mail System or the operator, or giving information and secondary options. It can also provide general information that is frequently asked, such as company address. Auto Attendants allow multiple incoming calls to be answered simultaneously. In a call-heavy environment the Auto Attendant can greatly reduce the number of calls that need to be handled by the operator. Calls that do not require an operator's assistance can be handled effectively and appropriately.

The Auto Attendant can handle more complex call processing tasks such as handling web-based calls (in addition to PSTN calls).

It can also accept text or digits input by the user. For example, if the Auto Attendant prompts the caller to enter an account number, the call and associated data can be quickly forwarded to an agent's desktop using a third party application.


You can set up to 255 different Auto Attendants, each using all the number keys as well as the * and # key and a timeout option. Each of the Auto Attendants provides for expanding and nesting—a menu choice leading to another menu—up to any number of levels.

Planning is Essential

Follow the steps below before you set up an Auto Attendant.

1. Before you configure tasks for one or more Auto Attendants, you should plan the entire setup. Decide how many options you will provide at each menu and how many menu levels you will use. Based on the action choices in each menu, write down the appropriate prompts or phrases that are to be played at each menu level.
2. Record phrases for each menu level or use the pre-recorded phrases that are available to you. See “Phrase Management” on page 10-11 for more details on how to record custom phrases, use pre-recorded phrases and use professionally recorded phrases.

Example: Auto Attendant Planning

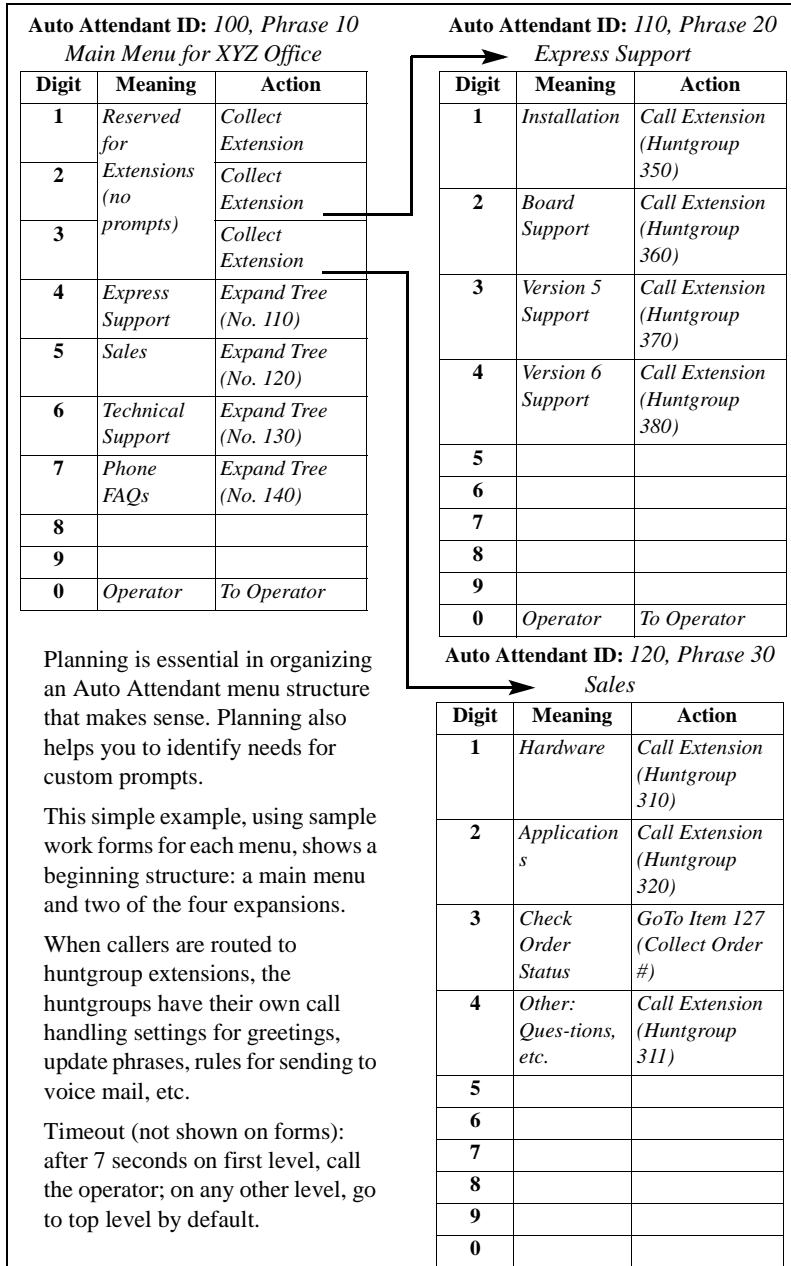

Adding Auto Attendants

The first 16 Auto Attendants are provided by default with the menus blank. You can edit these as described in “Editing Auto Attendants” on page 10-5. You don’t need to add a new Auto Attendant if you’re going to use 16 or fewer.

To add an Auto Attendant beyond the first 16:

- Select **Auto Attendant Select...** from the **Management** menu, or
- select **Auto Attendant Select** from the Quick Access Toolbar.


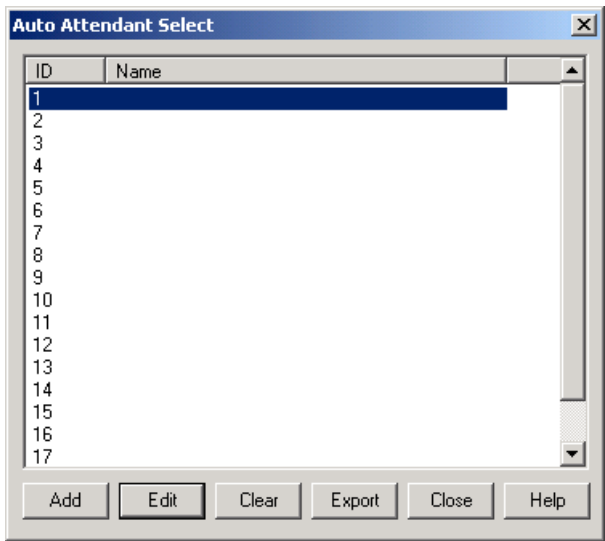


Figure 1. Auto Attendant Select window

- **Add**—opens the Add Auto Attendant dialog box.

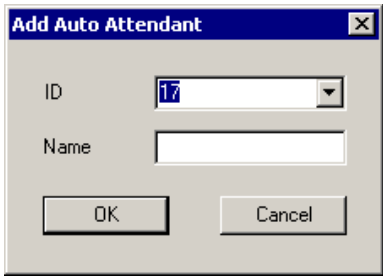

Select an **ID** in the drop-down list and type in a descriptive **Name** for Auto Attendant, then click **OK**.

- **Edit**—opens the Auto Attendant window, where you can edit the Auto Attendant as described in “Editing Auto Attendants” on page 10-5.
- **Close**—closes the Auto Attendant Select dialog box
- **Export**—exports all Auto Attendant settings to an html file
- **Clear**—clears all edits to the selected Auto Attendant, restoring system defaults
- **Help**—open the Help File for Auto Attendant

Editing Auto Attendants

To edit an Auto Attendant, select **Auto Attendant Select...** from the **Management** menu, or select **Auto Attendant Select** from the Quick Access Toolbar.

When the Auto Attendant Select window appears, select an Auto Attendant in the list and click the **Edit** button.

This opens the Auto Attendant window with the Auto Attendant you selected in the title bar.

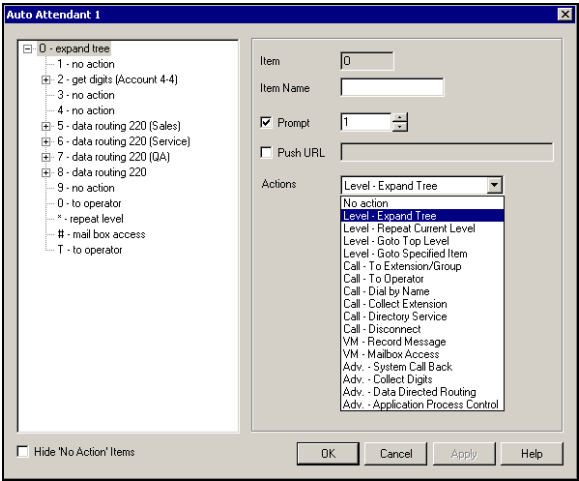


Figure 2. Auto Attendant window

Tip: You can use the Hide ‘No Action’ Items check box to hide items that are set to ‘no action.’ This will give you a cleaner view of your various action items.

Configuring Menu Items

For any menu item you want to use, you make an action assignment. If you want the assignment to expand the menu to the next level, choose the assignment, **Level—Expand Tree**.

To make an assignment, select a menu item in the menu tree at the left, then configure it using the entries at the right.

- **Item**—an informational display of the level and item you're working with. The number gives the following information:

Digit Position	Meaning	Example
First	Root level, always 0	0n – root level. It is followed by a digit if a menu item on the menu is selected. If it is not followed by a digit, there is no expanded menu tree, only a single prompt and a single action such as routing to the operator.
Last	Currently Selected menu item	06 – Menu item 6 is selected at the root level
Inside	Item & Level	058 – Menu Item 5 at the root level is expanded, and Menu Item 8 is selected on the expanded menu.

This key is easier to read when you're also viewing the expanding menu tree in the display at the left. To use a longer example: **09375** would mean that at the root level (0), menu item 9 is expanded, and on the expanded menu, item 3 is selected. In turn, item 3 is expanded and on that expanded menu, item 7 is selected. Item 7 is selected and on that expansion, item 5 is selected.

- **Item Name**—the name you wish to assign to the menu item.

- **Prompt**—select the prompt number that is to be played for incoming calls. Prompts are numbered in the range of 0–300. The default prompt is **1**, a generic greeting. See “Using Pre-Recorded Prompts” on page 10-11 to see the script of this prompt and other AltiGen supplied pre-recorded prompts. Discussions on using customized and professionally recorded prompts follow the section on using the AltiGen supplied greetings.
- **Push URL**—a URL associated with the menu item. When this entry is selected, the web page and data is pushed to the web client and the web client browser displays the page. Type a web address in the **Push URL** text box if you wish to prompt a URL to the user.
- **Actions**—the event triggered by the caller pressing the digit for the menu item. This drop-down list contains the available actions, which are as follows:

Table 11. Auto Attendant Actions

Action	Description
No Action	An “invalid” message plays and the menu is repeated.
Level - Expand Tree	Plays the prompt for the next menu level down.
Level - Repeat Current Level	Repeats the current prompt.
Level - Go to Top Level	Repeats the first prompt at the root level and returns the options to the root level options.
Level - Go to Specified Item	Goes to selected menu item at any level. A drop-down appears from which you select the item.
Call - To Ext./Hunt-group	Goes to the extension or huntgroup number you select in the drop-down list that appears.
Call - To Operator	Routes the call to the operator.
Call - Dial By Name	Prompts the caller to enter the name (first, or last, or both in any order) of the person they wish to speak with and dials the extension that matches the name. Callers may enter just the first letter of the last name to hear a list of all users with last names that begin with the letters entered.

Table 11. Auto Attendant Actions

Action	Description
Call - Collect Extension	Call the extension entered by the user.
Call - Directory Service	Lists the system users and their extensions to the caller. For this to work properly, users need to record their directory names.
Call - Disconnect	Disconnects the call.
VM - Record Message	Records the caller's message. A drop-down list appears from which you select the extension to which to route the voice message.
VM - Mailbox Access	Routes the call to the AltGen Voice Mail System voice mailbox after successful login. This is normally assigned to the # digit.
Adv. - System Call Back	Calls the user at a remote location, <i>only after the caller logs in with extension and password</i> . The caller should enter a 1 and the area code if it is a long distance number, or 011 and the country code if it is an international number. You must be using a Centrex system to use this feature.
Adv. - Collect Digits	See the discussion below on "Collecting Digits".
Adv. - Data Directed Routing	Prompts the caller to input digits or text and use the data entry to route the call. This allows third party applications to route incoming calls based on caller information.
Adv. - Application Process Control	For 3rd party application integration.

Collecting Digits

When you select the Collect Digits action, the caller is prompted to enter more digits. Once a minimum number of digits are entered, the system proceeds to open a single item expansion of the Collect Digits action. In the item tree at the left, you can see a "& -" appear as an expanded item action.

To use the Collect Digits action:

1. Selecting the Collect Digit action, first set the following additional parameters:

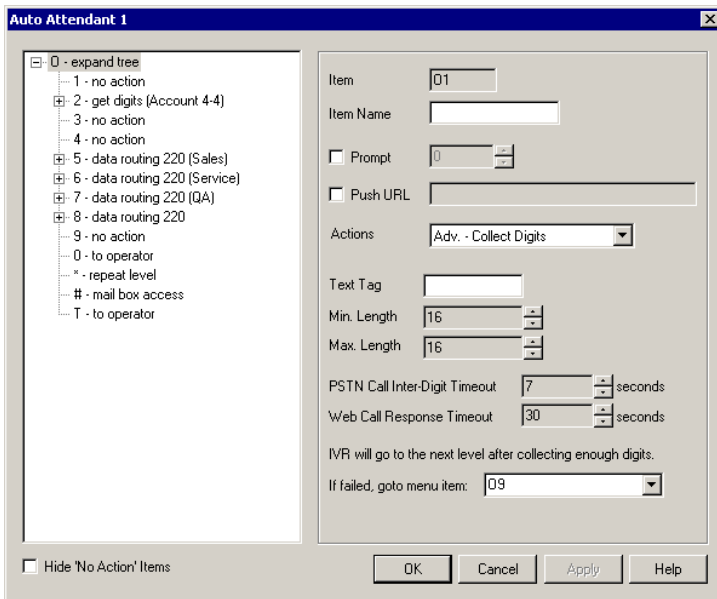


Figure 3. Collect digits

- **Text Tag**—a name for this set of options.
 - **Min. Length**—the *minimum* length of digits to be collected.
 - **Max. Length**—the *maximum* length of digits to be collected.
 - **PSTN Call Inter-Digit Timeout**—the length of time the system will wait between collecting of digits before timing out.
 - **Web Call Response Timeout**—the length of time the system will wait for digits after responding to a web-based call before timeout.
2. Click the expanded **& -** menu item in the item tree and treat it as a normal item—that is, give it a name, a prompt, a push URL if appropriate, and an action to take.
 3. If the Collect Digits action fails (due to time out or not enough digits are collected), you can set the Auto Attendant to take a **failover routing**, or back up action. Use the dropdown list (**If failed, go to menu item:**) to select a menu path that will serve as the failover action.

Making Auto Attendant Assignments

Once the Auto Attendants are set up, you can use them in various in-call routing situations—trunk configuration, answering for extensions or groups, and so forth.

For example, for trunk /Auto Attendant assignments, see “Incoming Call Routing” on page 7-20. For extension or group assignments, see “Setting Answering Options” on page 8-37.

Phrase Management

You might want to record unique phrases to customize an Auto Attendant or a group. When the system is configured to answer incoming calls by the Auto Attendant, callers hear a customized greeting. For example:

“Thank you for calling ABC Company.
Enter the extension number of the person you wish to speak with.
Press 1 for sales,
Press 2 for technical support,
Press 3 for accounts payable,
Press 0 to reach the operator,
To repeat this menu, press star (*).”

An example of a huntgroup greeting phrase:

“Please hold; someone will be with you shortly.”

This section covers information using pre-recorded phrases, recording custom phrases, and using professionally recorded phrases.

Using Pre-Recorded Prompts

AltiWare provides ready-to-use pre-recorded phrases. Phrase 0001 is the default Auto Attendant greeting at the root menu level. Phrases 0291 through 0297 are phrases used for group queue prompts.

Phrase #	Phrase
0001 (default)	Thank you for calling. If you know the extension of the person you wish to speak with, please enter it now. To reach the operator, press 0 or simply stay on the line.

Phrase #	Phrase
0291 (default)	Please hold; someone will be with you shortly. For your convenience, you may leave a message if you wish by pressing the # key on your telephone and we will get right back to you.
0292	Please hold; someone will be with you shortly.
0293	We appreciate your call and will be with you as quickly as possible.
0294	Thank you for your patience. We should be with you soon.
0295	Thank you for your patience. We should be with you soon. For your convenience, you may leave a message if you wish by pressing the # key on your telephone and we will get right back to you.
0296	We apologize for the extended delay, but our current call load is abnormally high. Remember, you may leave a message by pressing the # key on your telephone and we will get right back to you.
0297	You may still wait if you prefer, but we suggest you leave a message by pressing the # key on your telephone and we will get right back to you.

Recording Custom Phrases

When you create custom phrases, you should keep a record of phrase numbers and the corresponding phrases so that if a phrase needs to be changed, the correct phrase number is readily available.

To record a custom phrase:

1. Log in from any telephone on the system with the system manager's extension and password.

This brings you to the AltiGen Voice Mail System Main Menu.

2. Press **6** for the Phrase Management option.
3. Press **2** to record a phrase.
4. Enter a four-digit phrase number between 0001 and 0999.
5. Record the phrase after the tone. Press **#** at the end of the recording.

6. The system will replay the recorded phrase. Press # if the recording is acceptable.
7. At the Phrase Management menu, press **2** to record additional prompts or star (*) to exit Phrase Management.

Using Professionally Recorded Phrases

Recording studios such as Worldly Voices (see AltiGen's Support Page at <http://support.altigen.com> for more information) provide professionally recorded prompts as electronic files that can be installed and used on AltiServ.

AltiGen provides a utility to convert these files into the proper AltiServ format. Some recording studios provide the conversion service for an additional fee. The converted file can then be used for Auto Attendant or group setup.

To install professionally recorded phrases or prompts:

1. Assign a prompt number (between 0001 to 0999) to each prompt you would like recorded.
2. Submit your prompt script and prompt number to the recording studio.
3. Instruct the recording studio to record prompts in either 8KHz or 11.025KHz mono in the WAVE format.
4. Ask the studio to convert the WAVE file(s) into the proper AltiWare format.
 - If using Worldly Voices, this conversion is done for you.
 - If you are using a studio other than Worldly Voices, the conversion utility is available from AltiGen's Support Web site at <http://support.altigen.com>. This utility allows you to convert an audio file recorded at either 8KHz or 11.025KHz in the WAVE format to an AltiWare playable audio file.
5. The prompt should be saved in the following file name format:
 - **0001.wav** for phrase #0001
 - **0002.wav** for phrase #0002, etc.
6. Once you receive the prompts in the AltiWare format, place them in the **altiserv\phrases\LangCustom** directory on the AltiServ.

Your prompts are now ready to be used in Auto Attendant or group setup.

Additional Setup

This section describes additional system features that must be configured through the Management menu or through AltWare Tools.

Audio Peripheral Configuration

The Audio Peripheral Configuration window (see Figure 1) is used to set up:

- Music-On-Hold
- System Default Beginning and Update Prompts for Callers in Queue
- Overhead Paging

You can access **Audio Peripheral Configuration** by selecting it from the **Management** menu.

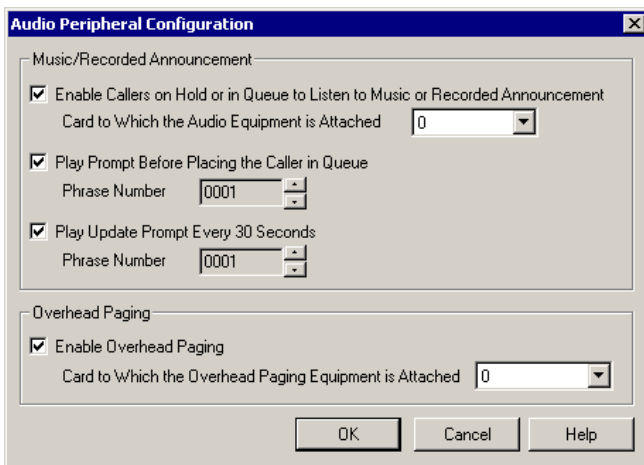


Figure 1. Audio Peripheral Configuration window

Configuring Music On Hold and Recorded Announcements

Callers will hear the music or recorded announcement configured in Audio Peripheral Configuration **only** if the user places the caller on hold by pressing **FLASH** or **LINK**. If the user presses **HOLD** (except on the Alti-IP 600), the caller hears nothing.

To configure music on hold:

1. Open the Audio Peripheral Configuration window as discussed in the previous section.
2. Select the check box, **Enable Callers on Hold or in Queue to Listen to Music or Recorded Announcement**.
3. Select the Quantum or Triton Analog Station board number to which the audio equipment is attached.

Playing Music from a File for Music On Hold

The system can be set up to play music on hold from a custom file (and replaces the system's default music on hold file). This file is located at `\altiserv\phrases\Music\MusicOnWaiting`.


Notes:

- A 30-port IP Board is required
- There can only be ONE system default Music On Waiting file, which must be in 32K AltiGen ADPCM format.
- The default music on hold file can be replaced with AltiGen's ADPCM format. To convert a .wav file to AltiGen ADPCM format, run `wav2alt.exe` (available at AltiGen's web site). Once the .wav file is converted, rename the file to "MusicOnWaiting" and replace the default music file with this one.

To play music from a file:

1. Make sure a 30-Port IP board is installed in the system.
2. Stop AltiGen Switching Service.
3. Replace the **MusicOnWaiting** file located at `c:\altiserv\Phrases\Music` with the desired file.
4. In the **Audio Peripheral Configuration** window, select the **Enable Callers on Hold or In Queue to Listen to Music or Recorded**

Announcement check box and use the drop-down list to select the 30-Port IP board.

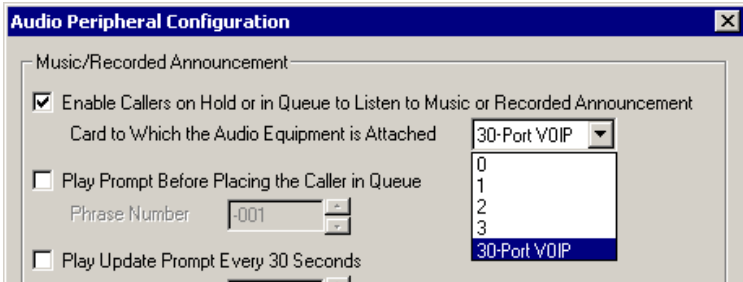

5. Restart Altigen Switching Service.

Setting Greeting and Update Prompts

To play a prompt before placing the caller into a hold queue:

1. Select the **Play Prompt Before...** checkbox.
2. Use the drop-down list to select the prompt number you want to use for the greeting message. (Creating prompts is discussed in previous sections.)

To play an update prompt every thirty seconds:

1. Select the **Play Update Prompt ...** checkbox.
2. Use the drop-down list to select the prompt number you want to use for the greeting message.

Configuring Overhead Paging

To configure overhead paging:

1. Connect overhead paging equipment to a Quantum board audio out jack or Triton Analog Station board audio in jack.
2. Access the Audio Peripheral Configuration window and select Enable Overhead Paging.
3. Use the drop-down list to select the Quantum or Triton Analog Station board to which the overhead paging is attached.

MVIP Clock Configuration

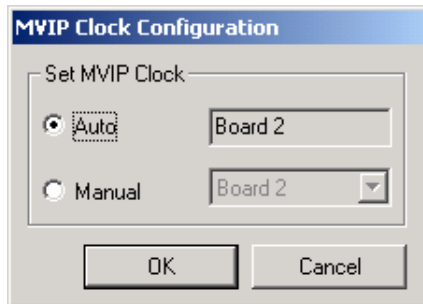


Figure 2. MVIP Configuration Dialog Box

By default, the system is set on “**Auto**,” which means that the board provides the most stable clock reference (by the system’s own parameters) and is automatically designated as the master clock by which all other boards set their clock to.

The **Clock Configuration** dialog box (see Figure 2) allows the system administrator to automatically or manually choose the master board.

By default, the setting of the clock configuration is set to **Auto**. This means that the system automatically checks all the boards for the most stable clock and designates that board as the master reference clock by which all other boards reference their clocks.

Note: It is recommended to use the **Auto** setting. Do not select **Manual** unless one of your digital spans is connected to equipment other than the PSTN (your regular phone network). It is also recommended that you select the **Auto** setting if there is only one T1/PRI board present in the system.

You can select **Manual** to choose the board to serve as the master clock for the other boards in the system. Click on the arrow to scroll down through the list of boards. It is recommended that you select the **Manual** setting when there are two or more T1/PRI boards present in the system.

Feature Tips

Each time a user logs into the AltiGen Voice Mail System, the user will hear a **Feature Tip**, helpful tips and reminders of the most useful features for optimal use of AltiServ. There are a total of eleven tips and a different tip is played each time the AltiGen Voice Mail System is accessed. Another way to listen to Feature Tips is by pressing **#55** on the telephone. You can listen to just one tip at a time or listen to all the tips at once.

Individual users may turn this feature off (stop AltiServ from playing Feature Tips at the beginning of the AltiGen Voice Mail System login) by pressing **6** at the Personal Options menu. This is a toggle feature, so pressing **6** at the Personal Options menu will turn it back on if it is off.

You may, however, want to completely disable this feature for all users.

To disable Feature Tips system-wide:

1. Select **Run** from the **Start** menu and enter **regedit** to open the **Registry Editor**.

Caution: Changing the registry can affect the configuration of your system! We recommend making a backup copy of the registry before making any changes.

2. Go to the following location:

```
\HKEY_LOCAL_MACHINE\SOFTWARE\AltiGen  
Communications, Inc.\AltiWare\
```

3. Create a new **DWORD Value** (select **DWORD Value** from the **New** option under the **Edit** menu) called **FeatureTipEnabled**.
4. Set the **Value data** to **0** to disable Features Tips. (Set the **Value data** back to **1** to enable Feature Tips again.)
5. Open the **System Configuration** window of AltiWare and click **OK** without making any changes in the data fields. It is not necessary to restart AltiWare.

System Data Management

AltıWare System Data Management provides for backing up data to, and restoring files from, a system hard disk drive or a network drive. This option can only be accessed at the AltıServ system; it is *not* available from a remote AltıAdmin client.

Using Backup and Restore

You can also access this feature by selecting the **AltıWare OE Backup and Restore Utility** program from the AltıWare folder accessible from the Start menu.

To access the feature, click **System Data Management** on the Service Menu.

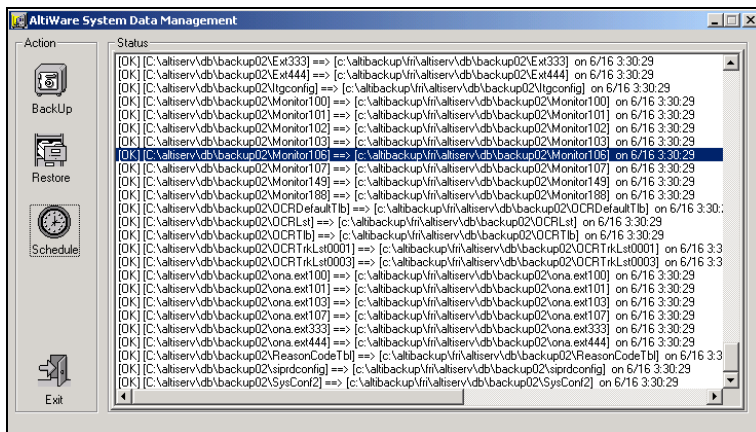


Figure 1. System Data Management window

Backing up Files

To backup files immediately:

1. Open the System Data Management window as described in the preceding section, then select the **Backup** icon to view the **Backup Configuration** dialog box.

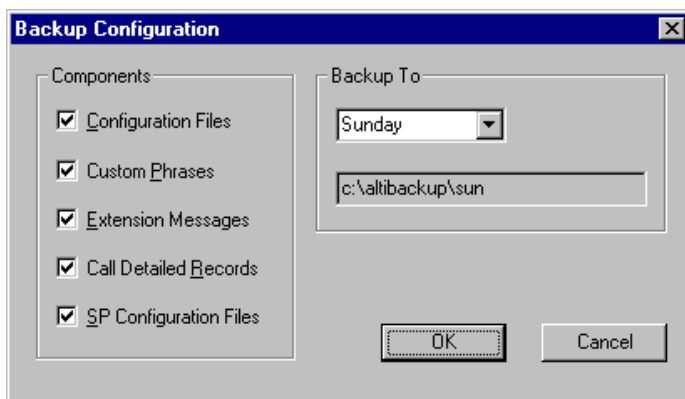


Figure 2. Backup Configuration dialog box

2. In the **Components** box, select the files you want to back up.
3. In the **Backup To** drop-down list, select *the day of the week* you want to use as the starting date for back up files, or select **Advanced**.

Advanced means that you select the folder or drive to back up. Selecting **Advanced** displays a folder icon. Click the folder icon to pop up a browse dialog box that lets you select the folder to backup.

When you click **OK** to close the dialog box, the selected drive or directory is displayed in the box below the **Backup To** drop-down list.

Note: You cannot select Advanced to choose a directory and at the same time select a starting day. You need to use one or the other for a particular backup operation.

4. Once you are satisfied with the selection of files to back up, and with the date and target location, click **OK** to start the backup. This closes the dialog box.

In the AltiWare System Data Management window, the progress and status of the file backup is displayed.

Scheduling Backups

You can set up automated backup on a schedule, and you can select the days, the times, and the target drives and folders for the backup.

To set backup schedules:

1. Open the System Data Management window as described above, then select the **Schedule** icon to view the **Backup Schedules** dialog box.

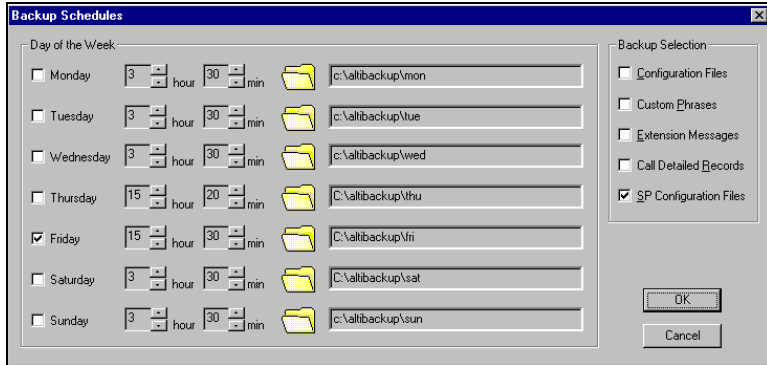


Figure 3. Backup Schedules window

2. Set the options:
 - Select the checkbox for each day of the week you want run the backup.
 - For each day, use the drop-down lists to specify the time. These time settings use a 24-hour clock.
 - You can accept the default target directories, or you can click the **Folder** to open the **Browse for Folder** to select the destination or the backup files.
 - Under **Backup Selection**, select the file components you want to back up: Configuration files, Custom Phrases, Extension Messages, Call Detail Records, and/or SP Configuration files.
3. Click **OK**.

Restoring Backed up Files

To restore the backed up files:

1. Open the System Data Management window as described in “Using Backup and Restore” on page 12-1, then select the **Restore** icon to view the **Restore Configuration** dialog box.

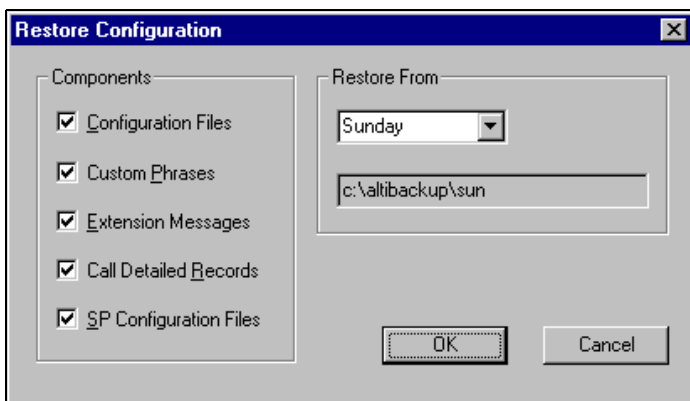


Figure 4. Restore Configuration window

2. Under **Components**, select the file groups you want to restore.
3. Using the **Restore From** drop-down list, select the day you want to restore from, or select **Advance** to choose the restore folder.

Clicking **Advance** displays a folder icon that you can click to open a dialog box that allows you to select the directory you want to restore from.

Selecting a day of the week or manually choosing the restore directory, the directory specification appears in the text box below the drop-down list.

Note: The components you select for restore must have been backed up into the directory you selected. For example, if you didn't back up configuration files on Thursday, you won't be able to restore them from the Thursday directory.

4. Click **OK** to start the restore process.

System Report Management



Altiserv provides system management reports that contain information on system configuration summary, traffic, system log, call detail summary, and IP cumulative traffic statistics.

System Summary Report

The System Summary report provides summary information on extensions, trunks, and workgroups configured in the system.

To open the System Summary report window, select the **Report** menu from the Main Menu Bar and then select **System Summary** from the drop-down list, or select the **System Summary** icon from the Quick Access Toolbar.

System Summary

Extension	Last Name	First Name	E-Mail Name	Slot	Chanr
300			ext300	0	0
301			ext301	0	1
302			ext302	0	2
303			ext303	0	3
304			ext304	0	4

Total Number of Extensions : 24

Group	Last Name	First Name	Members

Total Number of Groups : 0

Location	Access Code
02:00	9
02:01	9
02:02	9
02:03	9
02:04	9

Total Number of Trunks : 35

Extension	New Msg	Saved Msg	Private Msg	Reminder	Total
300	N/A	N/A	N/A	N/A	N/A
301	N/A	N/A	N/A	N/A	N/A
302	N/A	N/A	N/A	N/A	N/A
303	N/A	N/A	N/A	N/A	N/A
304	N/A	N/A	N/A	N/A	N/A

Refresh

Print OK

Figure 1. System Summary window

System Log

The system configuration summary data includes basic attributes on extensions, workgroups and workgroup members (click a workgroup to display the workgroup’s members), trunk location and access, and messaging usage by extension.

You can Print this report using the **Print** button.

System Log

The System Log window displays information on system operating status. This window is designed for use by system engineers and certified personnel only.

To view the System Log, select the **Report** menu from the Main Menu bar, then select **System Log** from the drop-down list, or select the **System Log** icon from the Quick Access Toolbar. You can also view the system log by running the **LogViewer.exe** program in the \altiserv\exe folder.

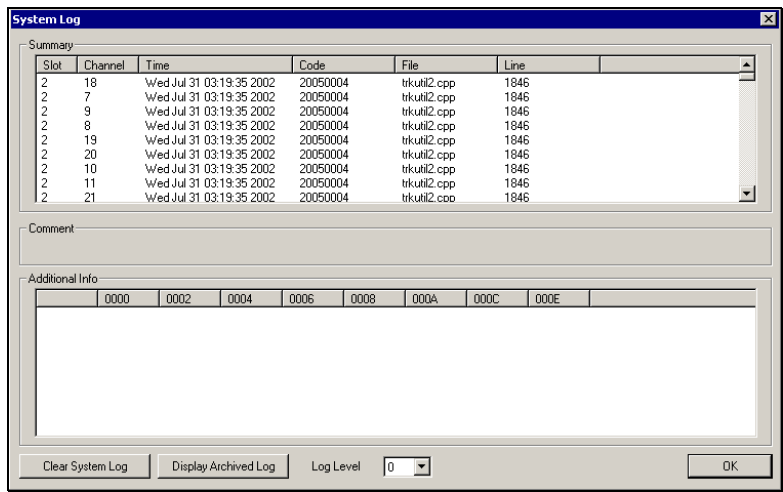


Figure 2. System Log window

The **Summary** box displays information on each channel for each card. Select a channel in the Summary box to see data about the channel in the **Comment** area and additional technical data in the **Additional Information** box.

Click **Clear System Log** to clear the information in all the windows.

Click **Display Archived Log / Display Current Log** to toggle the view between the current and the most recently cleared system log.

Use the **Log Level** dropdown list to view the level of severity for system errors. Level **0** displays the most obvious system errors, Level **5** displays all system errors in specific detail.

IP Cumulative Traffic Statistics

To view a report of all cumulative IP traffic, click **AltiWare IP Traffic Statistics** from the **Reports** menu. The **IP Cumulative Traffic Statistics** window displays the following IP trunk traffic information for **all** calls.

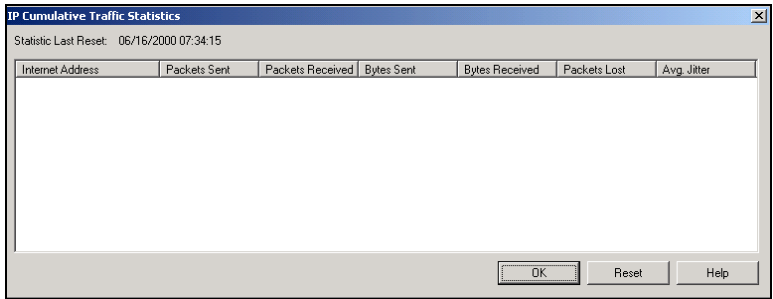


Figure 3. IP Cumulative Traffic Statistics window

This window displays the following data:

Parameter	Description
Internet Address	Displays the IP address or fully qualified DNS name of the remote location.
Packets Sent	Displays the number of voice packets sent to other AltiServ systems over the public or private IP network.
Packets Received	Displays the number of voice packets received from other AltiServ systems over the public or private IP network.
Bytes Sent	Displays the total size (in bytes) of all voice packets sent to other AltiServ systems over the public or private IP network.
Bytes Received	Displays the total size (in bytes) of all voice packets received from other AltiServ systems over the public or private IP network.

Parameter	Description
Packets Lost	Displays the number of voice packets that have been lost due to prolonged delays, network congestion, or routing failure.
Average Jitter	displays the average length of delay per voice packet in milliseconds. This figure should stay under 100 milliseconds. A higher figure indicates a longer average delay. This number can be used to measure the quality of service on the network that connects the source and destination sites.

The difference between the **IP Trunk Current Traffic Statistics** window and the **IP Cumulative Traffic Statistics** window is that the former shows figures only for the *active* call (Current Traffic) on a particular IP trunk of the local AltiServ system while the other window shows figures for *all* calls combined (Cumulative Traffic) to and from remote AltiServ locations.

Resetting Cumulative Statistics

You can reset the **AltiWare IP Cumulative Traffic Statistics** by clicking the **Reset** button. Also, this window automatically resets all fields to **0** when the AltiServ system is shut down and restarted. Statistics gathered before the reset are not saved.

Data and Internet Integration

This section describes how to integrate Altiserv with the Internet and data communications. It will cover the following areas:

- Email
- Mail forwarding
- Exchange integration
- Altiserv Setup

Network Protocol and Addressing

The Altiserv system integrates telephony functions with the LAN and Internet to provide a state-of-the-art communication facility with local and remote access to email mixed-media messaging.

Before you begin, you should be familiar with the following LAN and Internet protocol and addressing information.

Network

A network is a distributed interconnection of multiple voice and data communication devices utilizing network protocol software to communicate and exchange information.

Protocol

A protocol is a set of rules and methods by which telephone equipment and computers exchange information across a network. Networking software generally implements multiple levels of protocols in the process of interconnecting two or more devices on the network and enabling them to exchange information.

Transport Protocols

Among the various transport protocols available, Altiserv uses the **TCP/IP** transport protocol.

TCP/IP - Transmission Control Protocol/Internet Protocol (TCP/IP) is the protocol used on the Internet.

A **protocol stack** is a collection of actual protocol layers used to establish a connection across the network that allows dissimilar network devices to exchange information.

SMTP/POP3

SMTP—Simple Mail Transfer Protocol. *As seen by the client side* of the network, is an Internet email *sending* protocol software format.

POP3—Post Office Protocol Version 3. *As seen by the client side* of the network, POP3 is an Internet email *retrieving* protocol software format that allows users to retrieve mail from its stored location.

IMAP4—Internet Message Protocol Version 4. An enhanced version of POP3 that, among other things, allows the user to view message headers of each message before retrieving the complete message.

Network Address

A network address is an identifier for a node, station, or unit of equipment in a network. There are many methods of accessing the network, such as email or Hyper Text Transport Protocol (HTTP), Gopher, etc.

Altiserv uses the email client/server access method.

A sample email client/server network address might look something like the following example:

jsmith@earth.science.berkeley.edu

This address tells the routers and the Internet Service Provider (ISP) where to deliver this message. This is an extended address. The address is read from the right to the left:

edu = first level domain

berkeley = second level domain

science = third level domain

earth = fourth level domain

@ = at

jsmith = user name

Or it might be as simple (and short) as:

altigen.com**com** = first level domain name**altigen** = second level domain name

Local Address

When you are sending messages among users in a LAN, the local address is used in place of the extended network address. Local addressing is used in a peripheral node or station and is transformed to or from an extended address for delivery purposes. Often within a LAN, the domain is assumed to be the local domain if no *@domain* is added to the address.

Mixed-Media Messaging

Messaging includes many options other than just text. Messages might include all of the following types of information or any combination thereof:

- Text - (includes word processing files, spreadsheets, database listing)
- Voice
- Fax
- Video

If you include more than one attachment or media type in your email messages (such as graphics, video, or sound), you must employ a method called **MIME** (Multipurpose Internet/Mail Extensions). **MIME** is a technique designed to bundle attachments within individual email messages.

When a **MIME** file with attachments arrives at your workstation, additional processing begins immediately. As the various attachments arrive, the client or browser identifies these attachments by file type or by description information in the attachment tag (as specified by the **MIME** format). After the client or browser identifies a file, it can handle the file playback or display. Sometimes the client or browser itself handles playback or display (including .GIF and .JPG files).

When other kinds of files show up and need special handling capabilities (beyond the scope of most client/browsers), the client hands off the files to other **Helper Applications** for playback or display. Helper Applications are designed to read and process the files and to present the file contents on demand.

AltiWare provides users with the ability to record a voice annotation and attach it to an email mixed-media message. This voice recording must be done before the user sends the email in order to send the voice annotation as an attachment to the email. After the voice recording is complete, the user can send the email. AltiWare then combines the voice message and the email into a single MIME message and sends it to the recipient. The ability to send and receive MIME messages is included as part of AltiWare email capabilities.

Setting Up Email Service

There are some basic requirements that must be met in order to access Mixed-Media Messaging using email over the AltiServ system.

Before You Begin

To set up email for the AltiServ system, you need to have the following installed on the AltiServ:

- Windows NT network interface card installed and Windows NT network capability enabled
- Network TCP/IP installed and configured
- Internet connection (if sending and receiving emails over the internet)
- Multi-media stations/PCs as clients

Setting Up LAN and Internet Email on the Server

To set up the server side of the network, follow the steps below:

Step 1: Selecting Your ISP and IP Addresses

You will need to obtain the following to setup Internet email:

1. Select your **Internet Service Provider (ISP)**. There are numerous ISPs to choose from. There is a fee associated with these services. For details, please contact an ISP that serves your area.
2. From your ISP:
 - Obtain a **Domain Name Server (DNS) Address**. AltiServ address should be added to the DNS database by your ISP.

- Select and give your ISP a unique **Domain Name**. Each domain must have a unique name associated with it, such as the address for AltiGen, which is “altigen.com”.
- Obtain a **Block of IP Addresses** and assign a unique IP address to each client on the LAN.
- Obtain the **Subnet Mask**. You will need to enter this address later in the TCP/IP configuration setup for both the server and client stations.

Step 2: Setup the Router

Install the router on the LAN. The router is the gateway to another LAN or to the Internet.

1. Specify a router that is on the same LAN as the AltiServ server, such as ISDN or T1.
2. Assign an IP address (one of the block of IP addresses obtained from the ISP to the router). This becomes the **gateway** router address.

Step 3: Configure TCP/IP Properties

Configure the TCP/IP protocol parameters.

1. Open the **Control Panel** and select the **Network** icon. The **Network Setting** window is displayed.

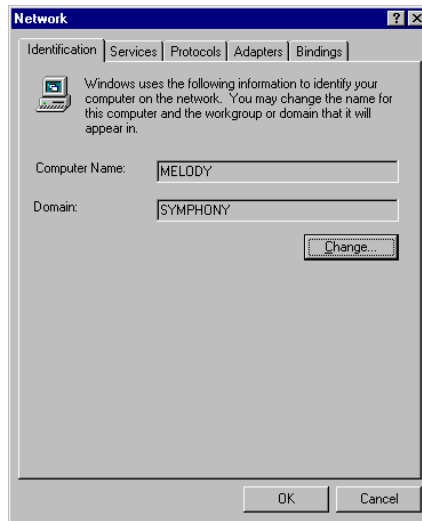


Figure 1. Network Setting window

2. Click the **Protocols** tab, then double click on **TCP/IP Protocol** from the drop-down list box. The **TCP/IP Protocol** window appears (see Figure 2), where you configure the IP Address, Subnet Mask, and Default Gateway (router).

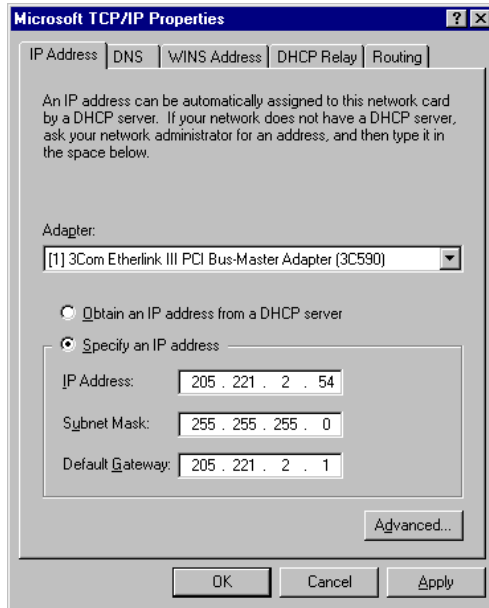


Figure 2. TCP/IP Configuration

- **IP address**—enter the assigned IP address (from the block of IP addresses obtained from your ISP) to the Altiserv.
 - **Subnet Mask**—enter the Subnet Mask obtained from your ISP.
 - **Default Gateway**—enter the email Gateway (the router address).
3. Select the **DNS** tab at the top of the TCP/IP Properties window (see Figure 3) to configure **Domain Name System**.

Note: You must configure the DNS tab if you want to exchange email through the Internet.

Configure the following:

- **Host Name**—enter the name of the server (for example: melody)
- **Domain**—enter the domain name (for example: altigen.com)
- **DNS Service Search Order**—enter the IP address of either your own or your ISP's Domain Name Server.

4. Click **OK**.

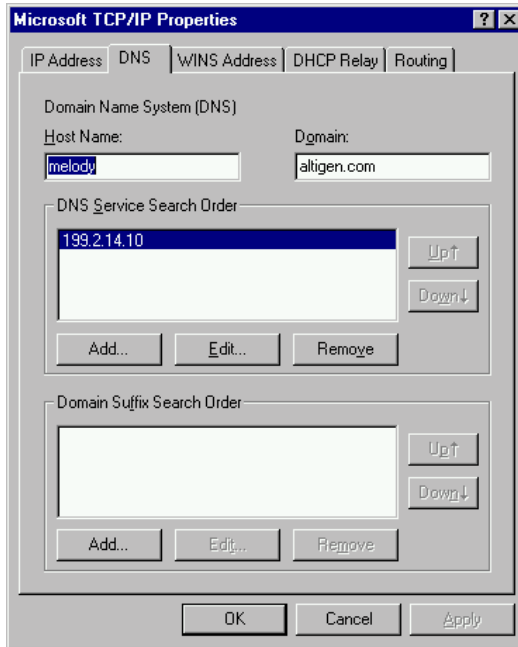


Figure 3. DNS Configuration window

5. Refer to Microsoft Windows NT configuration documentation to complete the TCP/IP network setup.

Step 4: Notify Your ISP of the Following:

1. Your Altiserv Host Name (host name of the server or server name)—your Altiserv is the server that actually receives the mail or messages. For example, Altigen has named its server “global_cti.” This tells the DNS to route all mail or messages for altigen.com to the global_cti server.
2. Your Altiserv’s IP address (e.g., 200.133.204.2).

Step 5: Configure Email in Altiserv Administrator

Important: If you have a Windows NT or Windows 2000 server, you must stop the Default SMTP Site server, or it will conflict with Altiserv’s SMTP server. Do the following:

1. In Altiserv, go to the Management menu, select **System Configuration...** and click the **Messaging** tab to open the Messaging

window. Be sure that **Enable SMTP/POP3 Service** (in the E-Mail Messaging Options field group) is deselected.

2. Open the Windows Internet Information Services window by right-clicking the **My Computer** icon and choosing **Manage** from the popup. Expand **Services and Applications** in the tree to view **Internet Information Services**.
3. Select **Default SMTP Site** in the tree.
4. On the toolbar, click the **Stop** button.

You can now proceed with the steps given below.

To configure the Altiserv for email service:

1. On the Management menu, select **System Configuration...** and click the **Messaging** tab to open the Messaging window:

The screenshot shows the 'System Configuration' dialog box with the 'Messaging' tab selected. The 'SMTP/POP3 Options' section is expanded, showing the 'Enable SMTP/POP3 Service' checkbox checked. Other settings include 'Mail Domain Name' as 'QA.ALTIGEN.COM', 'PostMaster Ext' as '101', and 'Exchange Server Address' as 'Argentina'. The 'Message Notification' section shows 'Maximum Retry Count' as 2 and 'Retry Interval in Minutes' as 30. The 'Message Management Options' section shows 'Warn Expiration of Saved Messages' checked. The 'Recording Options' section shows 'Minimum Recording' as 0 seconds and 'Pause Detect Length' as 700ms.

General	Number Plan	Business Hours	Holiday	System Speed	Call Restriction	Account Code
Call Reports	Messaging	Area Codes	IP Dialing Table	DNIS	Tenants	Distribution List
Logout Reason						

Message Notification

Maximum Retry Count: 2 Retry Interval in Minutes: 30

Message Management Options

☐ Confirm Message Deletion ☒ Warn Expiration of Saved Messages

Recording Options

Minimum Recording: 0 sec(s) ☒ Pause Detect Length: 7 100ms

SMTP/POP3 Options

☒ Enable SMTP/POP3 Service ☒ Allow Inbound Internet Mail

Mail Domain Name: QA.ALTIGEN.COM

PostMaster Ext: 101 ext101@QA.ALTIGEN.COM

Exchange Synchronization

☒ Synchronize With Exchange Server

Exchange Server Address: Argentina

OK Cancel Apply Help

2. Configure the **E-Mail Messaging Options** group as follows:
 - Select **Enable SMTP/POP3 Service** to enable email and Mixed-Media Messaging on the Altiserv system.

- Select **Allow Inbound Internet Mail** if Altiserv is the only mail server running on the system. If you are running another SMTP server on the same system (such as Exchange) and you do not want Altiserv to receive inbound Internet mail, you should leave this box unchecked.
3. Assign a unique **Email Name** to extension users in the **General** window of **Extension Configuration**.
 - Select the extension number (or select **Add Extension** and then enter the extension number in the field provided if this is a new extension).
 - Enter the email name in the **E-mail Name** data entry field.
 4. Allocate the system storage capacity for extensions in the **Mailbox Setting** window of **Extension Configuration**.

Each user's needs might be different. The default is 50 MB of storage, which on the average, will give each user room for 100 messages. Refer to "Setting the Mailbox Options" on page 8-28 for more details.

Setting Up LAN and Internet Email on the Client

To set up the client side of the LAN:

1. Configure the following client **TCP/IP Properties** (see Figure 2):
 - IP Address
 - Subnet Mask
 - Default Gateway
2. On the **DNS** tab of TCP/IP Properties, enter the following (see Figure 3):
 - Host Name
 - Domain
 - DNS Service Search Order
3. Configure the following mail server parameters of the email client application:
 - Enter the **Mail Server (POP3) User Name**. (This is the same name entered as the email name on the Altiserv **General** page of **Extension Configuration**).
 - Enter the **Incoming Mail (POP3) Server** address.

Setting up an Exchange Server

- Enter the **Outgoing Mail (SMTP) Server** address.

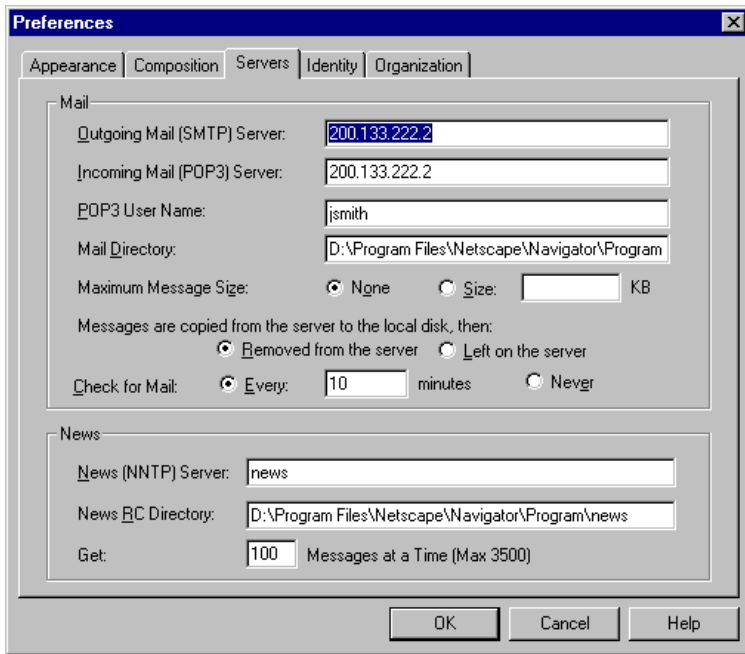


Figure 4. Netscape Mail Server Setup

4. Set up helper applications and general preferences for the email client application (i.e., associates the .WAV files with sound recorder application).

Setting up an Exchange Server

This section provides you with step-by-step instructions to configure the Exchange Integration feature in AltWare OE, for the Microsoft NT 4.0 server and the Microsoft NT 2000 server.

Exchange Server Windows NT 4.0 Integration

In the example that follows, the AltServ system is called **TELESYSTEM**, and the Exchange Server is called **MAILSERVER**, and both systems belong to the NT domain called **ALTICHINA**.

Prerequisites

Two NT servers:

- One NT server with the AltiWare OE software
- One NT server with Exchange Server software

AltiServ System Prerequisites

- Windows NT 4.0 with Service Pack 6a or higher
- AltiWare OE software version OE 4.6
- The AltiServ system and the Exchange server system must belong to the same NT domain.
- AltiGen Services should be started with the user account `<Domainname>\AltiGen_<AltiservSystemName>`. For example, `ALTICHINA\AltiGen_TELESYSTEM`.

To check the Windows NT version:

Click the **Start** button, select **Run**, and type **winver** in the Run dialog box.

This opens an About Windows NT dialog box that displays the version of NT running on your system. It should say:

Version 4.0 (Build 1381: Service Pack 6)...Revised
Service Pack 6a

If you have an older version of NT, upgrade to the latest version.
Check <http://www.microsoft.com/ntserver> to get the latest service pack for Windows NT.

To check the AltiWare version:

Select **About** from the **Help** menu of AltiWare Administrator. The version displayed should be AltiWare OE 4.6.

If you have an older version, contact AltiGen Technical Support to find out how to upgrade to the latest version of AltiWare.

To check the domain:

On the AltiServ system, go to **Start**→**Settings**→**Control Panel**→**Network**. In the Identification tab of the Network dialog box, verify

that you see two text boxes, **Computer Name** and **Domain**. Note down the value in the Domain field.

Repeat the same steps on the Exchange server system and make sure the domain names are the same.

To verify Altigen Services:

1. Select **Start**→**Control Panel**→**Services**. A Windows Services dialog box will be shown, as in this example.

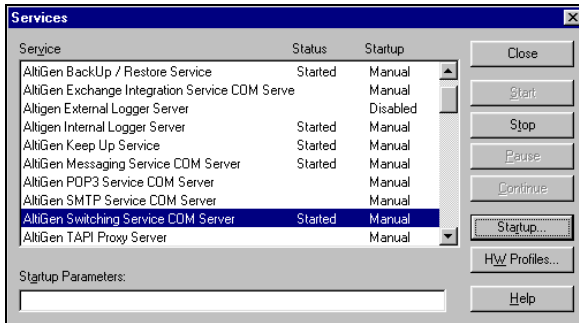


Figure 5. Windows Service window

2. Select **AltiGen Switching Service COM Server** from the control panel of Altiserv.
3. Highlight the AltiGen Switching Service Com Server and click the **Startup** button. A Service startup options dialog box will popup:

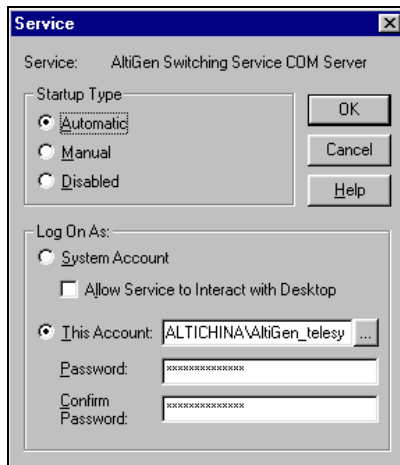


Figure 6. Service Startup options dialog box

4. Complete the entries in this dialog box as follows:

- In the **Log On As** group, select This Account and set `<DomainName>\AltiGen_<ServerName>` as the account. In this example, it is **ALTICHINA\AltiGen_telesystem**.

If this is not the case, you need to re-install AltiWare while logged in as a domain administrator with local administrator privileges.

- Repeat the previous step, but this time, check the **Log On As** account for **AltiGen Exchange Integration Service COM Server**.

Exchange Server Prerequisites

- Exchange Server 5.5 with Service Pack 3
- Successful ping to the AltiServ and *vice versa*
- Exchange Server Services must be started

To check the NT version:

Click the **Start** button, select **Run**, and type **winver** in the Run dialog box.

To check the Exchange Server version:

Click **About** in the Exchange Administrator.

To ping the Exchange Server from AltiServ and *vice versa*:

From the AltiServ system, open a MS-DOS window, and type `ping <exchange server name>`, then press enter.

For example, type `ping mailserver`. You should see `Reply from...` as the response. If you see `Request timed out`, there is something wrong with your network settings or connectivity.

Similarly, ping the AltiServ system from the Exchange server. For example, from the command prompt in Exchange Server, type `ping telesystem`, then press enter. You should get proper reply.

To check that all Exchange Server Services Have Started:

1. Open the Control Panel and click the **Services** icon to view the Services window.

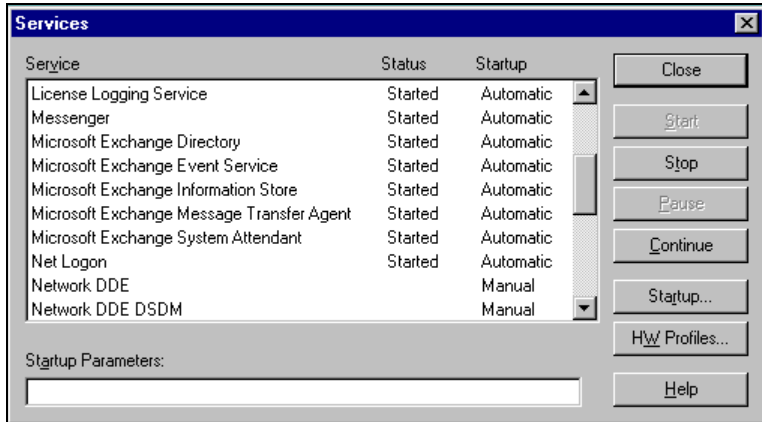


Figure 7. Exchange Server Services Window

2. Check the status of the following services to see if they are started:
 - Microsoft Exchange Directory
 - Microsoft Exchange Event Service
 - Microsoft Exchange Information Store
 - Microsoft Exchange Message Transfer Agent
 - Microsoft Exchange System Attendant

If any of these services are not started, select the service and click **Start** in the Services window to start it.

If a service cannot be started, please contact Microsoft technical support.

Exchange Server Configuration

Now that you have verified that the AltiServ and the Exchange Server systems are properly installed, you can start configuring the two systems to enable the Exchange Integration feature. In this section, we describe the configurations to be performed in the Exchange Server.

For testing purposes, create an Exchange mailbox for NT account `<Domain>\AltiGen_<AltiservSystemName>` (e.g. **ALTICHINA\AltiGen_TELESYSTEM**).

Open the **Exchange Administrator** on the Exchange Server and do the following:

1. Select **New Mailbox** from the **File** menu.
2. Input a mailbox name, for example, first name **AltiGen**, last name **Assist**, display name **AltiGen Assist** and alias name **AltiGenA**.
3. Click **Primary Windows NT Account** and in the dialog box, select `<Domain>\AltiGen_<AltiservSystemName>` (e.g. **AltiGen_tesystem**). After setting the primary NT account, your dialog box should look the example that follows (see Figure 8). Click **Apply** to create the mailbox.

Figure 8. Adding a mailbox to Exchange Server

- Click the primary NT account and select **Use Existing Account**. This account can then be added from the user manager window. Remember that this can only be achieved if AltiGen has an account in the same domain as the Exchange Server or a trusted domain.
- Give **Service Account Admin** rights to AltiServ service account in the Exchange server. (See Note 3 on page 14-27.)

Microsoft Exchange Administrator Configuration

- In Microsoft Exchange Administrator, highlight the Organization container. (Organization is the top item in the hierarchy on the left of the Exchange Admin window.)



Figure 9. Microsoft Exchange Administrator

- Select **Properties** on the **File** menu, then click **Permissions** to get a window such as the following:

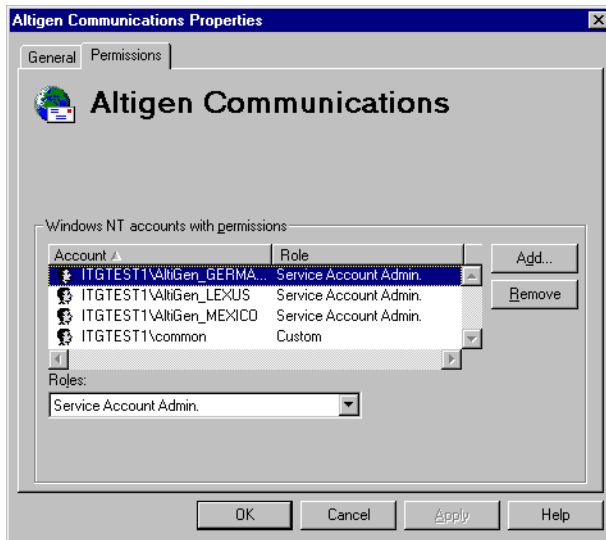


Figure 10. Properties window, Exchange Object

3. Add <Domain>\AltGen_<AltIServSystemName> (e.g. **AltGen_telessystem**) account to the account list.
4. Change the accounts role to **Service Account Admin** from the **Roles** combo box (see Figure 10).
5. Repeat the above two steps for the **Domain** and **Configuration** containers. The name of Site is **ITGTEST1**. The name of Configuration is **Configuration**.
6. Stop and restart all the services of Exchange Server, or reboot the Exchange server.

Installing Outlook 2000 Client on the AltIServ System

Outlook 2000 has two modes: **Internet Only** mode and **Corporate or Workgroup** mode. To enable the Exchange Integration feature, you **MUST** configure it to use **Corporate or Workgroup** mode.

If you have already installed Outlook 2000 in the AltIServ system, make sure that you have installed it in the **Corporate or Workgroup** mode. This is discussed on page 14-19.

To install Outlook 2000 to Corporate or Workgroup mode:

1. Install Outlook 2000 from the Outlook 2000 or Office 2000 CD. During installation, you will be prompted to choose a mode (**Internet Only** vs. **Corporate or Workgroup**). Make sure you choose the **Corporate or Workgroup** mode.
2. After installation is complete, start Outlook 2000 from **Start → Programs**. In the Microsoft Installer wizard, select **Microsoft Exchange Server** to install, then click **Next** to move to the next window.



Figure 11. Outlook setup, Exchange Server Name and Mailbox

3. In the above dialog box, type in values for the **Microsoft Exchange Server** and **Mailbox**. Enter the name of the Exchange server, and enter the test mailbox we created (**Altigen Assist**) in the Mailbox field.
4. Click the **Next** button to bring up the next dialog box, which asks a Travel question, to which you should answer **No**, then click **Next**.
5. Once you have completed the Setup Wizard, a final dialog box appears, indicating that the information services that have been added to your profile. Then a **Done!** dialog box appears; click **Finish** to end this part of configuration.
6. If the values you entered for **Microsoft Exchange Server** and **Mailbox** are correct, you will be able to use Outlook 2000 now. If they are not correct, you'll be asked to re-enter the **Microsoft Exchange Server** and **Mailbox** names. Make sure you enter the correct values. You can verify your input by clicking the **Check name** button.

To check the Outlook 2000 mode:

1. Start Outlook 2000. Select **Tools** from the menu options.

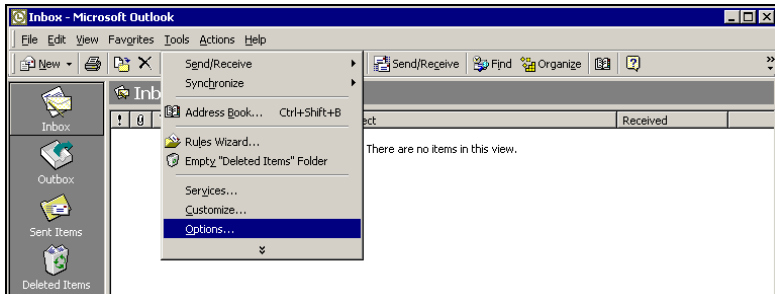


Figure 12. Outlook Tools menu

2. If there is a menu item **Service**, it means Outlook 2000 is in the mode of **Corporate or Workgroup**. You can move on to the next set of steps. If there is a menu item **Accounts**, it means Outlook 2000 is in the mode of **Internet Only**. Perform the following steps to change Outlook 2000 to the mode of **Corporate or Workgroup**.
3. Click **Options...** to open the Options dialog box, and select **Mail Delivery**.

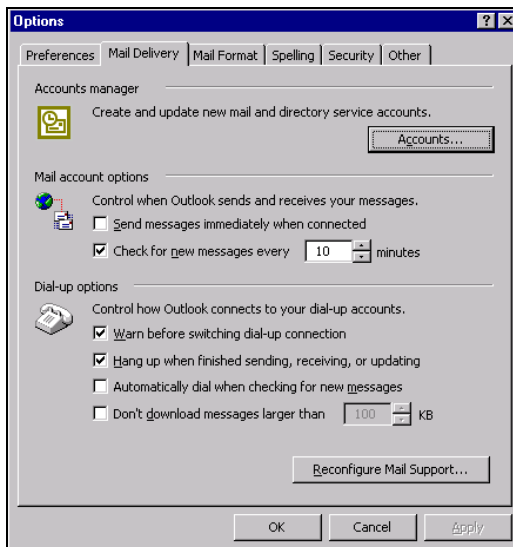


Figure 13. Outlook Options

Setting up an Exchange Server

- Click **Reconfigure Mail Support...** to open the E-mail Service Options dialog box.



Figure 14. Email Service Options

- Select **Corporate or Workgroup** and click **Next**. When a dialog box pops up, click **Yes**.

To configure an Outlook 2000 profile:

- Start Outlook 2000. Select **Services...** on the **Tools** menu to open the Services dialog box.

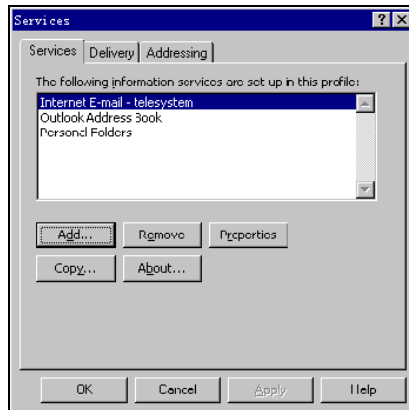


Figure 15. Outlook Services

If **Microsoft Exchange Server** is in the list of services in this profile, proceed to “Enabling the Exchange Server” on page 14-22.

If **Microsoft Exchange Server** is *not* in the list of services, proceed as follows.

- Click **Add** to open the Add Service to Profile dialog box. Add **Microsoft Exchange Server**, **Outlook Address book** and **Personal Folders** to profile.

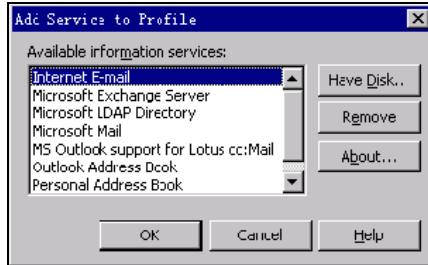


Figure 16. Add Services to Profile

- In the Microsoft Exchange Server dialog box that opens, type the Exchange Server name in the **Microsoft Exchange Server** field and the test mailbox name (e.g. **AltiGen Assist**) in the **Mailbox** field.
- Click **Check Name**. If you entered valid values, the names will be underlined and the **Check Name** button will be grayed out. Click **Apply** and then **OK**.

You will see **Microsoft Exchange Server** in the list in the Services window.

- Optional:** Select **Microsoft Exchange Server** in the list box, and click **Properties** to see its configurations. The **Microsoft Exchange Server** dialog box appears. If you need to, you can use this Properties dialog box to change the name of **Microsoft Exchange Server** and **Mailbox**.

To Test the configuration:

- Restart Outlook 2000 at least once. Test the configuration by sending an email, then check if you receive it.
- When the reboot is complete, log on using the AltiGen service account.
- Open Outlook, and from the **Tools** menu, select **Services**.
- Click **Add** and select **Exchange Server**. The Mailbox field should already be populated with the *Name* entered above.
- Enter the Exchange Servers hostname and click the **Check Name** button. Both the Mailbox and Exchange Server should now be underlined.

This completes setting up Altiserv and Exchange server systems properly, and you are ready to enable the Exchange Integration feature. *Please remember you MUST have completed the previous steps before moving ahead.*

Enabling the Exchange Server

1. Delete obsolete files from `\altiserv\exe` directory.
 - a. From Windows NT Explorer, go to the `\altiserv\exe` folder. If `mapi32.dll` and `gapi32.dll` remain in this folder, delete them.
2. In AltiWare Administrator (**AltiAdmin**), configure the extensions that are to be synchronized with their corresponding mailboxes in Exchange server.
 - a. From the **Extension Configuration General window** (example below), select an extension that needs to be synchronized with Exchange.
 - b. Type the **First Name** and **Last Name** exactly as they appear in the corresponding Exchange mailbox in the **Global Address List of the Exchange Server**.

Extension Configuration -- 105 : Physical

General | Group | Station Speed | Mailbox Setting | Notification | Restriction | Answering | One Number Access | Monitor List

Extension	Type	Location
100	Huntgroup	
101	Physical(Agent)	04:11
105	Physical	04:10
110	Physical	01:09
120	Virtual(Agent)	
125	Virtual(Agent)	
199	Physical(Agent)	02:11
200	Huntgroup	
202	Virtual	
220	Virtual	
222	Huntgroup	
300	Physical(Agent)	01:10
333	Huntgroup	
350	Virtual	
351	Virtual	
352	Virtual	
353	Virtual	
354	Virtual	
355	Virtual	
356	Virtual	
357	Virtual	

Personal Information

First Name: Amy Last Name: Lee
 Password: ***** DID Number: 105
 Tenant: 0 NA ☒ Enable Dial-By-Name Service
 Description: ☐ Enable Intercom ☐ Agent

Forced Account Code

☐ Enable Forced Account Code
☐ Account Code Validation
☐ Override Allowed

Call Recording Options

☒ Record on Demand to Ext VM
☒ Insert Recording Tone

SMTP/POP3 Setting

Email Name: ext105 ☐ Retrieve Voice Mail By E-mail Client

Mail Forwarding Options

☐ Enable Mail Forwarding Delete Messages After Forward
 Forward Email Address:
☐ Forward Email ☐ Forward Voice Mail

Type

☒ Physical Extension
☐ Virtual Extension
☐ Huntgroup
☐ Workgroup

IP Extension

☐ Enable IP Extension
☒ Dynamic IP Address
☐ Static IP Address
 Logon IP Address: 0 . 0 . 0 . 0
 Available IP License: 519

Phone Display

Number Field: Caller Number
 Name Field: Caller Name

Physical Location: Slot: 4 Previous Channel: 10 Next
 Add Delete
 Line Properties

Print Apply to ... OK Cancel Apply Help

Figure 17. General window, Extension Configuration

Make sure that the **E-mail Name** field contains alphanumeric characters only and does not contain other characters such as spaces () or periods (.).

3. In Exchange Administrator, ensure that for each mailbox in Microsoft Exchange Server to be synchronized, the **First Name** and **Last Name** are exactly as they appear in their corresponding extensions in AltAdmin.

Important: The **Middle Initial** field should be *empty* for Exchange Server mail accounts in order for Exchange Integration to work properly.

The screenshot shows the 'Amy Lee Properties' dialog box with the following fields and values:

- Member Of: Terminal Services Profile
- Exchange General: Exchange Features
- General tab selected
- First name: Amy
- Last name: Lee
- Display name: Amy Lee
- Description: (empty)
- Office: (empty)
- Telephone number: (empty) Other...
- E-mail: AmyLee@EXCHANGE2000
- Web page: (empty) Other...
- Buttons: OK, Cancel, Apply, Help

Figure 18. Mail account configuration in Exchange Administrator

4. Use these preceding steps to double check the synchronization of all mailbox names used jointly by Altiserv and Exchange Server.

Enable the Exchange Integration feature in AltAdmin

1. In AltAdmin, select **System Configuration** from the **System Management** menu.
2. Select the **Messaging** tab, and under the **E-mail Messaging Options**, check the **Synchronize with Exchange Server** box only.

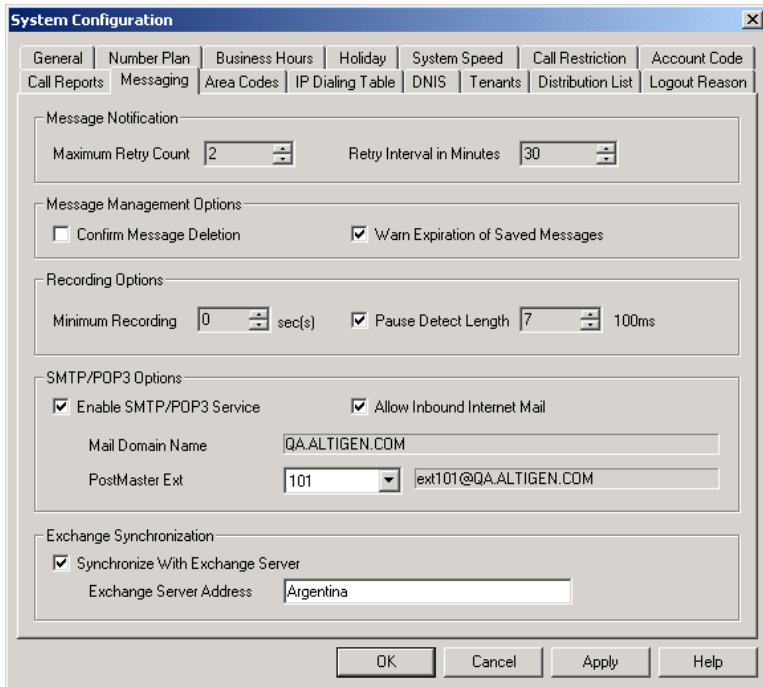


Figure 19. Messaging window, System Configuration

3. Enter the *name* of the Exchange Server (e.g. **MAILSERVER**) in the space provided and click **Apply**.

This completes the configuration for the Exchange Integration feature.

Testing the Exchange Server Setup

You can use some simple procedures to make sure that the Exchange Integration feature is working correctly.

To test the integration, set up an extension in AltIServ (e.g., 100) and its corresponding mailbox in Exchange server. Also, set up a PC with Outlook 2000 configured for this user.

To Test Message Delivery to Exchange:

1. Leave a voice mail for extension 100. The message light illuminates.
2. Log on to the Exchange Mailbox from Outlook and check for the message in the inbox. The message should be titled **VoiceMail from xxx** and include the voice mail as a .WAV attachment.

To check Message State Change Notification:

1. Log in to extension 100's voice mail from a phone. The message you left in the preceding step should be there as a new message.
2. Save the message by pressing 3. Within approximately a minute, the message in Outlook will become a saved message as well—it will no longer appear in **bold**.

To Listen to VM in Outlook:

Open the message in Outlook, and open the .WAV attachment. It should be the same message.

To check Deletion Notification:

1. Delete this message from Outlook.
2. Wait for a couple of minutes, and then log on to extension 100's voice mail from a phone. The voice mail should no longer be there.

If any of these tests fail, refer to the “Troubleshooting Tips” section.

Troubleshooting Tips

To check profiles:

1. Log on to the AltiServ system as the AltiGen service account (e.g. **AltiGen_telesystem**).
2. Select the **Mail Icon** from the Control Panel.
3. Click **Show Profiles**. For the test mailbox there should be profiles named such as **AltiExch<ServerName><FirstName><LastName>** (e.g. **AltiExchMAILSERVERAmyLee**).

If you don't see any such profile, make sure that \altiserv\exe folder does not contain the files *mapi32.dll* or *gapi32.dll*. If these files exist, delete them, then stop and start the Exchange Integration Service.

To delete old profiles:

If an error occurred while AltiWare was creating mail profiles, the damaged profiles would remain there until removed manually. After the re-configuration, the new profiles can't be created since the old ones still exist.

You can remedy this as follows:

1. Logon as AltiGen Service Account
2. Shutdown Altigen Exchange Integration Service from Control Panel \ Services, then open the **Control Panel\Mail** (or Mail and Fax) and click **Show Profiles**. Remove all the profiles such as **AltiExch<ServerName><FirstName><LastName>** (e.g. **AltiExchMAILSERVERAmyLee**).
3. Delete all the files under **\Altiserv\db\SynchStorage*** (e.g. **SynchStorageExt100**).
4. Start the **AltiGen Exchange Integration Service** from Control Panel \ Services.

If this doesn't work, contact AltiGen Technical Support (see "E1 R2 CAS Installation" on page B-1).

Notes

- Email client confirmed to work on the AltiServ system is Outlook 2000 (using **Corporate or Workgroup** mode). Note that this is the client installed on AltiServ host. The client running on the end user computer is irrelevant.
- Prevent attempts by the Exchange Administrator to use the existing service account for the AltiGen Exchange Integration Service. Using the AltiGen service account will provide you an audit trail that is invaluable while troubleshooting.
- Depending on the number of voice mails you have on the AltiGen server, the initial mailbox synchronization may take a long time.

For example, if you have 10GB voice mails on the AltiGen server and are enabling Exchange Integration for all the mailboxes, it may take up to 24 hours to initialize the Exchange Integration service.

On the other hand, if you have less than 100MB of voice mails on the AltiGen server, the initialization will take less than 5 minutes.

- When checking the profiles using the mail icon in the control panel of Altiserv, you should see one account for each mailbox. You will see these profiles only if you are logged on as the Altigen service account (e.g. **Altigen_tesystem**).

Exchange Server 2000 Integration

In the example that follows, the Altiserv system is called **ALTIWARE4_1** and the Exchange Server is called **GOLDMINE**. Both systems belong to the NT domain called **HAPPINESS**.

Important: The Windows 2000 server must be the Primary Domain Controller.

Prerequisites

Two Windows servers:

- One Windows NT server with the Altiserv OE software
- One Windows 2000 server with Exchange Server 2000 software

Important: When you install the Exchange Server, you must log in as the Domain Administrator, NOT the Local Administrator.

Also note that the Windows 2000 server must be the Primary Domain Controller.

Altiserv System Prerequisites

- Windows NT 4.0
- Altiserv OE software version OE 4.6 or higher
- The Altiserv system and the Exchange server system must belong to the same NT domain.
- Altiserv Services should be started with the user account **<Domainname>\Altigen_<AltiservSystemName>**. For example, **HAPPINESS\Altigen_ALTIWARE4_1**.

To check the Windows NT version:

Click the **Start** button, select **Run**, and type **winver** in the Run dialog box.

This opens an About Windows dialog box that displays the version of Windows 2000 running on your system. It should say:

Version 4.0 (Build 1381: Service Pack 6)...Revised
Service Pack 6a

If you have an older version of NT, upgrade to the latest version.
Check <http://www.microsoft.com/ntserver> to get the latest service
pack for Windows NT.

To check the AltiWare version:

Select **About** from the **Help** menu of AltiWare Administrator. The
version displayed should be AltiWare OE 4.6 or higher.

To check the domain:

On the AltiServ system, go to **Start**→**Settings**→**Network and Dial-up Connections**. In the left panel of the Network and Dial-up
Connections window, click the **Network Identification** link. Verify
that you see two text entries, **Full Computer Name** and **Domain**. Note
the value in the Domain field.

Repeat the same steps on the Exchange server system and make sure
the domain names are the same.

To verify AltiGen Services:

1. Select **Start**→**Programs**→**Administrative Tools**→**Services**. A
Windows Services dialog box will be shown, as in this example.

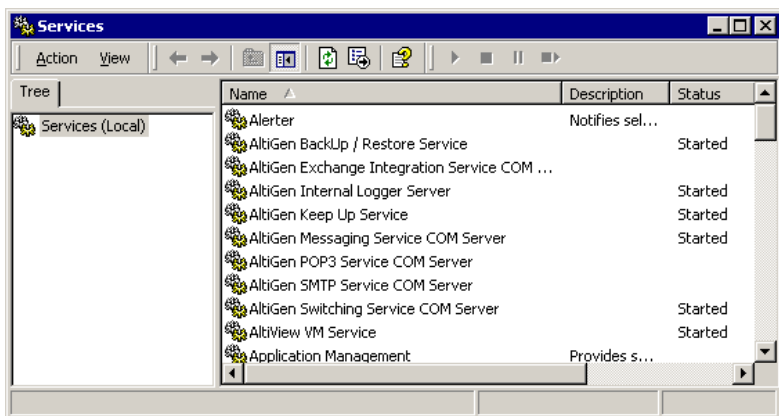


Figure 20. Windows Services window

2. Double-click **AltiGen Switching Service COM Server** to launch its Properties dialog.

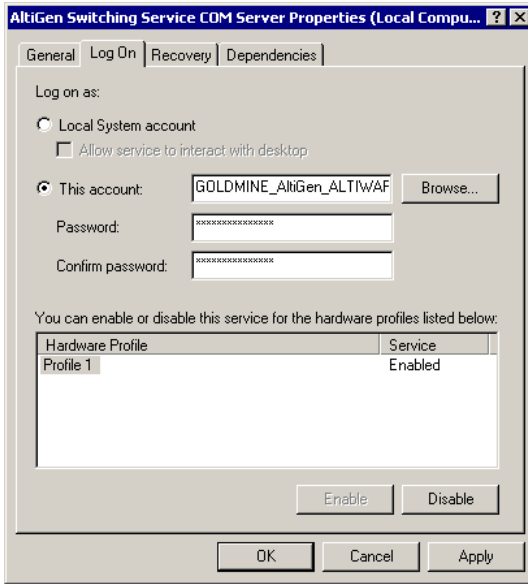


Figure 21. Service Properties dialog box

3. In the **Log On** tab, set **<DomainName>\AltiGen_<ServerName>** as the account. In this example, it is **GOLDMINE\AltiGen_ALTIWARE4_1**.

If this account is not available, you must reinstall AltiWare while logged in as a domain administrator with local administrator privileges.

Exchange Server Prerequisites

- Exchange Server 2000 software

Important: When you install the Exchange Server, you must log in as the Domain Administrator, NOT the Local Administrator.

Also note that the Windows 2000 server must be the Primary Domain Controller.

- Successful ping to the AltiServ and *vice versa*
- Exchange Server Services must be started

To check the Windows 2000 Server version:

Click the **Start** button, select **Run**, and type **winver** in the Run dialog box. It should say:

Windows 2000 Server Version 5 (Build 2195: Service Pack 1)

Service Pack 1 is the minimum required.

To check the Exchange Server version:

Click **About** in the Exchange Administrator.

To ping the Exchange Server from Altiserv and *vice versa*:

From the Altiserv system, open a MS-DOS window, and type `ping <exchange server name>`, then press enter.

For example, type `ping mailserver`. You should see `Reply from...` as the response. If you see `Request timed out`, there is something wrong with your network settings or connectivity.

Similarly, ping the Altiserv system from the Exchange server. For example, from the command prompt in Exchange Server, type `ping ALTIWARE4_1`, then press Enter. You should get the proper reply.

To check that all Exchange Server Services Have Started:

1. Open the Control Panel and click the **Services** icon to view the Services window.

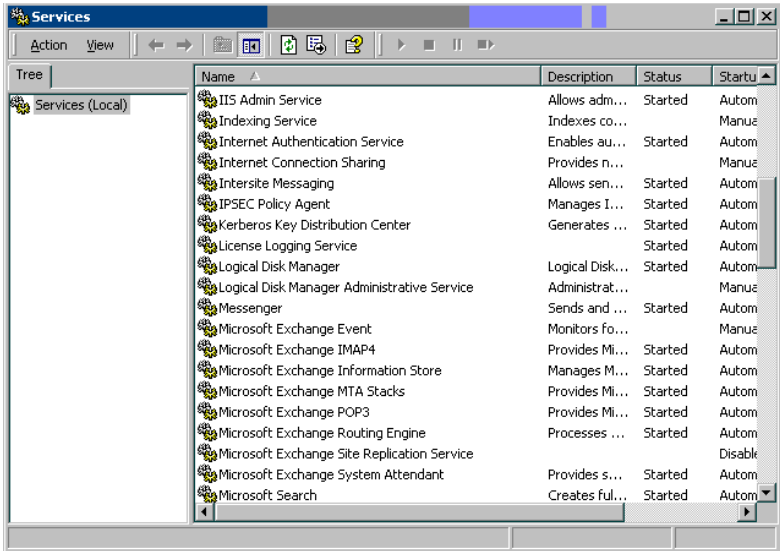


Figure 22. Exchange Server Services Window

2. Check the status of the following services to see if they are started:

- Microsoft Exchange Event
- Microsoft Exchange IMAP4
- Microsoft Exchange Information Store
- Microsoft Exchange MTA Stacks
- Microsoft Exchange POP3
- Microsoft Exchange Routing Engine
- Microsoft Exchange Site Replication Service
- Microsoft Exchange System Attendant

If any of these services are not started, select the service and click the Start arrow in the Services window to start it.

If a service cannot be started, contact Microsoft technical support.

Microsoft Exchange Administrator Configuration

1. From the Windows **Start** menu, launch **Programs** → **Microsoft Exchange** → **System Manager** to open the Exchange System Manager window.
2. In the Exchange System Manager window, expand the Servers to locate the Exchange 2000 server. Right-click its name to pop up a menu; select the **Properties** command to open the Properties dialog.
3. In the Properties dialog, select the **Security** tab and click the **Add** button to open a Select dialog.
4. In the Select dialog, highlight the AltiWare server name and click the **Add** button below.

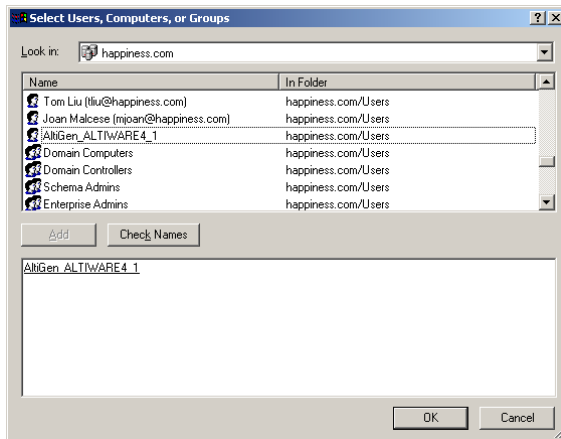


Figure 23. Adding the AltiWare server

5. Click **OK** to close this dialog and return to the Security tab of the Properties dialog. Select the AltiWare server and assign **Full Control** in the **Permissions**. Select the **Allow inheritable permissions...** option.

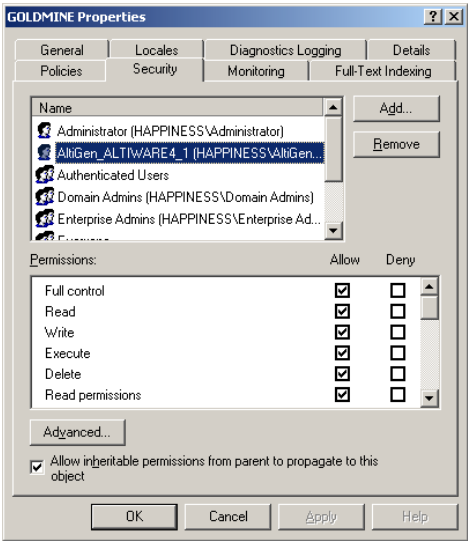


Figure 24. Assigning permissions to the AltiWare server

Checking the AltiGen Service Account

Check to see that the AltiGen Service account has been added properly.

1. From the Windows **Start** button, launch **Programs**→**Microsoft Exchange**→**Active Directory User and Computers**.
2. In the left panel of the Active Directory User and Computers window, expand the domain name, then open the **Users** folder. Locate the server name as the AltiGen Service account in the list of Users.

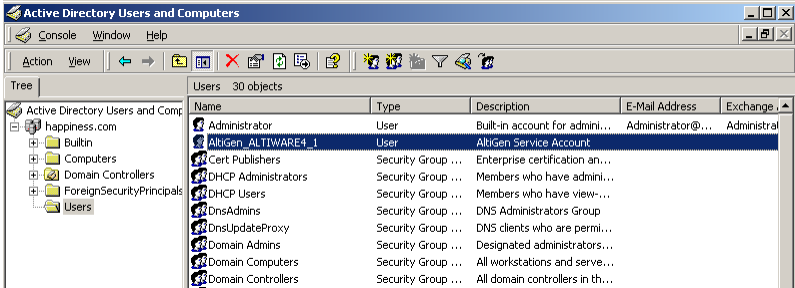


Figure 25. The AltiGen Service Account

Installing Outlook 2000 Client on the Altiserv System

(Same as settings for Exchange Server for Windows NT 4.0 Integration, follow steps under “Installing Outlook 2000 Client on the Altiserv System” on page 14-17.)

Enabling the Exchange Server

(Same as settings for Exchange Server for Windows NT 4.0 Integration; follow steps under “Enabling the Exchange Server” on page 14-22.)

Testing the Exchange Server Setup

(Same as settings for Exchange Server for Windows NT 4.0 Integration; follow steps under “Testing the Exchange Server Setup” on page 14-25.)

Troubleshooting Tips

(Same as Exchange Server for Windows NT 4.0 Integration; refer to “Troubleshooting Tips” on page 14-26.)

Notes


(Same as Exchange Server for Windows NT 4.0 Integration; refer to “Notes” on page 14-27.)

Exchange on Windows 2000


To set up Exchange Server integration with Windows 2000:

First, on the machine running Exchange server:


1. Run Program> Exchange> System Manager>Server

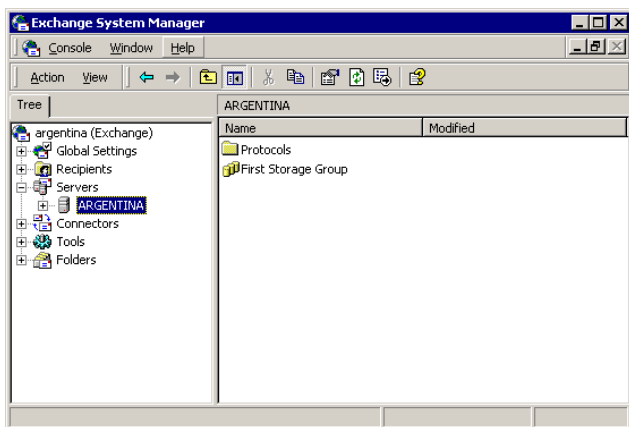

2. Right-click on the name of Exchange Server to integrate.

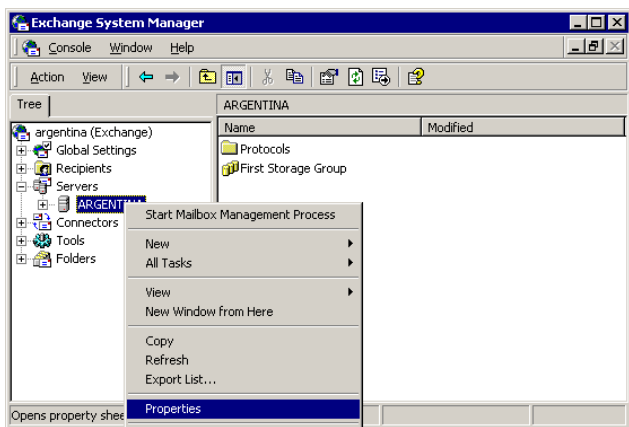

3. Go to **Properties** > **Security** > **Add** > name of AltiGen Server linked up.

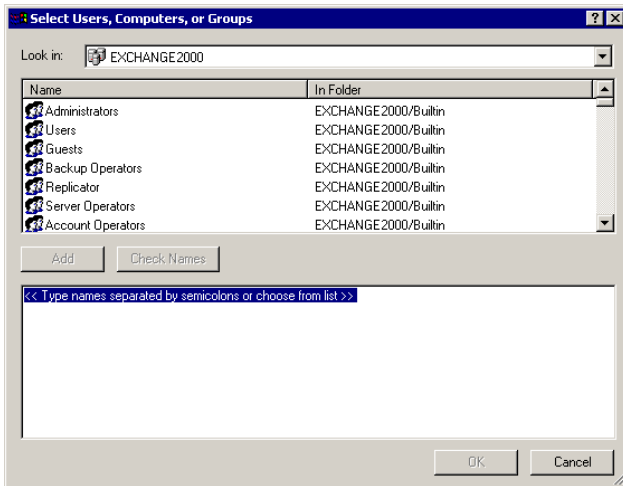

In AltıWare, enable the “**Exchange Message Synchronization**” check box in the Mailbox Setting of the user in Extension Configuration. Then, enable the “**Synchronize With Exchange Server**” checkbox and add the name of the Exchange server in the Messaging window of System Configuration.

To troubleshoot this integration, you may 1) run an Exchange Server Trace or 2) login to AltıWare as Domain Administrator. Open Outlook and right-click to Properties, and look for show profiles.

About AltıReach Configuration

The AltıReach Call Management system allows AltıServ to provide remote and local desktop call management to users using the Intranet or Internet via a standard Web browser.

AltıReach is installed and configured automatically when you install AltıWare. The configuration settings differ depending on the version of the Microsoft Internet Services Manager you are running and whether AltıServ is running on Windows NT or Windows 2000.

To troubleshoot or double-check the server configuration:

- **Internet Services Manager (IIS) 2.0 and 3.0:** In the Microsoft **Internet Services Manager** → **WWW (Running)** settings, the **Home** directory is set to `c:\altiserv\webmgmt` (where **c:** is the local drive on which AltiWare is installed). In the **Properties** for this directory, the access privileges allow **Read** and **Execute**.
- **Internet Services Manager (IIS) 4.0 and higher:** In **Internet Services Manager** → **Default Web Site** → **PropertiesWeb Site** tab, the **IP Address** is set to the address of the AltiWare server.

Under the **Properties** → **Home Directory** tab, the following configuration is established:

- The **Local Path** shows `c:\altiserv\webmgmt` (where **c:** is the local drive where AltiWare is installed). On this local path, **Read** and **Directory Browsing** (NT) or **Directory Browsing Allowed** (Windows 2000) are both selected.
- In the **Application Settings** group:
 - In *Windows NT*, under **Permissions**, the **Execute (including script)** radio button is selected. On the **Execute** is selected.
 - In *Windows 2000*, **Scripts and Executables** is selected in the **Execute Permissions** drop-down list.

Using AltiReach

For instructions on how to use AltiReach and descriptions of all the functions within AltiReach, please refer to the *AltiServ User Guide*.

Using TAPI

If your office has an off-the-shelf application for calling contacts without manually dialing the telephone's keypad that supports the Telephony Application Programming Interface (TAPI), you can install AltiGen's TAPI gateway to use this functionality through your AltiServ installation. An example of such an application would be Microsoft Outlook.

AltiWare implements its service provider based on TAPI 2.1, so applications written to TAPI 3.0 can make full use of all the telephony functions implemented by AltiWare.

AltiGen's TAPI implementation has two components:

- *TAPI Proxy Server* - installed on the AltiServ server system.
- *TAPI Service Provider* - installed on each client system.

Note: Only outbound dialing functions are supported in the TAPI gateway. Users can make outbound calls from their extensions, but call control functions such as transfer, hold, and park, are not supported.

Also, users cannot make calls through TAPI with an IP phone as the source phone.

System Requirements

Server

- Windows NT Server 4.0 with Service Pack 6a *or* Windows 2000 Server

Note: For Windows 2000 Server, the TAPI client must be installed on a separate PC. Otherwise, it won't be able to detect your devices.

- Network connection with TCP/IP enabled

Client

- Windows 98, Windows NT 4.0 with Service Pack 6a *or* Windows 2000
- Network connection with TCP/IP enabled

- A TAPI application (Phone Dialer, Outlook, etc.)

Installing TAPI Services

Note: Install the TAPI services (TAPI Proxy Server and TAPI Service Provider) *after* physically configuring your AltiServ system. The TAPI Service Provider will automatically load the AltiServ configuration. If you change the AltiServ configuration after installing TAPI, by physically adding, removing, or moving extensions, you will have to uninstall and reinstall the TAPI Service Provider to reload the AltiServ configuration.

Note: For Windows 2000 Server, the TAPI client must be installed on a separate PC. Otherwise, it won't be able to detect your devices.

To install TAPI Proxy Server on the server:

1. Locate the TAPI Gateway folder on your AltiWare OE CD-ROM.
2. In the Tapi_Server subfolder, run SETUP.EXE.

The service is started automatically. No configuration parameters need be set on the server.

To install TAPI Service Provider on the client system:

1. Locate the TAPI Gateway folder on your AltiWare OE CD-ROM.
2. In the Tapi_Client subfolder, run SETUP.EXE.
3. When prompted, enter the Server IP address, the client's Extension Number, and client's Password.

To test TAPI Service Provider on the client system:

1. Launch *Phone Dialer* from **Start > Programs > Accessories > Communication**.
2. Enter a number to call in the **Number to Dial** box and then click on **Dial**.

Your extension should ring. When you pick up the phone, the system will dial the number you entered and connect you. If this does not work, see "Changing TAPI Configuration Parameters".

Changing TAPI Configuration Parameters

To change TAPI Configuration Parameters:

1. *On Windows NT*, select **Start > Settings > Control Panel > Telephony**.
On Windows 2000, select to **Start > Settings > Control Panel > Phone and Modem Options**.
2. *On Windows NT*, click on the **Telephony Drivers** tab.
On Windows 2000, click on the **Advanced** tab.
3. Choose **AltiGen (TM) Communications Service Provider** and click **Configure**.
4. In the **AltiGen TAPI Device Detect** dialog box, click **Configure**.
5. In the **AltiGen TAPI Configuration** dialog box, click **Extension**.
6. Enter the extension number and password of the entry you want to change and click **Remove**.
7. Enter the extension number and password of an entry to add with new values and click **Add**.

Setting Up IP Extensions

IP extensions communicate with the AltiServ system using IP-based protocols to carry voice and signaling data. Instead of PSTN, they use a data networking connection such as an Ethernet 100-Base-T (RJ-45). AltiServ supports only those devices that are based on H.323 protocol.

From the end-user's perspective, an IP extension works exactly the same as an analog extension with the added advantage of being able to work remotely and without any cabling requirements. There is also no functional difference in AltiWare features and client applications such as real-time monitoring, AltiView, and AltiConsole, with the following exceptions which are unavailable on an IP extension:

- #81 Hands free–Intercom mode
- #82 (Hands free–Manual answer mode)
- Distinctive ringing (double ring for internal calls, single rings for external calls).

Note: For Alti-IP 600 Phones, #81 and #82 are supported.

In addition, the **Location** column in the **Extension View** in AltiAdmin will show the IP address used by any extension currently logged onto an IP extension.

AltiGen IP Phone Service

AltiGen IP Phone Service runs on the same system as AltiAdmin, is installed together with AltiAdmin, and connects to AltiAdmin through enhanced AltiLink+ protocol on behalf of AltiGen IP Phones.

Intercom with IP Phones

Intercom (#93) is supported on the Triton Analog extension with AltiTouch+ phones. Intercom is supported on IP extensions as well, provided AltiGen IP Phones are used. An extension user can use the feature code #93 to intercom an IP extension associated with an AltiGen IP Phone. If this phone is in idle state, an H.323 session will be established, the phone

speaker will be turned on automatically, a short ring tone is generated, the Speaker is turned on, and the voice path is connected. If the IP phone is busy, the caller will follow the call busy handling of the Altigen IP Phones' configuration.

IP Connections and Voice Quality

Voice quality can degrade when multiple IP connections use DSL; the exact numbers will depend on your bandwidth and the number of IP connections active at one time. If you encounter this problem, you may need to reduce the number of IP extensions.

System Requirements

Server

- AltiWare OE 4.5A or higher
- Triton VoIP board(s)—one VoIP port per simultaneous IP extension user is required.
- High-speed WAN connectivity to support remote users (minimum 64kbps per remote user)
- Static IP address assigned to each extension configured for an IP connection (recommended, but not required)

Client

- An Altigen-certified IP phone device (see “Clients” on page 16-4 for details)
- High-speed data connection to the Altiserv system (minimum 64kbps)

Configuration

You must configure AltiAdmin and, in some cases, your client hardware or software for using IP extensions.

AltiAdmin

1. Ensure that the VoIP settings are configured properly and work.

For details on configuring the Triton VoIP board and the IP trunks, refer to “Configuring the Triton VoIP Board” on page 6-7 and “Setting General Trunk Attributes” on page 7-3.

2. Ensure that you can make calls over IP by creating an entry (at least an entry with the IP address of the AltiServ system) in the IP dialing table and then dialing *<IP Trunk access code> + <IP dialing table entry code> + <extension number>*. Make sure you can have a two-way conversation on this VoIP call.

For details on using the IP dialing table, see “Defining an IP Dialing Table” on page 5-27. Also see “Setting VoIP Codecs” on page 8-11.

3. For each extension for which you are enabling IP extensions, check **Enable IP Extension** on the **General** tab of the **Extension Configuration** window.

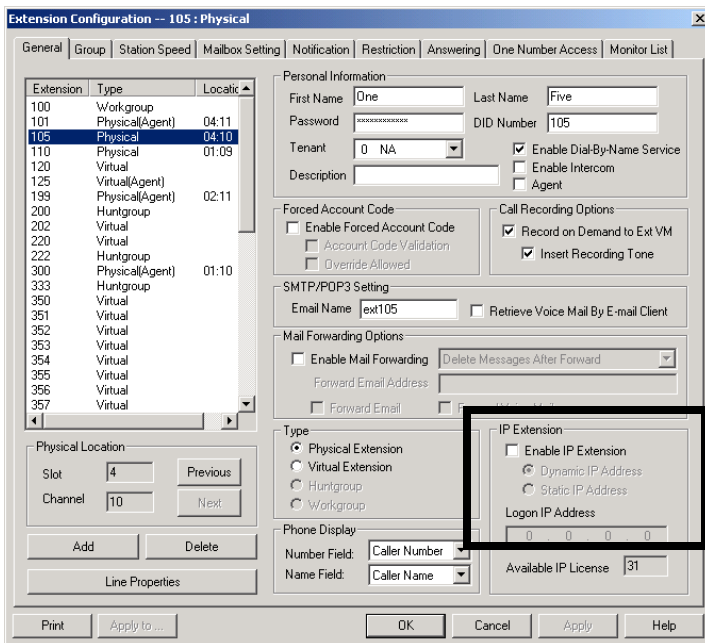


Figure 1. General Window, Extension Configuration

- a. If you have static IP addressing (recommended), choose **Static** and then enter the IP address of the IP phone in the **Logon** field.
- b. If you do not have static IP addressing available, choose **Dynamic**.

Note that dynamic IP addressing will show a *different* IP address in the **Location** column of the **Extension View** every time the extension user enables an IP extension.

Clients


Currently, AltiGen certifies the following IP phone/adaptor devices:

- AltiGen IP Phone
- Quicknet—PhoneJack™ PCI adapter and PhoneCard™ PCMCIA adapter with Internet SwitchBoard™ software
- Siemens HiNet LP5100 IP Phone
- Polycom® SoundPoint® 500 IP Phone
- AltiView integrated with NetMeeting

For details on configuring these devices, see the documentation that AltiGen provides with each.

AltiView Integrated with NetMeeting

AltiView provides an option called **IP Extension Integrated with NetMeeting** that allows it to use NetMeeting as the IP extension.

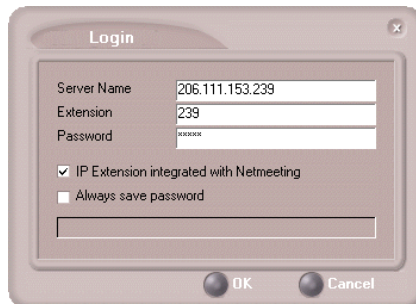

In addition to the AltiView software, the client requirements are as follows:

- **A sound card**

- **A headset** connected to the sound card (Plantronics LS1 recommended, available from retail outlets or from the Plantronics website at <http://www.plantronics.com/computer/ls1.html>).

A microphone and speakers should *not* be used, since the speaker's output would be fed back to the microphone and cause severe echoes.

- **NetMeeting 3.01**, which is automatically installed with Windows 2000. Users can check to see if NetMeeting is installed by looking under **Programs>Accessories>Communication** from the Windows **Start** button. If not, it is available for download from the Microsoft website at <http://www.microsoft.com/windows/netmeeting/download/default.asp>.
- **Additional system requirements** as listed on the Microsoft website at <http://www.microsoft.com/windows/NetMeeting/SystemRequirements/default.ASP>.

Note also that processor-intensive applications will affect voice quality.

Instructions on using this option are also provided in the *Altiview* and *Altiserv User Guide*.

Alti-IP 600 Phone Configuration

AltiWare OE supports the Alti-IP 600, AltiGen's H.323-compliant, business telephone that provides voice communication over an IP network.

To configure the Alti-IP 600 phone, select **AltiGen IP Phone Configuration** from the **Management** menu.

This opens the **AltiGen IP Phone Configuration** window where, after setting up an IP extension, you can set the following parameters for the IP extension:

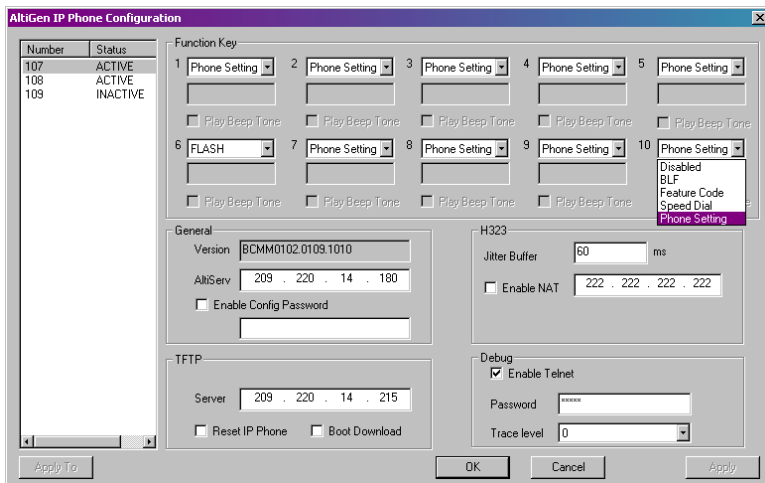


Figure 1. AltiGen IP Phone Configuration window, AltiGen IP Phone Configuration

The left side of the IP Phone Configuration window displays all the Alti-IP phone extensions that have been set up in the system. After creating the IP extensions, you can set the following parameters:

Parameter	Description
Soft Key 1 - 10	<p>Corresponds to the 10 soft keys on the Alti-IP 600. Use the drop down list to assign one of the following functions to the desired keys:</p> <ul style="list-style-type: none">• Disabled - when selected, the corresponding soft key cannot be used.• BLF (Busy Lamp Field) - when selected, enter an extension number in the field below; this will be associated with the corresponding soft key to automatically dial this extension number; the button light next to this soft key indicates that the extension number is busy. You can select the Play Beep Tone check box to also have the IP phone play an audible beep when the extension number is ringing.<p>Note: The BLF feature can only be assigned to <i>internal</i> extension numbers, not outside numbers.</p>• Feature Code - when selected, enter an AltiServ feature code in the field below; this will be associated with the corresponding soft key to dial this feature code.• Speed Dial - when selected, enter the speed dial code in the field below; this will be associated with the corresponding soft key to dial this speed dial code.• Phone Setting - when selected, the IP phone user will be able to program the corresponding soft key, as a speed dial or feature code key, directly from the IP phone (using * * 6, then ENTER). <p>Note: Upon initial installation, the lower left soft key is set up as FLASH by default. This key can be re-assigned in AltiAdmin, using the AltiGen IP Phone Configuration window. No other soft keys can be configured to FLASH. All other soft keys are initially defaulted to Phone Setting.</p>

Parameter	Description
General	<p>Allows you to specify the IP address of the AltiServ system the Alti-IP 600 phone is connected to. The version of software associated with AltiServ is automatically displayed in the Version field.</p> <p>To allow the extension user to have password-protected configuration functionality from the phone itself, check the Enable Config Password checkbox and assign a numerical password. When the extension user attempts to configure features, the user will need to enter the assigned password to proceed.</p>
H.323	<p>Allows you to set the Jitter Buffer in milliseconds, the delay used to buffer voice packets received from the IP network. The Jitter Buffer should be adjusted according to the WAN bandwidth allocated to data traffic.</p> <p>To allow NAT support for the IP extension, check the Enable NAT button and enter the public IP address of the NAT router.</p>
TFTP	<p>Allows you to assign the TFTP Server to which the IP phone can connect to for updating firmware when necessary. Enter the IP address of the TFTP Server in the Server field. Check the Reset IP Phone and Boot Download checkbox options to reset or reboot the phone, respectively.</p>
Debug	<p>When enabled, allows the Alti-IP 600 phone to connect to Telnet for debugging.</p>
Important:	<p>Please note that the configuration in AltiAdmin will override the Alti-IP 600 phone's local configuration after the IP Phone is registered. If the IP phone's local configuration is changed while in Basic mode, these changes will be overwritten by AltiAdmin settings. Also, after the IP Phone is successfully registered with AltiServ, the IP phone will overwrite the AltiWare IP address and network-related settings on the server.</p>
Important:	<p>When updating the Alti-IP 600 phone's firmware, it is recommended that administrators perform any updates after normal business hours or when the IP phone is not in use. If the Alti-IP 600 phone is in use during an update, the call will be disconnected.</p>

Apply To Button

The **Apply To** button works with the following parameters: **General**, **H.323**, **TFTP** (Server field only; **Reset IP Phone** and **Boot Download** options cannot be applied to multiple extensions), and **Debug**.

IP Extension Log In/Log Out

The feature codes **#26** (Extension Log Out) and **#27** (Extension Log In) are available on the Alti-IP 600. When the Alti-IP 600 phone is logged in using **#27 + ENTER**, the LCD will display the extension number. The Alti-IP 600 must be onhook for #26 and #27 to work.

Dialing an IP Number Directly from the Alti-IP 600

To dial an IP number directly from the Alti-IP 600 phone set, enter the IP address using the * key to enter periods followed by the # key.

Notes:

- This only works when the Alti-IP 600 is operating in basic mode.
- If the Alti-IP 600 is configured for a public IP address, you can call other public IP address devices.
- If the Alti-IP 600 is configured for a private IP address, you can call other private IP address devices that you can “see” or that are on your subnet.

CHAPTER 18

AltiWeb

AltiWare OE integrates VoIP, Auto Attendant, and Microsoft Internet Information Services (IIS) to provide the AltiWeb feature, which allows internet users to talk to an extension via VoIP and share web pages.

System Requirements

- **Client/Server System only:** AltiWare OE Release 4.6 running on Windows 2000 or Windows NT
- **Client System:** Microsoft Internet Explorer 5.5 or better, or Netscape 4.7 or better, NetMeeting 3.01, and Sound Card
- **Web Server:** Microsoft Internet Information Services (IIS) 4.0/5.0

AltiWeb Components

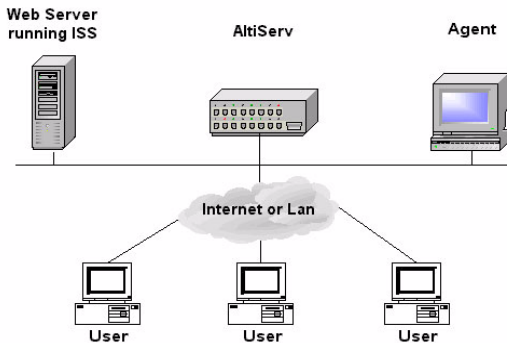


Figure 1. AltiWeb Component Overview

Installing AltiWeb

Make sure AltiWare OE Release 4.6 has been installed on the AltiServ system and the link to TCP/IP is enabled before continuing with CDR Search setup.

1. Log in to the client machine using a domain account and make sure it is connected to the network on which AltiServ is running.
2. Exit all Windows applications.
3. Insert the AltiWeb CD into the CD ROM drive of the IIS web server.
4. Run the Setup.exe program by selecting Start → Run and typing D:/Setup.exe, where D is the letter of your CD ROM drive. Follow the step-by-step installation instructions as they appear on the screen.
5. AltiWeb installs into the Home directory of the IIS server. To verify installation, start IIS, and select Default Web Site. The WebCall directory appears at the bottom of the directory, as shown below.

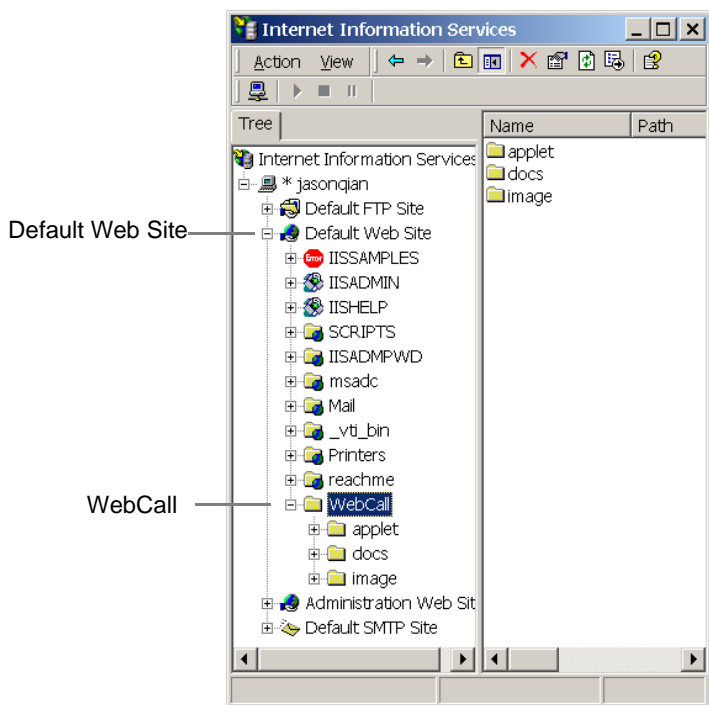


Figure 2. Logical AltiWeb installation in IIS

6. Verify the physical location of the AltiWeb directory by right-clicking the Default Web Site, and selecting Properties. On the Home Directory tab of the Properties dialog, the Local Path field shows AltiWeb's physical location on the drive (in this case C:\Inetpub\wwwroot\altweb).

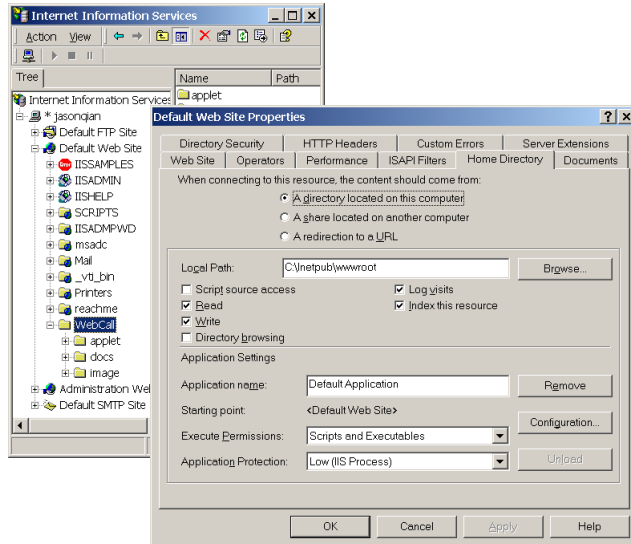


Figure 3. Local Path in IIS Properties dialog

AltiWeb Directory Structure

The AltiWeb directory contains the following subdirectories:

- **Applet**—Sample files you can use to set up AltiWeb. Refer to the following sections for details.
- **Docs**—Documentation on AltiWeb.
- **Images**—Graphics used in the html files residing in the Applet directory.

Applet Subdirectory Files

The Applet subdirectory contains sample pages you can use to set up Web Call, as well as files necessary for proper AltiWeb functioning.

- **Contact.htm**—Customer Information page for use with Auto Attendant
- **contactaltigen.htm**—Customer Information page for use without Auto Attendant
- **customerid.htm**—Page where caller enters customer ID
- **directory.htm**—Template for creating an in-house AltiWeb directory (for internal use only)
- **IVR_top.htm**—Frameset for top.htm and IVRApplet.htm
- **IVRApplet.htm**—Sends connected information to the main AltiWeb applet
- **NetMeeting.htm**—Error message indicating NetMeeting not found and providing opportunity to download
- **Nsapplet.zip**—Contains files necessary for the proper functioning of AltiWeb (Do not modify this file.)
- **Nsplugin.zip**—Contains files necessary for the proper functioning of AltiWeb (Do not modify this file.)
- **productid.htm**—Page where caller enters product ID
- **sales_cid.htm**—Frameset for customerid.htm
- **sales_pid.htm**—Frameset for productid.htm
- **Top.htm**—Collects caller input and sends the result to the next IVRApplet.htm
- **AltiWeb.cab**—Contains files necessary for the proper functioning of AltiWeb (Do not modify this file.)
- **AltiWeb.htm**—Page displaying AltiWeb window
- **AltiWeb.js**—JavaScript file necessary for the proper functioning of AltiWeb
- **Wizard.htm**—Error message advising caller to run the initial configuration for NetMeeting

Collecting Form Data, IVR Data, and URL History

You can configure AltiWeb to display Form Data, IVR Data, and URL History when a web call is answered by an extension with the AltiAgent application.

The IVR data comes from the Auto Attendant/Collect

The Form Data come from the <form name=infoForm> fields in the source code of Contact.htm or Contactaltigen.htm

The URL History shows all URL paths to tagged html pages the caller visited prior to the call.

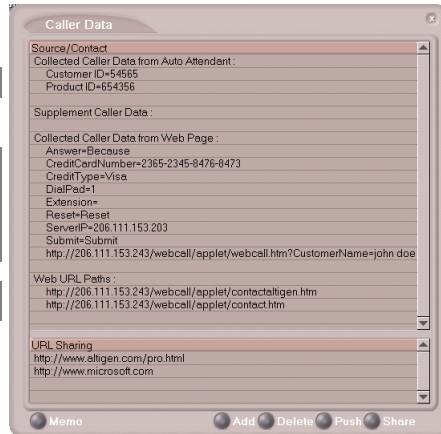


Figure 4. Caller Data window in AltiAgent

Tagging Pages for URL History

To appear in the URL history, the pages the caller visits prior to the call must be tagged, as shown below:

```
<head>
<script language="JavaScript" src="altweb.js"></script>
<script language="JavaScript">
tagURL(location.href)
</script>
</head>
```

For more information on configuring:

- **IVR Data:** Refer to “Configuring Auto Attendant for Scenario 2” on page 18-16.
- **Form Data:** “Customizing Contactaltigen.htm” on page 18-9 or “Customizing Contact.htm” on page 18-14.

Scenario 1—Caller Data from Web Page

The following scenario, based on `contactaltigen.htm`, exemplifies the simplest implementation of AltiWeb.

1. A web caller browses the company web site and has a question regarding some product information.
2. The web caller clicks the "contact us" link on the web page. The Customer Information page (`contactaltigen.htm`) opens.

Customer Information

Note: Please make sure you have NetMeeting 3.01 installed and used it at least once before.

If you use WIN95, please start NetMeeting before submit this page.

First Name	<input type="text" value="john"/>
Last Name	<input type="text" value="doe"/>
Company Name	<input type="text" value="AltiGen"/>
Email Address	<input type="text" value="jdoe@altigen.com"/>
Phone Number	<input type="text" value="5102523556"/>
Fax Number	<input type="text" value="5102524543"/>

Figure 5. *Contactaltigen.htm* page

3. The web caller enters the required information, then clicks the Submit button. The AltiWeb window (altiweb.htm) appears.

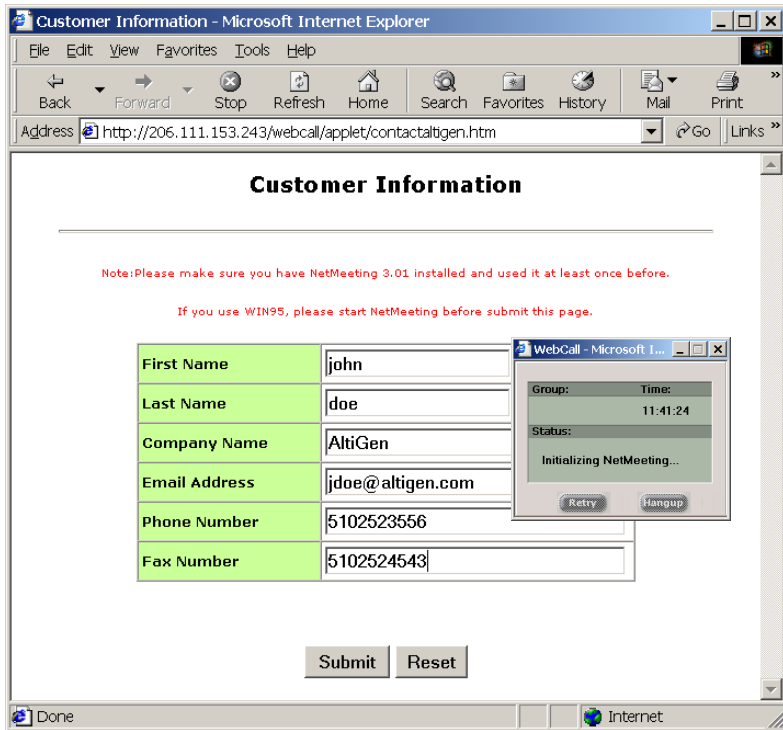


Figure 6. The AltiWeb window

Note: If NetMeeting is not installed on the caller's computer (or it's not configured correctly), an error message displays.

Note: This scenario directly dials a preset extension. You can also set the AltiWeb window to display a DialPad the caller can use to dial any extension. For details, refer to "Customizing Contactaltigen.htm" on page 18-9.

4. Once NetMeeting successfully connects to an AltiGen VoIP port, the web caller is routed to the proper extension.

5. If the call goes to an AltAgent user, the Caller Data window shows the Form Data and URL history.

Caller Data

Source/Contact
Collected Caller Data from Auto Attendant :

Supplement Caller Data :

Collected Caller Data from Web Page :
CompanyName=Altigen
DialPad=0
EmailAddress=jdoe@altigen.com
Extension=1000
FaxNumber=5102524543
FirstName=john
LastName=doe
PhoneNumber=5102523556
Reset=Reset
Submit=Submit
http://206.111.153.243/webcall/applet/webcall.htm?ServerIP=206.111.153.2

Web URL Paths :
http://206.111.153.243/webcall/applet/contactaltigen.htm
http://206.111.153.243/webcall/applet/contact.htm
http://206.111.153.243/webcall/applet/contactaltigen.htm

URL Sharing
http://www.altigen.com/pro.html
http://www.microsoft.com

Memo Add Delete Push Share

Figure 7. Caller Data window in AltAgent

6. From this point, in addition to voice communication, the agent can push and share web pages with the caller. For procedures, refer to the section on “Viewing, Sharing, or Pushing Data” in the AltClient Manual.

Customizing Contactaltigen.htm

You can use the Contactaltigen.htm page to collect caller information, and automatically direct the call to a specific extension. This collected information is then displayed on the agent's screen.

To alter form data:

Using Notepad or another html editor, modify Contactaltigen.htm source code as follows:

1. Change the ServerIP.

Set the value of the ServerIP to the IP address of the server on which AltiWare resides.

```
<input type="hidden" name="ServerIP" value="206.111.153.203">
```

2. Set DialPad visibility.

By default, the code is set to hide the Dial Pad (value = "0") and to dial a specific number (value = "300"). To show the Dial pad, change the values as shown below:

Show DialPad, Let Caller Dial Extension

```
<input type="hidden" name="Extension" value=""><input  
type="hidden" name="DialPad" value="1">
```

Hide DialPad, Autoconnect to Extension 300

```
<input type="hidden" name="Extension" value="300"><input  
type="hidden" name="DialPad" value="0">
```

3. Alter the data collection fields.

Shown below is the form row that collects the caller's first name. Copy, modify, or delete variables to your company's specifications.

```
<tr>  
  <td width="240" bgcolor="#CCFF99"><font size="2"  
    face="Verdana"><b>First Name&nbsp;</b></font></td>  
  <td width="282"><font face="Verdana"><input  
    type="text" size="20" maxlength="40" name="FirstName"  
    tabindex="1"> &nbsp;&nbsp;&nbsp;</font></td>  
</tr>
```

Scenario 2—Caller Data from Auto Attendant

The following scenario, based on contact.htm, exemplifies a customized implementation of AltıWeb.

1. A web caller browses the company web site and has a question regarding some product information.
2. The web caller clicks the "contact us" link on the web page. The Customer Information page (contact.htm) opens.

Customer Information

Customer Name john doe

Credit Card Visa 2365-2345-8476-8473

We sell goods to smart people only.
You can buy from us only if you can answer this question.

Question
Cockroach asks Caterpillar to go out and buy some flowers to decorate the room. 3 hours passed and Caterpillar hasn't come back. **Why?**

Answer Because

Note: Please make sure you have NetMeeting 3.01 installed and used it at least once before.
If you use WIN95, please start NetMeeting before submit this page.

Submit **Reset**

Figure 8. Contact.htm page

3. The web caller enters the required information, then clicks the Submit button. The AltiWeb window (altiweb.htm) appears.

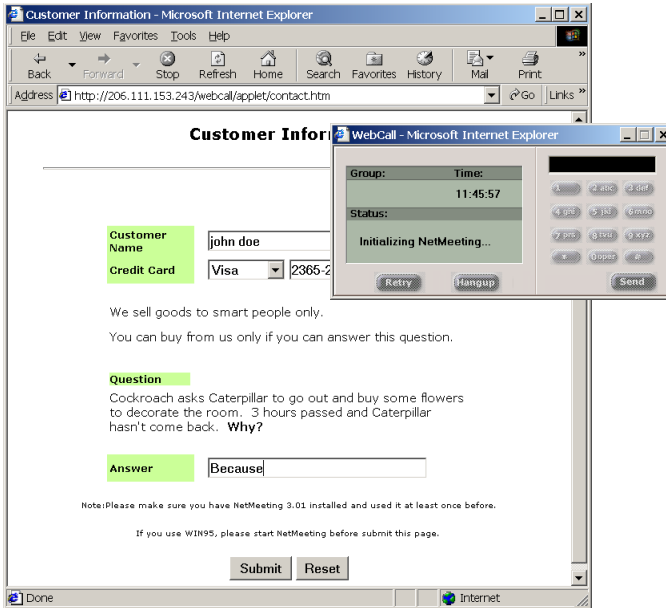


Figure 9. AltiWeb window with DialPad visible


Note: If NetMeeting is not installed on the caller's computer (or it's not configured correctly), an error message displays.

4. Once NetMeeting successfully connects to an AltiGen VoIP port, the web caller sees the Customer Support page, and hears a prompt requesting the selection of Sales or Tech support.



Note: The DialPad is visible to allow the web caller to close the Auto Attendant windows and dial a number directly, if so desired.


5. The caller selects Sales, and the Customer ID window (customerid.htm) appears.

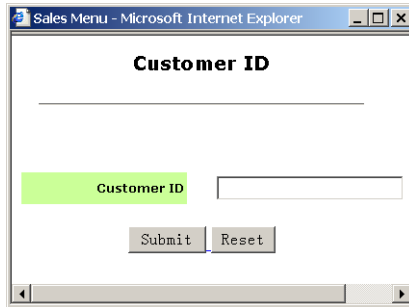

The screenshot shows a web browser window titled "Sales Menu - Microsoft Internet Explorer". The page content is titled "Customer ID" in bold. Below the title is a horizontal line. Further down, there is a green rectangular label "Customer ID" followed by a text input field. Below the input field are two buttons: "Submit" and "Reset".

Figure 10. Customer ID window

6. Once the caller enters the customer ID and clicks Submit, the Product ID window (productid.htm) appears.

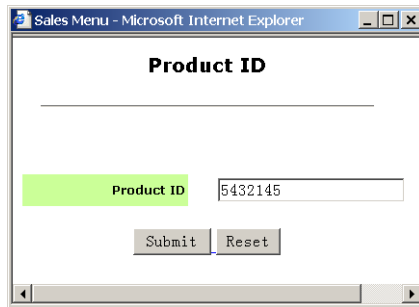

The screenshot shows a web browser window titled "Sales Menu - Microsoft Internet Explorer". The page content is titled "Product ID" in bold. Below the title is a horizontal line. Further down, there is a green rectangular label "Product ID" followed by a text input field containing the value "5432145". Below the input field are two buttons: "Submit" and "Reset".

Figure 11. Product ID window

7. After the caller enters the product ID and clicks Submit, the web caller is routed to the proper extension.

8. If the call goes to an AltiAgent user, the Caller Data window shows Form data, IVR data, and URL history.

Caller Data	
Source/Contact	
Collected Caller Data from Auto Attendant :	
Customer ID=	54565
Product ID=	654356
Supplement Caller Data :	
Collected Caller Data from Web Page :	
Answer=	Because
CreditCardNumber=	2365-2345-8476-8473
CreditType=	Visa
DialPad=	1
Extension=	
Reset=	Reset
ServerIP=	206.111.153.203
Submit=	Submit
http://206.111.153.243/webcall/applet/webcall.htm?CustomerName=john d	
Web URL Paths :	
http://206.111.153.243/webcall/applet/contactaltigen.htm	
http://206.111.153.243/webcall/applet/contact.htm	
URL Sharing	
http://www.altigen.com/pro.html	
http://www.microsoft.com	

Memo Add Delete Push Share

Figure 12. Caller Data window in AltiAgent

9. From this point, in addition to voice communication, the agent and caller can share web pages. For procedures, refer to the section on “Viewing, Sharing, or Pushing Data” in the AltiClient manual.

Customizing Contact.htm

You can use the Contact.htm page to collect caller information, and then automatically direct the call to a specific extension. This caller information is then displayed on the agent's screen.

To alter form data:

Using Notepad or another html editor, modify Contact.htm source code as follows:

1. Change the ServerIP.

Set the value of the ServerIP to the IP address of the server on which AltWare resides.

```
<input type="hidden" name="ServerIP" value="206.111.153.203">
```

2. Set DialPad visibility.

By default, the code in contact.htm is set to show the Dial Pad (value = "1") and not to dial a specific number (value = ""). To hide the DialPad, change the values as shown below:

Hide DialPad, Autoconnect to Extension 300

```
<input type="hidden" name="Extension" value="300"><input  
type="hidden" name="DialPad" value="0">
```

Show DialPad, Let Caller Dial Extension

```
<input type="hidden" name="Extension" value=""><input  
type="hidden" name="DialPad" value="1">
```

3. Alter the data collection fields.

Shown below is the form row that collects the caller's full name.

Copy, modify, or delete variables to your company's specifications.

```
<tr>  
  <td align="left" width="128" bgcolor="#CCFF99">  
    <b><small><font face="Verdana">Customer Name&nbsp;</font></small></b></td>  
  <td width=22 align=left></td>  
  <td align=left width=282>
```

```
<font face=Verdana>
  <input type="text" name="CustomerName" maxlength=40 size=20
tabindex=1> &nbsp;&nbsp;&nbsp;</font></td>
</tr>
```

Configuring Auto Attendant for Scenario 2

Scenario 2 demonstrates how to use Auto Attendant in conjunction with AltıWeb. For example, when the web caller clicks the Submit button (1), Web Call connects and the Customer Support page appears. When the customer clicks Sales (2), the Customer ID (3) and Product ID (4) pages follow before the caller is put through.

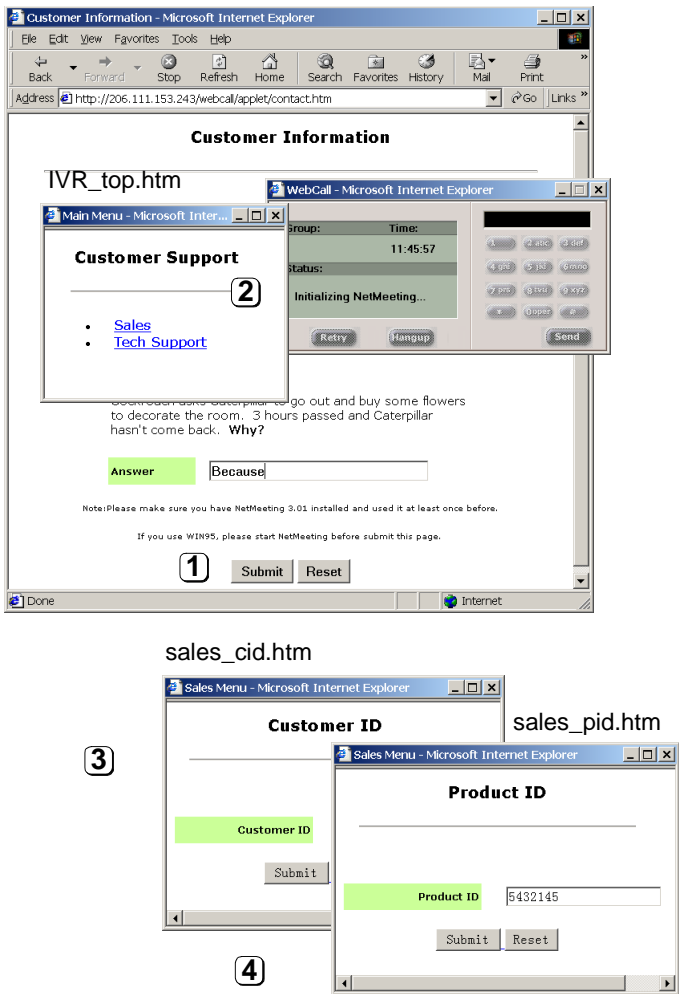


Figure 13. Using Auto Attendant to push pages to the caller

Configuring Auto Attendant

Note: For detailed instructions, refer to *Chapter 10, Auto Attendant Configuration*.

1. Run Auto Attendant.
2. Select 0-expand tree.

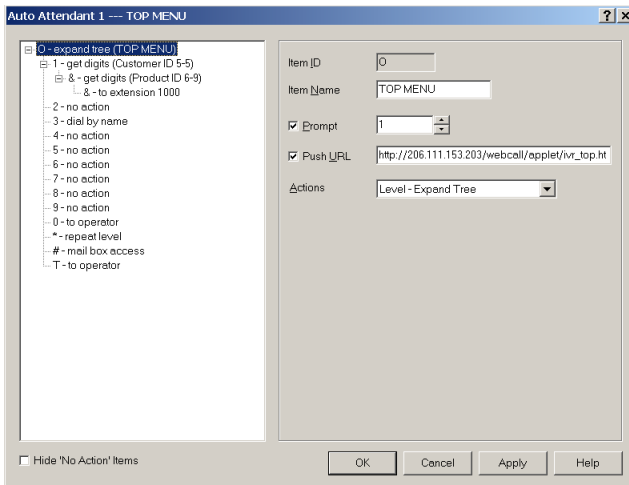


Figure 14. "0 - expand tree" window

3. Make the following entries, then click Apply.
 - Type an Item Name, if desired.
 - To assign a voice message, check Prompt and select the number of the appropriate message.
 - Check Push URL, and type the path of the page you want to display.
 - Select Level-Expand Tree in the Actions dropdown.

4. Select 1-get digits.

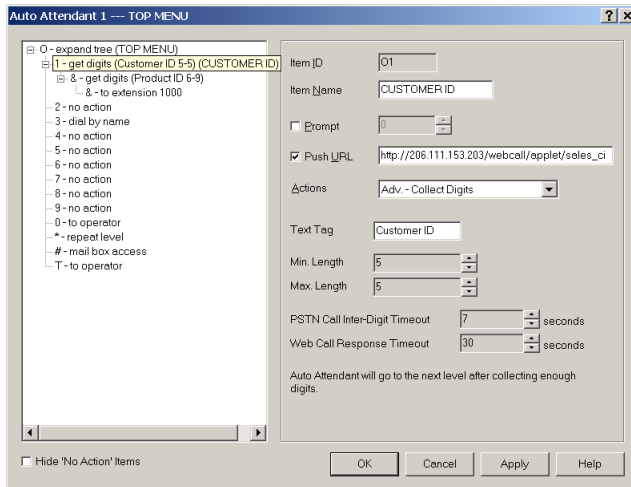


Figure 15. "1-get digits" window

5. Make the following entries, and click Apply.
- Type an Item Name, if desired.
 - Check Push URL, and type the path of the page you want to display (e.g., sales_cid.htm).
 - Select Adv.- Collect Digits from the Actions dropdown.
 - Set the Min. and Max. Lengths that the caller must enter.
 - Adjust the Web Call Response Timeout to give the web caller enough time to provide all meaningful information.

6. Select &-get digits.

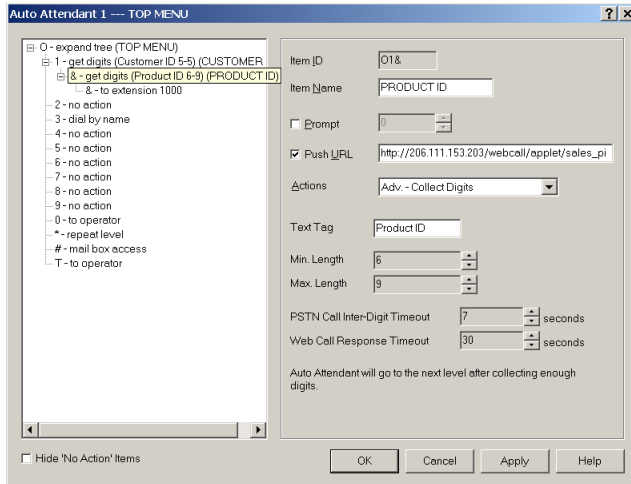


Figure 16. "& - get digits" window

7. Make the following entries, then click Apply.

- Type an Item Name, if desired.
- Check Push URL, and type the path of the page you want to display (e.g., sales_pid.htm).
- Select Adv. - Collect Digits from the Actions dropdown.
- Set the Min. and Max. Lengths that the caller must enter.
- Adjust the Web Call Response Timeout to give the web caller enough time to provide all meaningful information.

8. Select &-to extension.

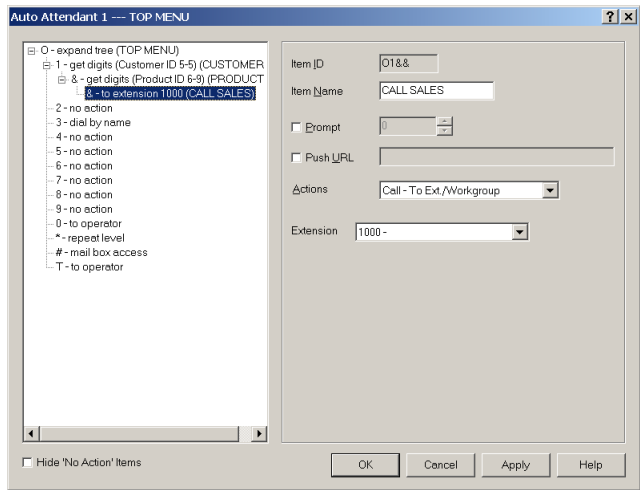


Figure 17. "& - to extension" window

9. Make the following entries, then click OK.
- Type an Item Name, if desired.
 - Select Call - To Ext/Workgroup from the Actions dropdown.
 - Select the Extension.

Troubleshooting

If a web caller cannot connect and an error message displays, the cause may be one of the following:

Error Message	Cause
Server connection failed. Please try again later.	<ul style="list-style-type: none">• AltiServ IP address is not correct• AltiServ is not running• Firewall is not open
No more available sessions. Please try again later.	<ul style="list-style-type: none">• All session licenses are used or there are no session licenses at all.

Uninstalling AltiWeb

1. From the Windows Start menu, select Programs → AltiWeb 4.6 → Uninstall AltiWeb 4.6.
2. Click OK when the dialog box asks if you want to uninstall the program, and respond to any additional prompts.

Alternatively

1. In the Control Panel, select Add/Remove Programs.
2. Choose AltiWeb 4.6 and click the Add/Remove or Change/Remove button, depending on which version of Windows you're running.
3. Click OK in the dialog box to confirm you want to remove the service, and respond to any additional prompts.

AltiWeb Security

AltiWeb (and AltiReach) uses Microsoft IIS as a web server, which poses web server security issues common to all Microsoft users. AltiGen recommends the following basics steps to protecting AltiWare from antiviruses and worms:

- Update your virus definition every day
- Enable real-time scan and exclude AltiServ and PostOffice folders
- Schedule Daily Full Scan

Computer viruses can penetrate a PC in many ways, network shares, emails, OS security holes, and more. Here are some common practices to follow. If necessary, open shares for READ ONLY. Monitor Microsoft security bulletins for updates. Open only the necessary ports on your firewall.


Symantec Norton AntiVirus Corporate Edition 7.5

Update your virus definition every day

For a Corporate Edition version, administrators can receive updates from either a dedicated local server or the Symantec LiveUpdate web site. Please refer to Norton Administration menu on how to set up a dedicated local server.

To receive updates from the Symantec LiveUpdate web site

1. Click on File menu and choose schedule updates
2. Check enable scheduled automatic updates and click Schedule button
3. Set it for Daily at 8:00 PM

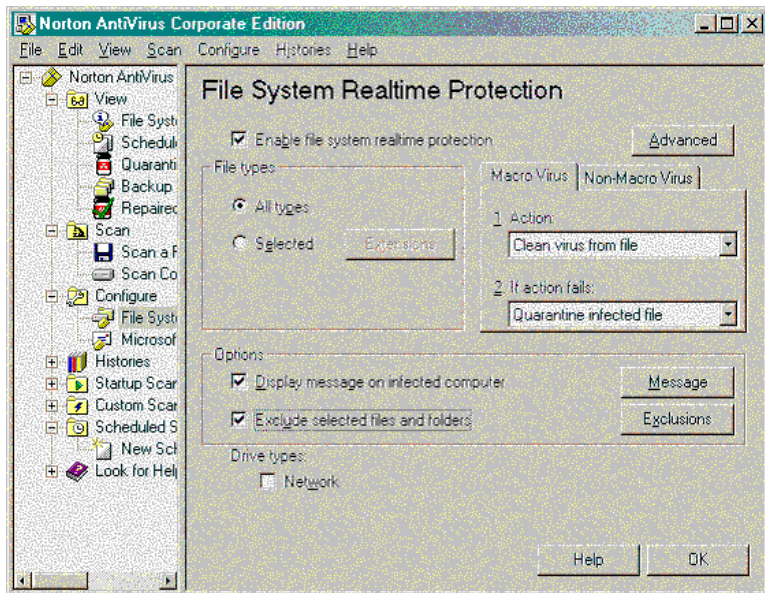

To receive updates on the fly, Click on File menu and choose LiveUpdate and get the latest virus definition.

Enable Real-Time scan

1. Click on Configuration menu and choose File System Realtime Protection
2. Check Enable File System Realtime Protection
3. Choose All Files for File Types
4. Check Display message on infected computer
5. (optional) Click Advanced button and bring up advanced options
6. (optional) Uncheck backup files before attempting repair if your system disk space is small.

7. Check Exclude selected files and folders and click Exclusions button
8. Enable Check file for exclusion before scanning and click Files/
Folders button
9. Find and check Altiserv and Postoffice folders and click OK

Schedule Daily Full Scan on all drives

1. Choose Edit menu and New Scheduled Scan
2. Edit the job name, ex, Daily Full Scan. Click Next
3. Set the frequency as Daily 9:00 PM and click Next
4. Check all the local hard drives and click Options
5. Choose All Files for File Types and set the CPU utilization for 50%
6. Click OK and Save

Now you have set it for daily scan for all files on your hard drives.

Tools

AltiWare OE comes with the following tools for testing, diagnosing and configuring your system:

- Configuration Reader
- Extension Checker
- MVIP Test Tool
- AltiDBReader
- DINA Manager

Configuration Reader

Configuration Reader is a tool that creates a subdirectory in \altiserv\EXE\AltiWareHtml\ of html files showing details of your AltiWare configuration. Another file, altigen_rc.dat, summarizes all this information and can be sent to your dealer or to AltiGen Tech Support if you have problems.

To use Configuration Reader:

1. Launch Configuration Reader from AltiWare>AltiWare Tools on the Windows Start button.

A DOS window opens, indicating the progress of Configuration Reader.

2. When the status window is complete, you can press **Y** to view the html files showing your configuration.

Columns across the top of the opening page let you view statistics on different components of your configuration.

Extension Checker

Extension Checker is a tool checks the security status of every extension in your AltiWare system.

Extension Checker

Generally, an extension is considered secure if its password meets the following conditions:

- contains 4-8 digits
- different from extension
- different from default system password
- does not consist of consecutive numbers
- does not consist of a repetition of the same digit

Security characteristics of each extension are detailed in the application window itself.

To use Extension Checker:

1. Launch Extension Checker from AltWare>AltWare Tools on the Windows Start button.
2. Select the security characteristics you want to check in the **Show** field group, described below.

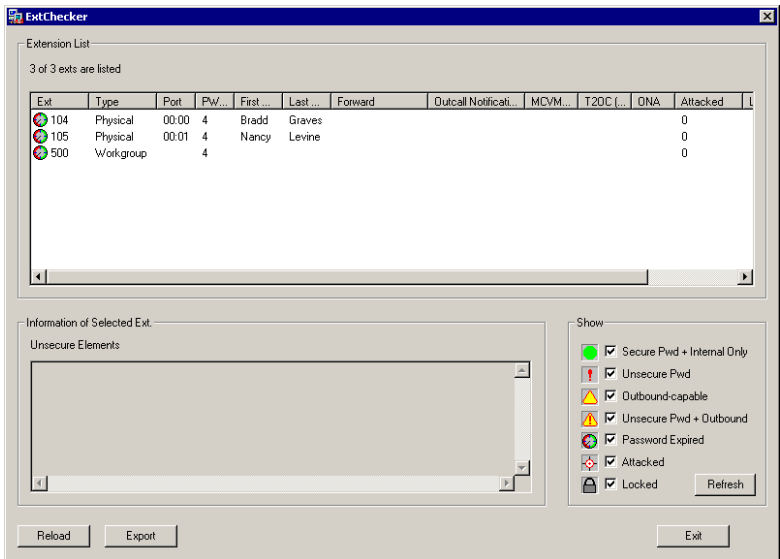


Figure 1. Extension Checker

Status	Description
Secure Pwd + Internal Only	Has secure password and cannot make outbound trunk calls
Unsecure Pwd	Password has unsecure elements described in Unsecure Elements window
Outbound-capable	Can make outbound trunk calls
Unsecure Pwd + Outbound	Password has unsecure elements described in Unsecure Elements window AND can make outbound trunk calls
Password Expired	Password is expired
Attacked	8 consecutive false password attempts have been made
Locked	Extension has been locked by system due to attack or by System Administrator

- Click **Refresh**. Extensions with the selected insecure characteristics will appear in the Extension List.
- Make changes or advise extension user(s) to make changes.
 - Right-click commands** for each extension in the Extension List let you send the following changes to AltiWare:
 - lock the extension
 - unlock the extension
 - force the user to change the password
 - clear an attack record
- After changes have been made (for example in AltiAdmin, AltiView, or with right-click commands described above), click **Reload** to fetch the new settings from AltiWare.
Security characteristics for extensions you select in the Extension List display in the Unsecure Elements window.
- (Optional) Click **Export** to export the data in the Extension List to a text file.

MVIP Test Tool

The MVIP Test Tool is a tool that detects one-way connection, cross talk, bad MVIP cable and static noise problems.

To run MVIP Test Tool:


1. Stop AltiGen Switching Services before running this utility.
2. Launch MVIP Test Tool from AltiWare>AltiWare Tools on the Windows Start button.
3. Click **Start** to begin test.
4. If the MVIP Test encounters an error, click **Yes** or **No** to view the error report.
5. At the end of the test, the utility will provide pass or fail results.

AltiDBReader


AltiDBReader is a tool that allows you to view and export historical CDR data and Workgroup Statistics. You can also convert 4.0/4.0a CDR files (icc_cdr.dbf) for viewing in AltiDBReader.

To use AltiDBReader:

1. Launch AltiDBReader from AltiWare>AltiWare Tools from the Windows Start button.
2. When launched, AltiDBReader automatically finds and displays DB files from the AltiDB folder into three folder directories (CDR 4.0, CDR and WG Statistics) on the left side of the window.

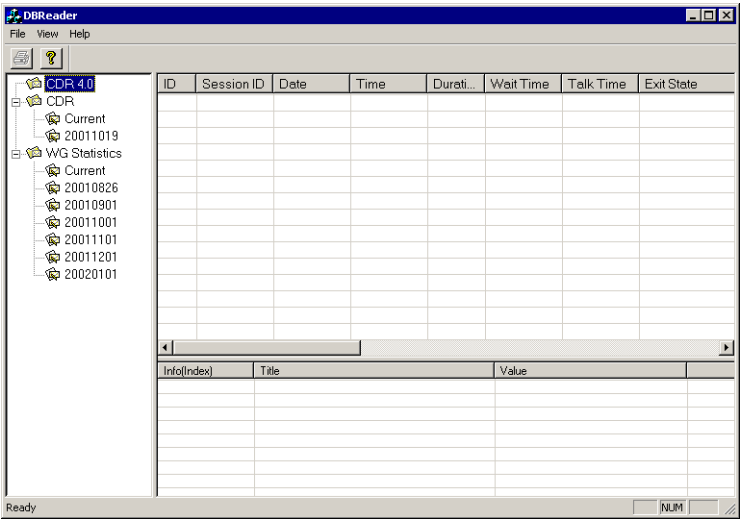


- 3. Search a particular DB folder by clicking the mouse cursor on the folder, then **right-click** to open a Search window to perform the search on the DB folder.

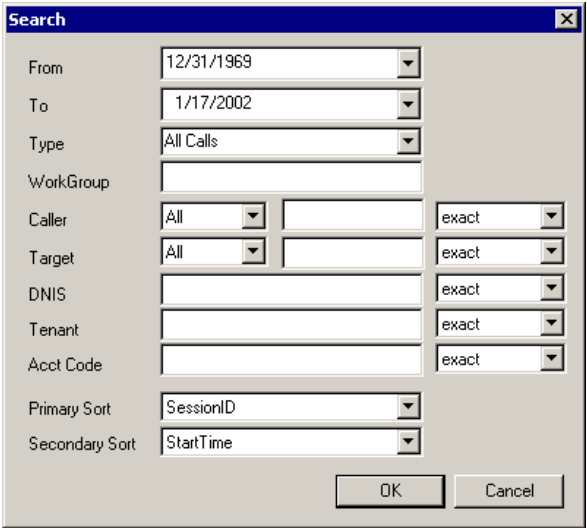

For **CDR** DB searches, the Search window allows the following search parameters:

- **From** - sets the desired start date to begin the search
- **To** - sets the desired end date to end the search
- **Type** - specifies the call type to search: *All Calls, Answered Calls & Messages, Answered Calls, Messages, Unanswered Calls, Messages, Unanswered Calls, All Trunks Busy, Agent Login/out*
- **Workgroup** - allows user to specify workgroup number to search
- **Caller** - specifies the caller as *All, Extension* or *Trunk*; to further specify this search field, you may add matching digits in the empty field and set to an *exact, like* or *pat* (pattern) match.
- **Target** - specifies the caller as *All, Extension* or *Trunk*; to further specify the search this search field, you may add matching digits in the empty field and set to an *exact, like* or *pat* (pattern) match.
- **DNIS** - to further specify the search this search field, you may add matching digits in the empty field and set to an *exact, like* or *pat* (pattern) match.
- **Tenant** - to further specify the search this search field, you may add matching digits in the empty field and set to an *exact, like* or *pat* (pattern) match.
- **Acct Code** - to further specify the search this search field, you may add matching digits in the empty field and set to an *exact, like* or *pat* (pattern) match.
- **Primary Sort** - specifies the first sorting category the search results will be put into; select: *Session ID, StartTime, CallerNum, CallerName, TargetNum, TargetName, AccountCode, DNIS* or *ExitState*.
- **Secondary Sort** - specifies the second sorting category the search results will be put into; select: *Session ID, StartTime, CallerNum, CallerName, TargetNum, TargetName, AccountCode, DNIS* or *ExitState*.

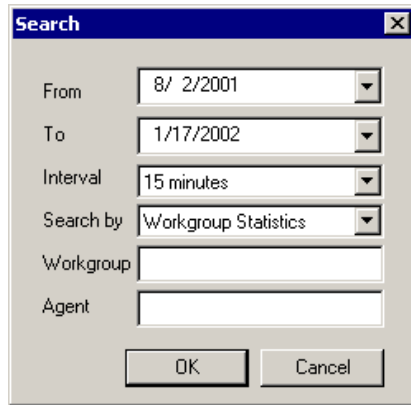

For **Workgroup** DB searches, the Search window allows the following search parameters:

- **From** - sets the desired start date to begin the search
 - **To** - sets the desired end date to end the search
 - **Interval** - specifies the search interval; select *15 minutes*, *1 hour*, or *1 day*.
 - **Search by** - specifies the type of workgroup search; select *Workgroup Statistics*, *Agent Statistics per Workgroup*, or *Agent Statistics*.
 - **Workgroup** -specifies the workgroup number
 - **Agent** - specifies the agent number
4. Select the desired search parameters and click **OK**.
 5. The search results appear in the fields on the right side of the main window.

The screenshot shows the AltIDBReader application window. On the left is a tree view with folders: CDR 4.0, CDR, Current, 20020103 (selected), WG Statistics, Current, and 20020104. The main area displays a table of call records with columns: ID, Session ID, Date, Time, Duration, Wait Time, Talk Time, Exit State, and Caller ID. Below this is a detailed view of the selected record (ID 3) with columns: Info(Index), Title, and Value.

ID	Session ID	Date	Time	Duration	Wait Time	Talk Time	Exit State	Caller ID
1	10089636...	12/21/01	11:40:47	00:00:18	00:00:06	00:00:12	CONNECT	315
2	10089636...	12/21/01	11:40:46	00:00:20	00:00:07	00:00:13	CONNECT	510252632
3	10089636...	12/21/01	11:46:46	00:00:06	00:00:06	00:00:00	RING NO ANSW...	TRK0800
4	10089636...	12/21/01	11:49:41	00:00:03	00:00:03	00:00:00	RING NO ANSW...	310
5	10089636...	12/21/01	11:54:02	00:01:09	00:00:07	00:01:02	CONNECT	300
6	10089636...	12/21/01	11:55:30	00:00:10	00:00:06	00:00:04	CONNECT	300
7	10089636...	12/21/01	12:00:43	00:00:01	00:00:01	00:00:00	RING NO ANSW...	UNKNOWN
8	10089636...	12/21/01	12:00:43	00:00:01	00:00:01	00:00:00	RING NO ANSW...	UNKNOWN
9	10089636...	12/21/01	12:00:43	00:00:01	00:00:01	00:00:00	RING NO ANSW...	UNKNOWN
10	10089636...	12/21/01	12:00:43	00:00:01	00:00:01	00:00:00	RING NO ANSW...	UNKNOWN
11	10089636...	12/21/01	12:00:43	00:00:01	00:00:01	00:00:00	RING NO ANSW...	UNKNOWN
12	10089636...	12/21/01	12:00:43	00:00:02	00:00:02	00:00:00	RING NO ANSW...	UNKNOWN
13	10089636...	12/21/01	12:00:43	00:00:01	00:00:01	00:00:00	RING NO ANSW...	UNKNOWN
14	10089636...	12/21/01	12:00:43	00:00:01	00:00:01	00:00:00	RING NO ANSW...	UNKNOWN
15	10089636...	12/21/01	12:00:43	00:00:01	00:00:01	00:00:00	RING NO ANSW...	UNKNOWN
16	10089636...	12/21/01	12:00:43	00:00:01	00:00:01	00:00:00	RING NO ANSW...	UNKNOWN
17	10089636...	12/21/01	12:00:43	00:00:01	00:00:01	00:00:00	RING NO ANSW...	UNKNOWN

Info(Index)	Title	Value
General	Node ID	3
	Session ID	1008963645
	Internal Call	0
	Direction	OUTBOUND
	Start Time	12/21/01 11:40:47
	End Time	12/21/01 11:41:05
	Duration	00:00:18
	Caller Type	ANALOG
	Caller Pad	0011
	Caller ID	315

- To delete a DB folder, right-click on any DB folder (except “Current”) and select **Delete DB**.

To Show/Export/Print Search Results Data:

- To print the search results data, select the desired DB folder and click the **Print** button.
- To show **Advanced Call Info** or **Call Info**, right click on any data field and scroll to the desired option.
- To export the search results data as a .CSV file, right-click on any data field and select **Export**.

To Convert 4.0 or 4.0a DB files:

- Select and highlight a DB folder from the CDR 4.0 directory.
- Go to File>Convert Old DB.
- The converted 4.0/4.0a file appears in the DBReader window fields.

DINA Manager

DINA Manager is GUI-based tool designed to help a customer configure several distributed AltiWare systems synchronously to work as just one AltiWare system. The tool can be run on any server, local or remote to an AltiWare system, which has a connection for access to all the servers that are desired to be managed. The tool respects the individual password protection by checking password access to each of the servers that are desired to be managed before connecting to them. The tool will synchronize extensions and workgroup pilot numbers. It can complete the functions below for multiple systems from a single location and session:

- Create virtual extensions with the correct forwarding parameters for multiple servers for specific extensions desired to be managed.
- Synchronize the extensions with same number in all systems so that all calls to the extension will be presented to the appropriate AltiWare system.
- Synchronize the extensions with same number in all systems so that all voice mails to the extension will be presented to the appropriate AltiWare system.
- Delete extensions from multiple systems.
- Requires 4.5/4.6 software

Note: Refer to DINA Manager Help file for usage instructions.

CHAPTER 20

Basic Call Router & Call Router Advanced

Basic Call Router

Basic Call Router is a call-handling tool included with AltWare OE software. Basic Call Router uses the AltAdmin Auto Attendant and the AltAPI Data Directed Routing (DDR) features to match incoming trunk call data against existing customer records that you build using the Basic Call Router GUI. Calls can be intelligently routed before they are answered, based on Basic Call Router's routing "rules."

Note: The workgroup to which incoming trunk calls will be routed via Call Router must be assigned to the Auto Attendant whose Action is set to "Avd - Data Directed Routing, with **Application** set to the virtual extension you use to start Call Router. For further information on configuring Auto Attendants, refer to *Chapter 10, Auto Attendant Configuration* and the *AltAPI Programmer Guide*.


To Install Basic Call Router:

Run Call Router, select the Basic Call Router and click **Next**. Setup will confirm the destination for the Call Router application (default is C:\Program Files\AltGen\Call Router). Click **Next** to proceed. To select a different location, use the **Browse** button to choose the new destination.


Note: **Call Router Advanced** Service requires the purchase and activation of the Call Router Advanced license.

To Configure/Run Basic Call Router:

1. Launch Call Router from Start>Programs.

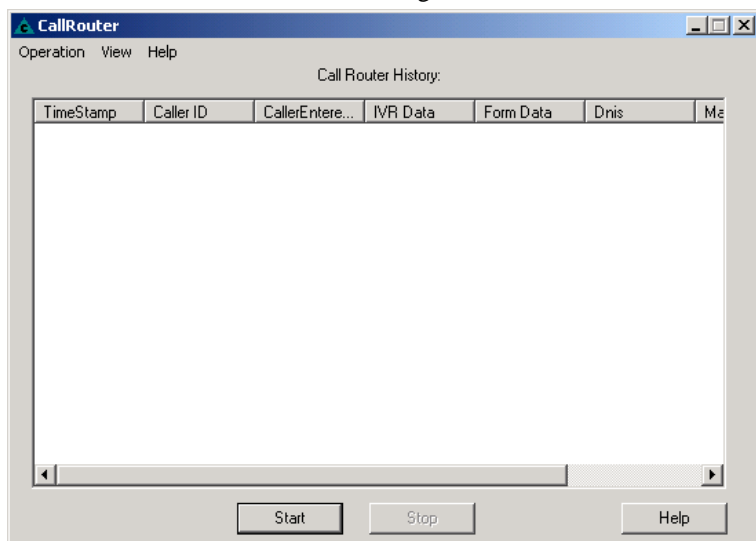


2. Select **Operation>Preference**.

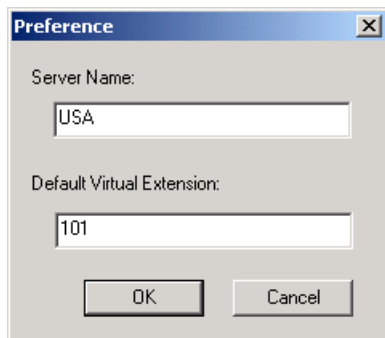

3. In the **Preference** window, enter the **Server Name** and **Default Virtual Extension** that Call Router will connect to, then click **OK**.
4. Click **Start** to run Basic Call Router. Then, enter the default virtual extension password. When Basic Call Router is stopped, you can create customer records and configure the server and login information.

Basic Call Router Customer Records

To create customer records that will be used to route calls, select **Operation>Customer Record** to open the **Custom Record List** window. This window also allows you to view existing customer records, and modify/delete customer records.

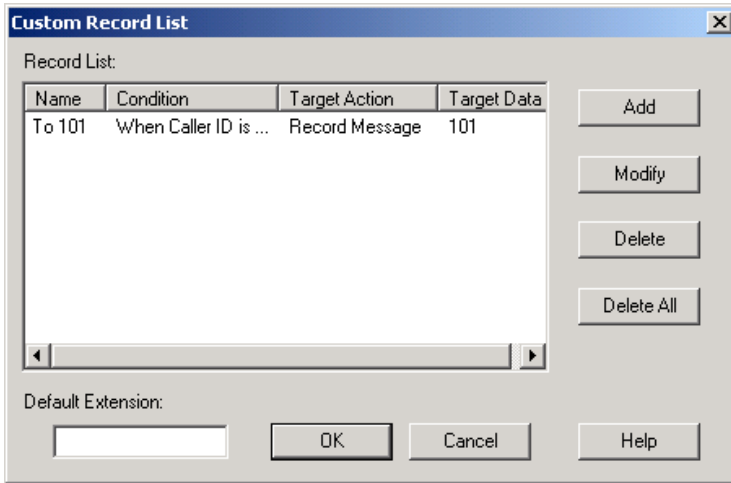

- **Add** - opens a Custom Record dialog box, where you can create a new record and build the conditions for the record.
- **Modify** - opens the Customer Record dialog box to modify the record selected in the Record List.
- **Delete** - deletes the record selected in the Record List.
- **Delete All** - deletes all records in the Record List.
- The **Default Extension** field allows you to specify an extension that Call Router will send a call to, if no match is found in the records or in the database.

Creating Customer Records

To create a customer record:

1. Select **Customer Record** from the **Operation** menu. (If **Customer Record** field is grayed out, stop Call Router.)
2. Click the **Add** button to open a new customer record or **Modify** to modify an existing record in the **Record List** window.

Custom Record

1. Build the Conditions for your custom record:

☒ If request message contains: Match one of these items

Item	Data
<input type="checkbox"/> Caller ID	
<input type="checkbox"/> CallerEntered...	
<input type="checkbox"/> IVR Data	
<input type="checkbox"/> Form Data	

☐ Select a DNIS number:

2. Target action of the custom record:

No Action

User Data:

Push URL:

Prompt:

Name of the custom record:

3. Select the data to match against customer records.
 - **If the request message contains** - lets you select Call Router Request data to match against the customer record.
 - a) Select “**Match one**” or “**Match all**” from the dropdown list.
 - b) Select the items you want.
 - c) Click in the **Data** column and type to specify the data.

Note: Caller Entered Digits must be numeric only.
 - **Select a DNIS number** - lets you enter a callee number to check against customer records.

4. Select a **Target action** for Call Router to perform when Call Router Request data matches this record.

Target action options: Goto Top Level, Goto Menu Item, Repeat Current Level, Call to Extension/Workgroup, Call to Operator, Dial by Name, Collect Extension, Directory Service, Record Message (specify target data in accompanying text box), Mailbox Access, Disconnect, System Callback, Collect Digits (specify fields in accompanying Collect Digit dialog box, see note below), Other DDR Application (specify target data in accompanying text box).

Note: Collect Digit Dialog Box


- **Tag name** - for example, “password” (gathered from a response to an Auto Attendant prompt or another AltLink Plus application)
 - **Minimum Digits** and **Maximum Digits** to collect
 - **PSTN** and **Web Timeout** values
 - **IVR Data** - for example, “username=Michael” (gathered from a response to an Auto Attendant prompt or another AltLink Plus application)
5. (*future release*) Enter optional data to match against customer record:

Basic Call Router

- User Data (gathered from a response to an Auto Attendant prompt or another AltLink Plus application)
 - Push URL (AltWeb only)
 - the number of prompt to play to the callee
6. Enter a name for this record.
 7. Click **OK**.


Viewing Call Router History

The Basic Call Router window gives a history of all incoming trunk calls to Basic Call Router.

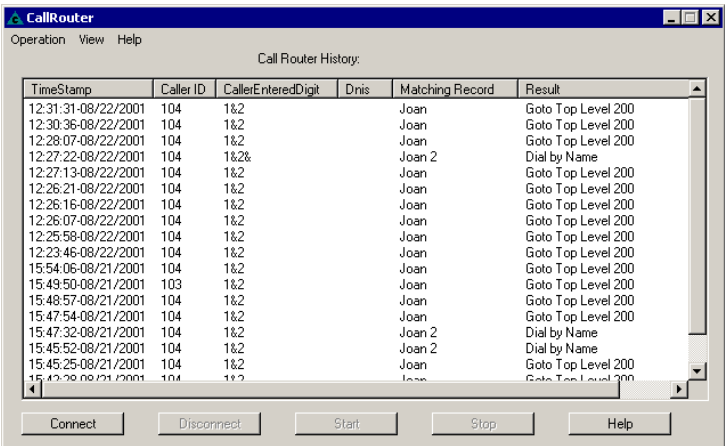

To specify Call Router History window content:

1. Choose **Select Column** from the **View** Menu.
2. In the **Select Columns** dialog box, select the following columns to display in the Call Router history window:
 - CallerID
 - Entered Digit
 - IVR Data
 - Form Data
 - DNIS

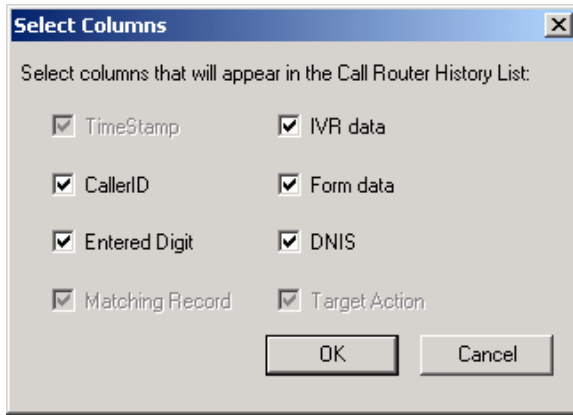

Call Route Request Data


The “Call Router Request” message sent by Altiserv to Call Router contains data about the incoming call, which Call Router attempts to match against your routing rules. Call Route Request data consists of Caller ID, (Caller) Entered Digits, IVR data, Form data and DNIS, all collected via real-time monitoring.

TimeStamp	Caller ID	CallerEnteredDigit	Dnis	Matching Record	Result
12:31:31-08/22/2001	104	1&2		loan	Goto Top Level 200
12:31:31-08/22/2001	104	1&2		loan	Goto Top Level 200
12:31:31-08/22/2001	104	1&2		loan	Goto Top Level 200

Note: Caller Entered Digits shows the Auto Attendant assignment for the workgroup that receives the call. If the workgroup’s AA assignment is 5, this item shows “0 & 5”; if the AA assignment is 3, the item shows “0 & 3,” and so on. The “0” indicates transfer to an Auto Attendant.

Call Route Response Data

The “Call Route Response” message, sent from Call Router to Altiserv, contains the search results of the Call Route Request Message. In the Call Router History window, this data shows how Call Router handled each call. Call Route Response data includes Matching Record (routing rule Call Router referred to for call routing) and Result (how and where the call was routed), all collected via real-time monitoring.

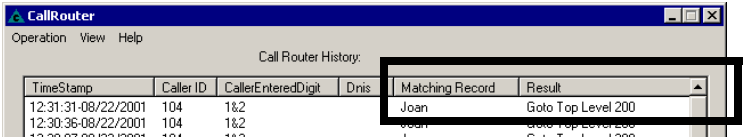

Note: If no match is found between the Call Route Request Data and the routing rules, the call is routed according to the business rules that check monitored workgroups for the longest available agent, maximum service level, and minimum expected delay.


Clearing Basic Call Router History Data

To clear data from the Call Router History window:

1. In the directory where Call Router.exe resides, locate the Call Router.csv file.
2. Open Call Router.csv and delete all contents.
3. Save and close Call Router.csv.

Show Monitor


To view real-time data on incoming trunks to workgroups, select **Show Monitor** from the **View** menu. (If the option is grayed out, stop Call Router.)

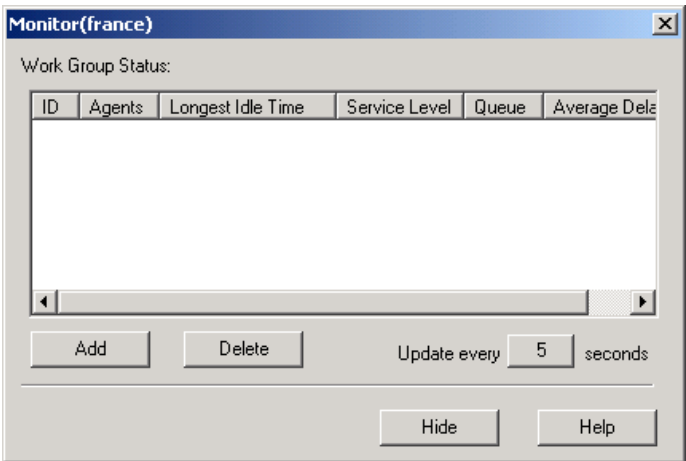

- The main window box displays the following workgroup fields: **ID**, **Agents**, **Longest Idle Time**, **Service Level**, **Queue** and **Average**

Delay.

- **Add** button - Click **Add** to log on to a workgroup whose incoming trunk call data you want to monitor. This opens a Log on Work Group dialog box.

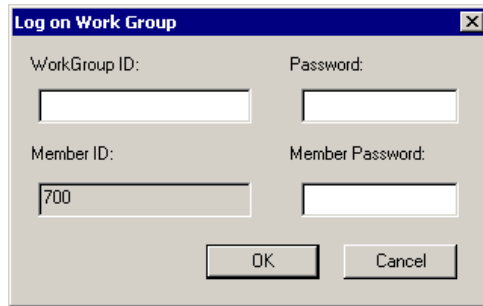

The image shows a 'Log on Work Group' dialog box with a blue title bar and a close button (X). It contains four text input fields arranged in a 2x2 grid. The top-left field is labeled 'WorkGroup ID:' and is empty. The top-right field is labeled 'Password:' and is empty. The bottom-left field is labeled 'Member ID:' and contains the text '700'. The bottom-right field is labeled 'Member Password:' and is empty. At the bottom of the dialog are two buttons: 'OK' and 'Cancel'.

Enter the workgroup extension as the **WorkGroup ID** and **Password**, and enter the virtual extension's **password**. (By default, the **Extension ID** field is grayed out.)

- **Delete** button - click **Delete** to remove the selected workgroup from the display.

Note: The workgroup to which incoming trunk calls will be routed via Call Router must be assigned to the Auto Attendant whose **Action** is set to "Avd - Data Directed Routing," with **Application** set to the virtual extension you use to start Call Router. For further information on configuring Auto Attendants, refer to the *AltiWare OE System Installation and Administration Manual* and the *AltiAPI Programmer Guide*.

To log on to multiple workgroups:

- Click **Add** again and enter the next Workgroup ID and Password and Virtual Extension password.

Call Router Advanced

Call Router Advanced is the standard Call Router application plus call router service. Call Router Advanced requires the purchase and activation of a Call Router Advanced license.

Note: The workgroup to which incoming trunk calls will be routed via Call Router must be assigned to the Auto Attendant whose Action is set to “Avd - Data Directed Routing, with **Application** set to the virtual extension you use to start Call Router. For further information on configuring Auto Attendants, refer to the AltiWare “Auto Attendant Configuration” on page 10-1 and the *AltiAPI Programmer Guide*.


To Install Call Router Advanced:

Run Call Router, select the Call Router Advanced and click **Next**. When prompted, enter the 20 digit license key for Call Router Advanced in the field and click **Next**. Setup will confirm the destination for the Call Router application (default is C:\Program Files\AltiGen\Call Router). Click **Next** to proceed. To select a different location, use the **Browse** button to choose the new destination.

Note: **Call Router Advanced** Service requires the purchase and activation of the Advance Call Router license.


To Configure/Run Call Router Advanced:

1. Launch Call Router from Start>Programs.

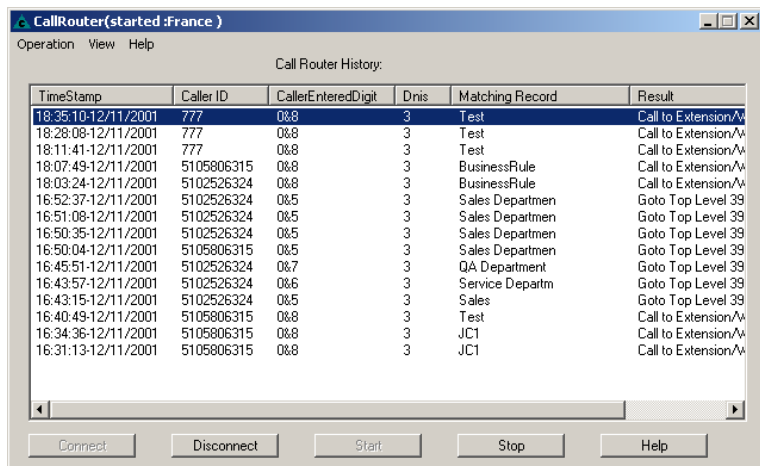


2. Click the **Connect** button to enter the Call Router Server Name or IP address to connect to, then click **OK**.

To disconnect from this server, click the **Disconnect** button.

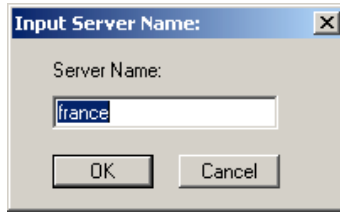

3. Select **Operation>Logon Info.**

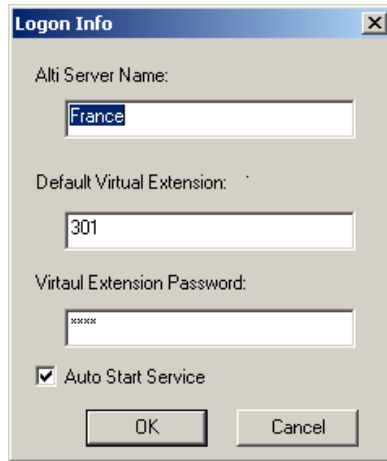


4. In the **Logon Info** window, enter the **Server Name** and **Default Virtual Extension** and **Password**, that Call Router Advanced will connect to, then click **OK**.


(Optional) Check **Auto Start Service** to have Call Router start routing calls automatically, after the system restarts or after Call Router service has been stopped and restarted.
5. Click **Start** to run Call Router Advanced. When Call Router Advanced is stopped, you can configure the server and login information.
6. Route Rules and Show Monitor can be configured while Call Router Advanced is started.

Call Router Advanced Route Rules

To create route rules that will be used to route calls, select **Operation>Route Rule** to open the **Route Rule List** window. This window also allows you to view existing route rules, and modify/delete route rules.

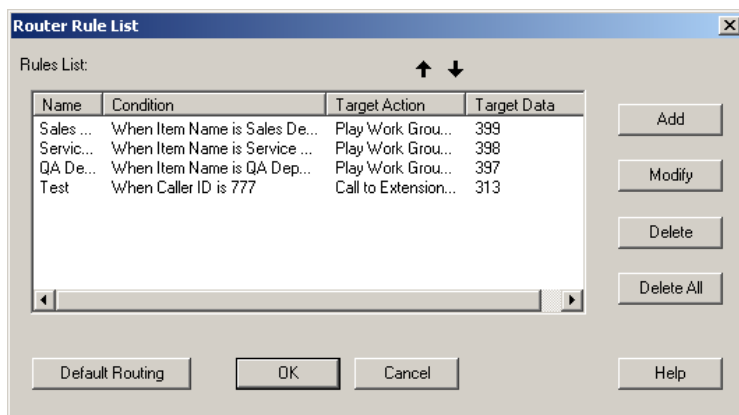

- **Add** - opens a Custom Record dialog box, where you can create a new record and build the conditions for the record.
- **Modify** - opens the Customer Record dialog box to modify the record selected in the Record List.
- **Delete** - deletes the record selected in the Record List.
- **Delete All** - deletes all records in the Record List.
- The **Default Routing** button opens a **Default Routing Rule** dialog box, where you can specify the action for Call Router to take if no match is found in the rules or in the database.

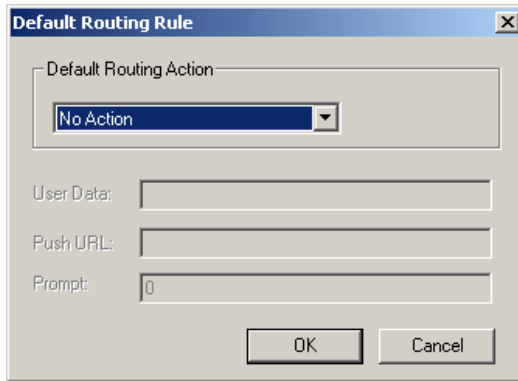

Default Routing Action options: No Action, Goto Top Level, Goto Menu Item, Repeat Current Level, Call to Extension/Workgroup, Call to Operator, Dial by Name, Collect Extension, Directory Service, Record Message (specify target data in accompanying text box), Mailbox Access, Disconnect, System Callback, Collect Digits (specify fields in accompanying Collect Digit dialog box), Other DDR Application (specify target data in accompanying text box), Play WG Queue Status (specify target data in accompanying text box).

Creating Route Rules

To create a route rule:

1. Select **Route Rule** from the **Operation** menu.
2. Click the **Add** button to open a new Route Rule or **Modify** to modify an existing rule in the **Rules List** window.

Rule

Rule Name: Queue Announcement Sales

1. Build the Conditions for your rule:

If Caller Info contains: Match one of these items

Item	Data	DSN
<input checked="" type="checkbox"/> Caller ID	5102521001	
<input type="checkbox"/> IVR Path		
<input type="checkbox"/> IVR Data		
<input checked="" type="checkbox"/> ItemName	Queue Sales	
<input type="checkbox"/> Dnis		

2. Target action of the Rule:

Call to Extension/WorkGroup Ext No.: 500

User Data:

Push URL:

Prompt:

If you input more than 1 prompt, please use "," as separator.

OK Cancel Help

3. Enter or modify the **Rule Name** in this field.
4. Select the data to match against routing rules.
 - **If Callee Info contains** - lets you select Call Route Request data to match against the customer record.
 - a) Select **"Match one"** or **"Match all"** from the dropdown list.
 - b) Select the items you want.
 - c) Click in the **Data** column and type to specify the data.

To manually specify data for an item, right-click the item, select **Input data** and enter information in the column.

Notes:

- Caller Entered Digits must be numeric only.
- You can enter "*" as a wildcard character for any length of digits, or "?" for a single digit.

For example, if you specify Call ID Data “510252*,” this will match all Caller IDs 510-252-xxxx. If you specify Call ID Data “510252????,” this will match all Caller IDs 510 252-xxxx.

To specify data from an existing database, right-click the item, select **From user database**, and enter information in the **DataSource** dialog box.

5. Select a **Target action** for Call Router to perform when Call Route Request data matches this record.

Target action options: No Action, Goto Top Level, Goto Menu Item, Repeat Current Level, Call to Extension/Workgroup, Call to Operator, Dial by Name, Collect Extension, Directory Service, Record Message (specify target data in accompanying text box), Mailbox Access, Disconnect, System Callback, Collect Digits (specify fields in accompanying Collect Digit dialog box, **see Note below**), Other DDR Application (specify target data in accompanying text box), Play WG Queue Status (specify target data in accompanying text box, **see Note below**).

Note: Collect Digit Dialog Box

Collect Digit

Please input tag name:

Min Digits: 1

Max Digits: 1

PSTN Timeout: 1 seconds

Web Timeout: 1 seconds

Ivr Data:

OK Cancel

- **Tag name** - for example, “password” (gathered from a response to an Auto Attendant prompt or another AltLink Plus application)
- **Minimum Digits** and **Maximum Digits** to collect
- **PSTN** and **Web Timeout** values
- **IVR Data** - for example, “username=Michael” (gathered from a response to an Auto Attendant prompt or another AltLink Plus application)

Note: **Play WG Queue Status** - if you select “Play WG Queue Status,” Call Router Advanced must log on as a workgroup extension with password and Call Router’s virtual extension and password. Specify this workgroup extension in the textbox that appears when you select **Play WG Queue Status**. (See “Queue Announcements” on page 22.)

If you want to apply the “**Play WG Queue Status**” Target action to several different workgroups, you must create separate rules for each.

6. (*future release*) Enter optional data to match against the routing rule:
 - User Data (gathered from a response to an Auto Attendant prompt or another AltLink Plus application)
 - Push URL (AltWeb only)
 - the number of prompt to play to the callee
7. Click **OK**.


Viewing Call Router History Menu

The Call Router Advanced window gives a history of all incoming trunk calls to Call Router Advanced.

To specify Call Router History window content:

1. Choose **Select Column** from the **View** Menu.
2. In the **Select Columns** dialog box, select the columns to display in the Call Router history window the following:
 - Caller ID
 - Entered Digit
 - IVR data

- DNIS

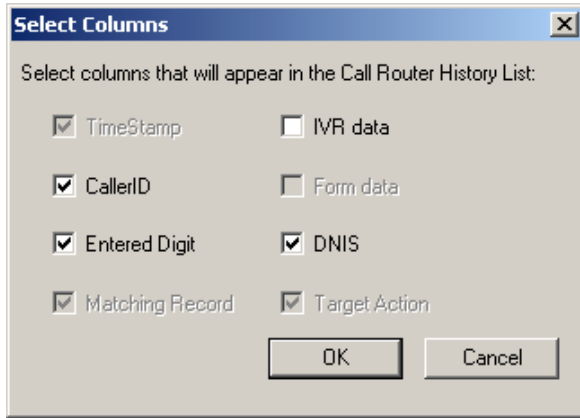

Call Route Request Data


The “Call Router Request” message sent by Altiserv to Call Router contains data about the incoming call, which Call Router attempts to match against your routing rules. Call Route Request data consists of Caller ID, (Caller) Entered Digits, IVR data and DNIS, all collected via real-time monitoring.

TimeStamp	Caller ID	CallerEnteredDigit	Dnis	Matching Record	Result
12:31:31-08/22/2001	104	112		Joan	Goto Top Level 200
...	Joan	Goto Top Level 200

Note: Caller Entered Digits shows the Auto Attendant assignment for the workgroup that receives the call. If the workgroup’s AA assignment is 5, this item shows “0 & 5”; if the AA assignment is 3, the item shows “0 & 3,” and so on. The “0” indicates transfer to an Auto Attendant.

Call Route Response Data


The “Call Route Response” message, sent from Call Router to Altiserv, contains the search results of the Call Route Request Message. In the Call Router History window, this data shows how Call Router handled each call. Call Route Response data includes Matching Record (routing rule Call Router referred to for call routing) and Result (how and where the call was routed), all collected via real-time monitoring.

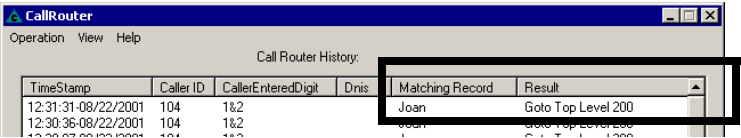


Note: If no match is found between the Call Route Request Data and the routing rules, the call is routed according to the business rules that check monitored workgroups for the longest available agent, maximum service level, and minimum expected delay.

Show Workgroup Status

To view real-time data on incoming trunks to workgroup, select **Show Workgroup Status** from the **View** menu.

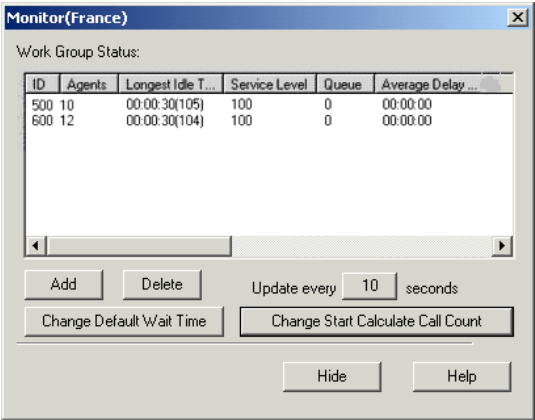

- The main window box displays the following workgroup fields: **ID**, **Agents**, **Longest Idle Time**, **Service Level**, **Queue**, **Average Delay** and **Default Wait Time**.
- **Add** button - Click **Add** to log on to a workgroup whose incoming trunk call data you want to monitor. This opens a Log on Work Group dialog box.

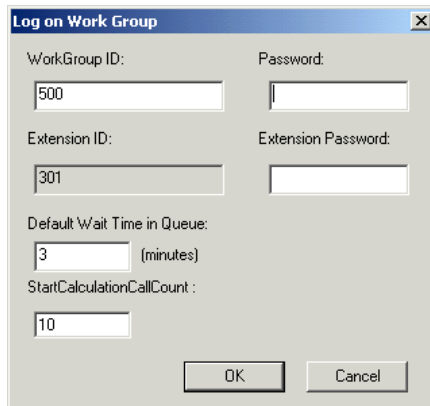

The image shows a 'Log on Work Group' dialog box with the following fields and controls:

- WorkGroup ID:** A text box containing '500'.
- Password:** A text box.
- Extension ID:** A text box containing '301'.
- Extension Password:** A text box.
- Default Wait Time in Queue:** A text box containing '3' with '(minutes)' to its right.
- StartCalculationCallCount:** A text box containing '10'.
- Buttons:** 'OK' and 'Cancel' buttons at the bottom right.

Enter the workgroup extension as the **WorkGroup ID** and **password**, and enter the virtual extension's **password**. In the field for **Default Wait Time in Queue**, type in the desired minutes. (By default, the **Extension ID** field is grayed out.)

- **Delete button** - click **Delete** to remove the selected workgroup from the display.
- **Change Default Wait Time** (in Call Router Advanced only) - click this button to change the default wait time associated with the workgroup queue.

Note: The workgroup to which incoming trunk calls will be routed via Call Router must be assigned to the Auto Attendant whose **Action** is set to "Avd - Data Directed Routing," with **Application** set to the virtual extension you use to start Call Router. For further information on configuring Auto Attendants, refer to "Auto Attendant Configuration" on page 10-1 and the *AltiAPI Programmer Guide*.

If you want to announce queue status to callers (**Target action** of any routing rule is "Play WG Queue Status,") complete the **Virtual Extension ID** and **Virtual Extension** password fields using the workgroup agent extension (and its password) specified in the rule.

To log on to multiple workgroups:

- Click **Add** again and enter the next Workgroup ID and Password.

- **Change Start Calculate Call Count** - click this button to change the starting point for the number of calls to be reached for Call Router to start calculating call data.

Clearing Call Router Advanced History Data

To clear data from the Call Router History window:

1. Go to the directory “Program Files/AltiGen/Call Router” where Call Router.exe resides, locate the Call Router.csv file.
2. Open Call Router.csv and delete all contents.
3. Save and close Call Router.csv.

Additional Call Router Advanced Features

Building SQL Queries

To build an SQL query that Call Router will send to your database, use the **CallerId Datasource** dialog box. The customer information retrieved from your database will be used in the routing rule.

CallerId DataSource

DSN: User Name: Password:

Condition:

Caller ID	Field Type	Field Name	Table Name
Caller ID	char		

Where:

Data Retrieve from User Database

Input the field name and field type, server will get the field value from database

Field Name	Field Type	Table	

SQL Query Sentence:

Note: In run time, the @CallerID will replace with digits we get from Caller.

OK Cancel

To open the Datasource dialog box, right-click on a data **Item** you want to specify using information from an existing database. Select **From user database**:

To build and SQL query:

1. Enter User Name and Password information for the database.
2. Enter information for the database you are querying against. For example:

DSN - BankAccount

Table Name - AccountBalance

Matched Field Name - CustomerPhoneNumber

Matched Field Data Type - char

Note: as you build the query, the **SQL query sentence** will appear in the window at the bottom.

3. Specify the condition for this query.
 - a. Select the **Caller Match Item** data for this query - **Caller ID**, **CallerEnteredDigits**, **Dnis**, **Item name** or **IVR data**.
 - b. Add any additional condition. For example Where - && Balance>1000
4. Click **OK**. You will be returned to the **Rule** dialog box, where the SQL query will be shown in the **Data** column and the database will be shown in the **DSN** column.

Queue Announcements

You can use Call Router Advanced to inform callers of their position in a workgroup queue. There are two requirements:

1. In Call Router, you must create a rule with Target action “Play WG Queue Status.” In addition, enter an Item Name that matches the name of the Auto Attendant’s “Data Directed Routing” name. The workgroup extension information you specify in the rule must also be entered when Call Router logs on in the Monitor window. Thus, it is a **requirement** to use the same virtual agent extension if you are writing several different queue announcement rules.
2. In AltiAdmin, you must configure one of the Auto Attendant numbers to which Call Router is assigned to “Data Directed Routing.” 1) Enter the same “Item Name” you use in the rule discussed immediately above. 2) Replace the “No Action” level with “Call – to Ext./ Workgroup,” and enter the workgroup extension number. For further information on configuring Auto Attendants, see the *AltiWare OE System Installation and Administration Manual* and the *AltiAPI Programmer Guide*.

If your organization has multiple workgroups and you want queue announcement for several or all of them, you must create separate rules for each, with workgroup extension information pertinent to each workgroup.

Example:

You use virtual extension 700 to log in to Call Router. You have two workgroups, Sales and Support, with the following agent and workgroup extensions:

	Sales	Support
Workgroup extension number	500	600
Call Router virtual extension number	700	700

For both workgroups, you want Call Router to check incoming calls for Caller ID and Caller Entered Digits, and to play the WG queue status if a match is found and all agents are busy.

In AltAdmin, you configure the Auto Attendant to which Call Router is assigned as shown below. (The example uses Auto Attendant 2.) Note that you must enter a different Item Name for each level.

Auto Attendant 2

0 - expand tree

- 1 - data routing 700 (QueueSales)
 - & - to extension 500
- 2 - data routing 700 (QueueSupport)
 - & - to extension 600
- 3 - no action
- 4 - no action
- 5 - no action
- 6 - no action
- 7 - no action
- 8 - no action
- 9 - no action
- 0 - to operator
- * - repeat level
- # - mail box access
- T - to operator

Item: 01

Item Name: QueueSales

☐ Prompt: 7

☐ Push URL

Actions: Adv. - Data Directed Routing

Application: 700 - Call Router

Timeout: 7 seconds

The third-party application must login as a VIRTUAL extension. If system could not connect to the application, auto attendant will go to the next level.

☐ Hide 'No Action' Items

OK Cancel Apply Help

For Sales, you create a rule as shown below.

Rule

Rule Name:

Queue Announcement Sales

1. Build the Conditions for your rule:

If Caller Info contains: Match one of these items

Item	Data	DSN
<input checked="" type="checkbox"/> Caller ID	5102521001	
<input type="checkbox"/> IVR Path		
<input type="checkbox"/> IVR Data		
<input checked="" type="checkbox"/> ItemName	Queue Sales	
<input type="checkbox"/> Dnis		

2. Target action of the Rule:

Call to Extension/WorkGroupExt No. : 500

User Data:

Push URL:

Prompt:

If you input more than 1 prompt,please use "," as separator.

OK

Cancel

Help

Similarly, for Support, you create a rule as shown below.

Rule

Rule Name: Queue Announcement Support

1. Build the Conditions for your rule:

If Caller Info contains: Match one of these items

Item	Data	DSN
<input type="checkbox"/> Caller ID		
<input type="checkbox"/> CallerEnteredDigit		
<input type="checkbox"/> IVR Data		
<input type="checkbox"/> Form Data		
<input checked="" type="checkbox"/> ItemName	QueueSupport	
<input type="checkbox"/> Dnis		

2. Target action of the Rule:

Play WG Queue Status 600



User Data:

Push URL:


Prompt:

OK Cancel Help

In the Monitor window, click Add to log on to Sales, entering both the workgroup extension & password and the virtual extension & password you specified in the “Auto Attendant Sales Queue Announcement” rule:

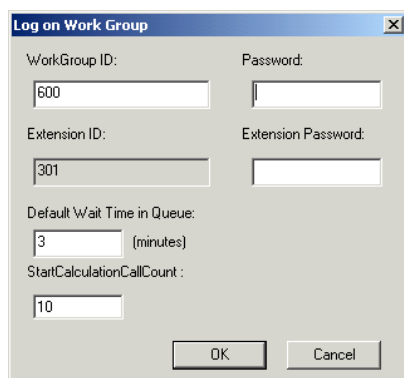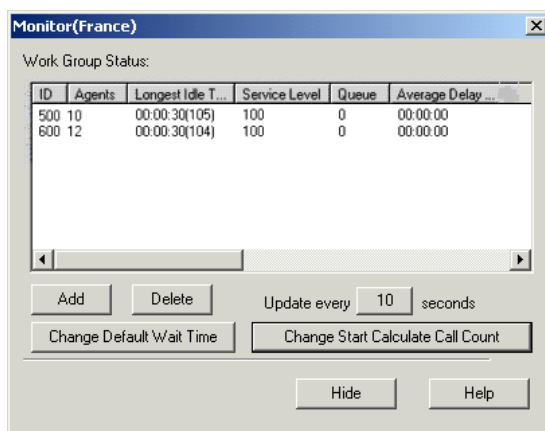

In the Monitor window, click Add to log on to Support, entering both the workgroup extension & password and the virtual extension & password you specified in the “Auto Attendant Sales Queue Announcement” rule:

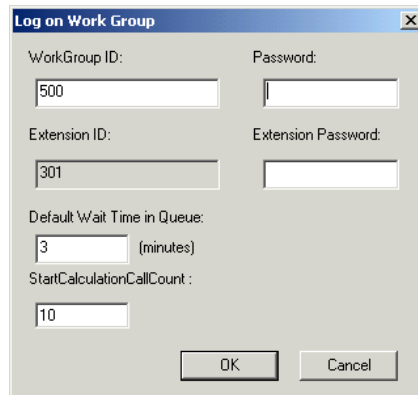

Log on Work Group

WorkGroup ID: Password:


Extension ID: Extension Password:

Default Wait Time in Queue: (minutes)

StartCalculationCallCount:

OK Cancel

The Monitor window shows that Call Router is logged on to both workgroups. Calls to each workgroup will be checked against the rules and will trigger queue announcement if a match is found and all agents are busy.

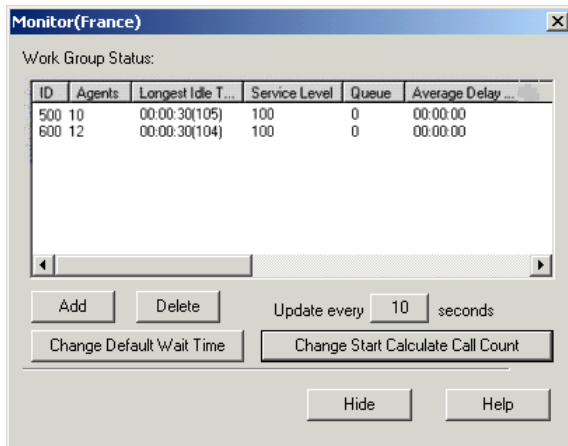

Monitor(France)

Work Group Status:

ID	Agents	Longest Idle T...	Service Level	Queue	Average Delay ...
500	10	00:00:30(105)	100	0	00:00:00
600	12	00:00:30(104)	100	0	00:00:00

Add Delete Update every seconds

Change Default Wait Time Change Start Calculate Call Count

Hide Help

Testing Call Router

To test the performance of Call Router, you can access a test tool from the Call Router main menu. Call Router must be stopped in order to run the test.

To test Call Router:

1. With Call Router function stopped, go to **Test** in the Tool drop-down list of the Call Router main menu for the **Test** dialog box.

The screenshot shows a 'Test' dialog box with a title bar containing the word 'Test' and a close button. The dialog is divided into two main sections: 'Configuration' and 'Result'. In the 'Configuration' section, there are three input fields: 'Number of concurrent calls' with a value of 5, 'Interval between calls' with a value of 10 and a 'seconds' label, and 'Number of test cycles' with a value of 100. In the 'Result' section, there are two input fields: 'Total calls' with a value of 0 and 'Average response time per call' with a value of 0 and a 'seconds' label. At the bottom of the dialog are three buttons: 'Start', 'Stop', and 'Cancel'.

2. In the **Configuration** fields, the user can input the following test parameters:
 - **Number of concurrent calls**
 - **Interval between calls**
 - **Number of test cycles**

For example, inputting **5** for *concurrent calls*, **3** for *interval between calls*, and **4** for *test cycles* means that every 3 seconds, there will be 5 concurrent call requests to Call Router. Total cycles of concurrent requests will be 4 times.

3. After inputting the test parameters, click **Start**. During the test, the user can click **Stop** to stop the test. The title of the **Test** dialog box will be shown as "*Test(Started)*" while running.

Test(Started)

Configuration

Number of concurrent calls: 5

Interval between calls: 3 seconds

Number of test cycles: 4

Result

Total calls: 5

Average response time per call: 1.105 seconds

Start Stop Cancel

The total calls processed and average time per call will be updated in real-time during the test. The user will know how many calls were processed and the average response time per call at that time.

4. After the test has finished, the title of the **Test** dialog box will be shown as “*Test(Stopped)*.”

Test(Stopped)

Configuration

Number of concurrent calls: 5

Interval between calls: 3 seconds

Number of test cycles: 4

Result

Total calls: 20

Average response time per call: 0.694 seconds

Start Stop Cancel

5. The **Total calls** that Call Router processed and **Average response time per call** of this test will be shown in the **Result** fields.

Testing SQL Server Database

To test SQL server database access performance of Call Router:

1. Add a database for the SQL server.


For example, for a database “calldb” and table name “RTMCALL”, 10,000 records are added to the table.

NodeID	SessionID	InternalCall	Direction	StartTime	EndTime	CallerType	CallerPad
1	1039470405	0	2	1039575519	1039575521	12	0223
1	1039470406	0	2	1039575527	1039575529	12	0223
1	1039470407	0	2	1039575535	1039575537	12	0223
1	1039470408	0	2	1039575543	1039575545	12	0223
1	1039470409	0	2	1039575551	1039575553	12	0223
1	1039470410	0	2	1039575559	1039575561	12	0223
1	1039470411	0	2	1039575567	1039575569	12	0223
1	1039470412	0	2	1039575575	1039575577	12	0223
1	1039470413	0	2	1039575583	1039575585	12	0223
1	1039470414	0	2	1039575591	1039575593	12	0223
1	1039470415	0	2	1039575599	1039575601	12	0223
1	1039470416	0	2	1039575607	1039575609	12	0223
1	1039470417	0	2	1039575615	1039575617	12	0223
1	1039470418	0	2	1039575623	1039575625	12	0223
1	1039470419	0	2	1039575631	1039575633	12	0223
1	1039470420	0	2	1039575639	1039575641	12	0223
1	1039470421	0	2	1039575647	1039575649	12	0223
1	1039470422	0	2	1039575655	1039575657	12	0223
1	1039470423	0	2	1039575663	1039575665	12	0223
1	1039470424	0	2	1039575671	1039575673	12	0223
1	1039470425	0	2	1039575679	1039575681	12	0223
1	1039470426	0	2	1039575687	1039575689	12	0223
1	1039470427	0	2	1039575695	1039575697	12	0223
1	1039470428	0	2	1039575703	1039575705	12	0223

Note: Because the data of DDR request has hard coded. If the user wants a rule match, the user needs to add the record to the table. The caller ID of test request will be “1039470405.” IVR Path of test request will be “0&9.”

To use the “SessionID” field in the table to match caller ID of the request, the user must add a record to the table and set the SessionID value to “1039470405”. Then during match process, the matched result will be true.

2. Add a data source to “ODBC” configuration in Windows.

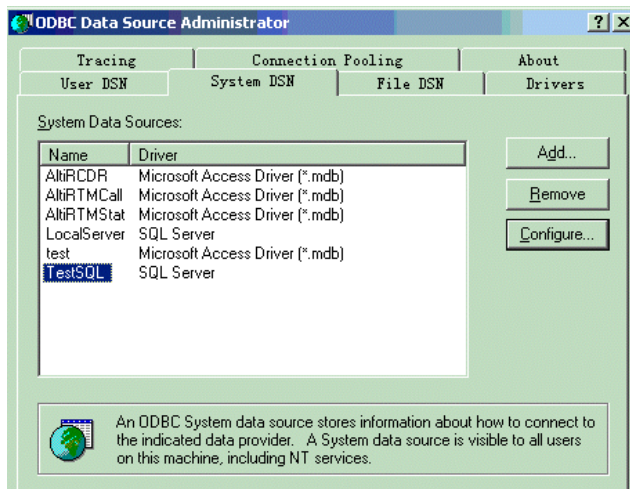

The “TestSQL” is the newly added data source. This data source is connect to the SQL server’s “calldb” database.

3. In Call Router, add a rule to access database.

CallerID DataSource

DSN Name: User Name: Password:

Condition

Caller ID	Field Type	Field Name	Table Name
Caller ID	char	sessionid	rtmcall

Where

Data Retrieve from User Database

Input the field name and field type, server will get the field value from database

Field Name	Field Type	Table
callerpad	char	rtmcall

SQL Query Sentence:

```
Select rtmcall.sessionid,rtmcall.callerpad From rtmcall
Where rtmcall.sessionid = @CallerID
```

Note: In run time, the @CallerID will replace with digits we get from Caller.

OK Cancel

The user can change the rule configuration to fit his own conditions.

During the test, Call Router will use this rule to match the DDR request. When using this rule, Call Router will access the SQL server to execute the SQL query.

Call Accounting Report Formats

This appendix identifies the field codes for AltiGen's **CDR (Call Detail Reporting)** records and the formats for the **Station Message Detail Reporting (SMDR)** specification support by AltiGen.

The first tables describe CDR and RTM database elements, while the remainder of the section describes the SMDR format.

CDR Data Schema

Table 1: CDR Call Format

Database Element	Definition	Type	Specification
NodeID	Server ID (System ID) assigned to an Altiserv system in AltAdmin	ULONG	value: 1–100
SessionID	Session ID: a unique number, usually 9 digits or larger, assigned by AltWare to a call	ULONG	
InternalCall	Internal or external call	UBYTE	0=External 1=Internal
Direction	Direction of the call (incoming or outgoing)	UBYTE	1=None (logon/off) 2=Incoming 4=Outgoing (includes silent monitor, barge-in)
StartTime	<i>Outgoing</i> call: Time when caller receives ringback, busy, or connect signal <i>Incoming</i> call: Time when AA picks up	ULONG	
EndTime	Timestamp when call is disconnected	ULONG	

Table 1: CDR Call Format

Database Element	Definition	Type	Specification
CallerType	Type of line for an incoming call	UBYTE	0=Unknown 1=Ext analog 2=Ext IP 3=Ext PHS (not used) 4=Ext virtual 5=Ext WG 11=trk analog 12=trk T1 13=trk IP 14=trk PRI 15=trk PHS (not used)
CallerPad	Line's physical address for an incoming call	UCHAR (5)	E.g. "0004", where "00"=slot, "04"=channel Always "-1-1" for WG or virtual extension
CallerNum	Caller phone number of an incoming call (extension number or off-net PSTN)	UCHAR (41)	
CallerName	Caller name for an incoming call (provided by CO for trunk calls; as entered in AltAdmin for extension calls)	UCHAR (65)	

Table 1: CDR Call Format

Database Element	Definition	Type	Specification
TargetType	Type of line for an outgoing call	UBYTE	0=None 1=Ext analog 2=Ext IP 3=Ext PHS (not used) 4=Ext virtual 5=Ext WG 11=trk analog 12=trk T1 13=trk IP 14=trk PRI 15=trk PHS (not used)
TargetPad	Physical address of line for an outgoing call	UCHAR (5)	E.g. "0004," where "00"=slot and "04"=channel
TargetNum	Target phone number of an outgoing call (extension number or off-net PSTN)	UCHAR (41)	
TargetName	Target name for an outgoing call (as entered in AltAdmin for extension calls)	UCHAR (65)	
WGNum	Workgroup number for an incoming call	UCHAR (8)	
OutGoingWG	Workgroup number for an outgoing call, as set in AltAdmin or by agent at logon	UCHAR (8)	
DNIS	DNIS number for incoming call	UCHAR (33)	
Tenant	Tenant name for trunk	UCHAR (31)	
AccountCode	Account code	UCHAR (11)	1—10 digits in length

Table 1: CDR Call Format

Database Element	Definition	Type	Specification
AADuration	Duration in seconds an incoming call is connected to the Auto Attendant; multiple connections to AA in a single session produces multiple records	ULONG	
WaitDuration	Duration in seconds a call is ringing and in workgroup queue	ULONG	
VMDuration	Duration in seconds after a call goes into a voicemail box; includes greeting, false attempts at messages, successful message, and review of message	ULONG	
VMRecordDuration	Duration in seconds of recording time for a VM message that was completed	ULONG	
HoldDuration	Duration in seconds while a call is on hold	ULONG	
TalkDuration	Duration in seconds of talk time	ULONG	
RecordDuration	Duration in seconds of NOVO recording	ULONG	

Table 1: CDR Call Format

Database Element	Definition	Type	Specification
ExitState	State when call is terminated	ULONG	(see boxed inset)
Specification [documented (HEX)] - [data output (Decimal)] - [exit state definition] *0x0001" - 1 - Auto Attendant *0x0002" - 2 - Ring No Answer *0x0003" - 3 - Queue *0x0004" - 4 - Voice Mail (no VM recorded) *0x0005" - 5 - VM (VM recorded) *0x0006" - 6 - Connect *0x0007" - 7 - Logon *0x0008" - 8 - Logoff *0x0009" - 9 - All Trunks Busy *0x000A" - 10 - No session *0x000B" - 11 - VM Access *0x000C" - 12 - Forward *0x000D" - 13 - Transfer *0x000E" - 14 - VM Notify *0x000F" - 15 - WG Abandoned *0x0010" - 16 - Park *0x0011" - 17 - System Park *0x0012" - 18 - Conference *0x0013" - 19 - Call Monitor *0x0014" - 20 - Transfer Cancel *0x0015" - 21 - Call Redirect *0x0016" - 22 - Call Pick Up *0x0017" - 23 - Dial Cancel			
LogoffReason	Logoff reason code	UBYTE	
URL	URL when "call" is initiated by AltWeb user clicking the make-call button	UCHAR (255)	

Table 1: CDR Call Format

Database Element	Definition	Type	Specification
User Data	Agent input	UCHAR (255)	

Table 2: CDR Logon-Off Format

Database Element	Definition	Type	Specification
NodeID	Server ID (System ID) assigned to an Altiserv system in AltAdmin	ULONG	value: 1–100
SessionID	Session ID: a unique number, usually 9 digits or larger, assigned by AltWare to a call	ULONG	
StartTime	Timestamp when workgroup logs on, logs off, is ready or not ready	ULONG	value
EndTime	Timestamp when call is disconnected	ULONG	
AgentNum	Agent extension number	UCHAR (8)	
WGNum	Workgroup Number	UCHAR (8)	
LogoffReason	Logoff reason code	UBYTE	
ExitState	State when call is terminated	ULONG	(see boxed inset)
Specification [documented (HEX)] - [data output (Decimal)] - [exit state definition] "0x0007" - 7 - Logon "0x0008" - 8- Logoff "0x0018" - 24 - Ready "0x0019" - 25 - Not Ready			
LocalStartTime	Timestamp when workgroup logs in, logs out, is ready or not ready	String	yyyymmddhhmmss

Database Element	Definition	Type	Specification
LocalEndTime	Timestamp when call is disconnected	String	yyyymmddhhmmss

Table 3: CDR Wrap-Up Format

Database Element	Definition	Type	Specification
NodeID	Server ID (System ID) assigned to an Altiserv system in AltAdmin	ULONG	value: 1–100
SessionID	Session ID: a unique number, usually 9 digits or larger, assigned by AltWare to a call	ULONG	
StartTime	Timestamp when wrap up starts	ULONG	
EndTime	Timestamp when wrap up stops	ULONG	
AgentNum	Agent extension number	UCHAR (8)	
WGNum	Workgroup Number	UCHAR (8)	
Duration	Wrap up duration time	ULONG	
ExitState	State when call is terminated	ULONG	(see boxed inset)
<div> Specification [documented (HEX)] - [data output (Decimal)] - [exit state definition] “0x0020” - 1 - Wrap up </div>			
LocalStartTime	Timestamp when wrap up starts	String	yyyymmddhhmmss
LocalEndTime	Timestamp when wrap up stops	String	yyyymmddhhmmss

RTM Data Schema

Table 4: RTM Data Format

Database Element	Definition	Type	Specification/ * CDR Client Field
Workgroup Data			
NodeID	Server ID (System ID) assigned to an Altiserv system in AltAdmin	ULONG	value: 1–100
Date	Day information	ULONG	* Time value
Time	Time interval	short	minutes * Period value
WGNum	Workgroup Number	UCHAR (8)	
MaxWaitTimeInQ	Longest waiting time in queue during searched time interval	short	*Queue is not an accumulated value; it is recorded at a specific point in time.
PeakQLength	Maximum queue length since midnight	short	
PeakWaitTimeInQ	Maximum queued time since midnight	ULONG	
QLength	Number of calls routed into the queue; if a call is recycled into the queue after RNA, the count is increased	short	* Calls in Queue
DurationInQ	Time calls waited in queue during searched time interval before being abandoned or answered	ULONG	*It is not an accumulated value, it is recorded at a specific point in time.
NumInCall	Calls answered by an agent; if a call is forwarded to and answered by multiple agents, the count is increased	short	* Calls Answered

Table 4: RTM Data Format

Database Element	Definition	Type	Specification/ * CDR Client Field
InCallDuration	Duration of incoming calls (NumInCall), starting from the time an agent answers a call until the call is disconnected or transferred out of the WG	ULONG	* Calls Answered Duration
NumOutCall	All outgoing trunk and station-to-station calls that entered “Connected” state	short	* Outgoing Calls
OutCallDuration	Duration of outgoing calls (NumOutCall); from the time the call enters “Connected” state until disconnect	ULONG	* Outgoing Calls Duration
NumCallToVM	Count of voicemail messages (calls transferred to VM from queue by caller pressing #, and calls automatically transferred to WG VM after RNA for every agent)	short	* Calls Transferred to Voice Mail
NumCallAbandonedDuringRing	Count of calls abandoned while ringing an agent	short	A * Calls Abandoned During Ring
NumCallAbandonedInQueue	Count of calls abandoned while waiting in queue	short	B * Calls Abandoned in Queue
NumCallAbandonedBeforeAnswer	Total abandoned calls (during VM, queue, and RNA)	short	C $C-A-B=$ * Calls Abandoned during VM
NumQueueOverflow	Calls routed to the WG but not queued due to AltAdmin settings that specify acceptable queue length and/or wait time	short	* Queue Overflow
BeforeAnswerDuration	Time calls waited in queue before being answered	ULONG	* Wait Time for Answered Calls
DurationInQueueOfCallAbandoned	Total wait time of all calls abandoned in queue (NumCallAbandonedInQueue)	ULONG	* Wait Time for Abandoned Calls

Table 4: RTM Data Format

Database Element	Definition	Type	Specification/ * CDR Client Field
ServiceLevel	Service Level		number of calls in queue - X / # of calls in queue X = number of calls in queue exceeding threshold * ServiceLevel is not an accumulated value, it is recorded at a specific point in time.
LocalDate	Day information	String	yyyymmdd
Agent Data			
NodeID	Server ID (System ID) assigned to an Altiserv system in AltAdmin	ULONG	value: 1–100
Date	Day information	ULONG	* Time value
Time	Time interval	short	minutes * Period value
AGNum	Agent extension number	UCHAR (8)	
NumInCall	Calls answered; if a call is rerouted to and answered by the same agent, the count is incremented	short	* Calls Answered
InCallDuration	Duration of incoming calls (NumInCall), starting from the time the agent answers a call until the call is disconnected or transferred out of the WG	ULONG	* Calls Answered Duration
NumOutCall	All outgoing trunk and station-to-station calls that entered “Connected” state	short	* Outgoing Calls

Table 4: RTM Data Format

Database Element	Definition	Type	Specification/ * CDR Client Field
OutCallDuration	Duration of outgoing calls (NumOutCall); from the time the call enters “Connected” state until disconnect	ULONG	* Outgoing Calls Duration
NumWrapUp	Number of times agent entered Wrapup, where Wrapup lasts from agent-set “Not Ready” to “Ready” status	short	* Wrapup
WrapUpDuration	The amount of time for Wrapup, where Wrapup lasts from agent-set “Not Ready” to “Ready” status	ULONG	* Wrapup Duration
NumCallToVM	Count of voicemail messages	short	* Voice Mail
VMDuration	Total duration of voicemail messages	ULONG	* Voice Mail Duration
nGroups	Count of workgroups agent is logged in to	short	
NumHold	The number of call put on hold in this workgroup	short	
HoldDuration	Total duration of workgroup hold calls	ULONG	
extNumInCall	Personal (non-workgroup) incoming call	short	* Calls Answered
extInCallDuration	Total duration of personal (non-workgroup) incoming calls	ULONG	* Calls Answered Duration
extNumOutCall	Number of personal (non-workgroup) outgoing calls	short	* Outgoing Calls
extOutCallDuration	Total duration of personal (non-workgroup) outgoing calls	ULONG	* Outgoing Calls Duration
extNumCallToVM	Count of non-workgroup voicemail messages	short	* Voice Mail
extVMDuration	Total duration of voicemail messages	ULONG	* Voice Mail Duration
extNumHold	Count of non-workgroup calls holding	short	

Table 4: RTM Data Format

Database Element	Definition	Type	Specification/ * CDR Client Field
extHoldDuration	Total duration of non-workgroup hold count	ULONG	
NumNotReady	Number of not ready, not including wrap up	short	
NotReady Duration	Total duration of the not ready period	ULONG	
LocalDate	Date	String	yyyymmdd
DND Times	Number of times agent entered DND	ULONG	
DND Duration	Total duration of the DND period	ULONG	
Agent Per Workgroup			
NodeID	Server ID (System ID) assigned to an Altiserv system in AltAdmin	ULONG	value: 1–100
Date	Day information	ULONG	* Time value
Time	Time interval	short	minutes * Period value
AGNum	Agent extension number	UCHAR (8)	
WGNum	Workgroup number	UCHAR (8)	
Login	Log state	UBYTE	0=Logout 1=Login
LogTimeStamp	Login/logout time stamp	ULONG	
ReasonCode	Logout reason code	UBYTE	
NumInCall	Calls answered; if a call is rerouted to and answered by the same agent, the count is incremented	short	* Calls Answered

Table 4: RTM Data Format

Database Element	Definition	Type	Specification/ * CDR Client Field
InCallDuration	Duration of incoming calls (NumInCall), starting from the time the agent answers a call until the call is disconnected or transferred out of the WG	ULONG	* Calls Answered Duration
NumOutCall	All outgoing trunk and station-to-station calls that entered “Connected” state	short	* Outgoing Calls
OutCallDuration	Duration of outgoing calls (NumOutCall); from the time the call enters “Connected” state until disconnect	ULONG	* Outgoing Calls Duration
NumWrapUp	Number of times agent entered Wrapup, where Wrapup lasts from agent-set “Not Ready” to “Ready” status	short	* Wrapup
WrapUpDuration	The amount of time for Wrapup, where Wrapup lasts from agent-set “Not Ready” to “Ready” status	ULONG	* Wrapup Duration
NumCallToVM	Count of voicemail messages	short	* Voice Mail
VMDuration	Total duration of voicemail messages	ULONG	* Voice Mail Duration
NumHold	Count of calls holding	short	
HoldDuration	Total duration of workgroup hold calls	ULONG	
LoginDuration	The total time agent was logged in since midnight	ULONG	
LogoutDuration	The total time agent was logged out since midnight	ULONG	
LocalDate	Date	String	yyyymmdd

SMDR Reporting Format

Besides the CDR format, Altiserv reports telephone information in the **Station Message Detail Reporting (SMDR) format** to an application through the COM port. The SMDR format and sample entries for the specification are described below.

In AltWare’s reports, internal extension-to-extension calls are not logged; neither are outbound calls of less than 15 seconds duration.

Trunk Calls In Format:

09/01 07:04P 00:00:25 0200 5102526354 109 12345678:

(Start, Length)	Field	Format	Notes
(0, 1)	space		
(1, 5)	date	mm/dd	
(6, 1)	space		
(7, 6)	start time	hh:mmP	P = pm, A = am
(13, 1)	space		
(14, 8)	duration	hh:mm:ss	
(22, 1)	space		
(23, 4)	trunk PAD number	xyyy	x = board numb. y = channel numb.
(27, 34)	calling party		
(61, 4)	called party		
(65, 7)	space		
(72, 8)	account code		1 to 10 digits
(80, 1)	delimiter	line feed	

Extension Calls Out Format:

09/01 08:12P 00:00:33 109 2526352 0411 12345678:

(Start, Length)	Field	Format	Notes
(0, 1)	space		
(1, 5)	date	mm/dd	
(6, 1)	space		
(7, 6)	start time	hh:mmP	P = pm, A = am
(13, 1)	space		
(14, 8)	duration	hh:mm:ss	
(22, 1)	space		
(23, 4)	calling party		
(27, 6)	space		
(33, 26)	called number		
(59, 2)	space		
(61, 4)	trunk PAD number	xxyy	x = board numb. y = channel numb.
(72, 8)	account code		1 to 10 digits
(80, 1)	delimiter	line feed	

From Extension A

Extension A: 100
Extension B: 111
Outside #: 3210002:

Calls Initiated by Extension A (Column A)				
1	Dial out	11/18 05:53P 00:00:28 100	3210002	0100
2	Ext B fwd to Trk Y	11/18 05:55P 00:00:21 100	3210002	0001
3	Ext B ONA to Trk Y	11/18 05:57P 00:00:17 100	3210002	0100

Calls Initiated by Extension A (Column A)					
4	VM make call to Trk Y	1/18 05:58P 00:00:15 100	3210002	0001	
5	### to Ext B (WG B, Virtual B) and VM make call	11/18 05:59P 00:00:23 111	3210002	0100	
6	Ext B S-transfer to Trk Y* (see examples)	11/18 06:00P 00:00:22 111	3210002	0001	
7	Ext B B-transfer to Trk Y* (see examples)	11/18 06:01P 00:00:18 100 11/18 06:01P 00:00:05 0001100	3210002	0100 100	
8	To Trk Y then transfer to Ext B	11/18 06:02P 00:00:27 100	3210002	0001	
9	Outcall	Log time only, no lines logged			
10	Zoomerang	11/18 06:06P 00:00:27 100	3210002	0100	
11	System Speed Dial	11/18 06:07P 00:00:18 100	3210002	0001	
12	Ext Speed Dial	11/18 06:08P 00:00:25 100	3210002	0100	
13	#35 privilege overwrite to Ext B (WG B, virtual B)	11/18 06:09P 00:00:31 100	3210002	0001	
14	B is WG B	N/A			
15	Ext B transfer to WG C	N/A			
16	Conference with Trunk	11/18 06:10P 00:00:25 100	3210002	0100	

From Trunk B

Extension B: 100

Trunk X: 3210001

Trunk Y: 3210002:

Calls Initiated by Trunk X to Extension B (Column B)					
1	Dial in	11/18 06:11P 00:00:07 0100 100	3210001		
2	Ext B fwd to Trk Y	11/18 06:13P 00:00:35 0100 11/18 06:13P 00:00:25 TRK0	3210001 3210002	100 0001	

Calls Initiated by Trunk X to Extension B (Column B)					
3	Ext B ONA to Trk Y	11/18 06:15P 00:00:12 0100 100 11/18 06:16P 00:00:00 0100	3210001 3210001		
4	VM make call to Trk Y	11/18 06:18P 00:00:29 100 11/18 06:18P 00:00:58 0100	3210001 3210001	100 100	
5	### to Ext B (WG B, Virtual B) and VM make call	N/A			
6	Ext B S-transfer to Trk Y* (see examples)	11/18 06:19P 00:00:21 0100 11/18 06:20P 00:00:41 0100 11/18 06:20P 00:00:23 3210	3210001 3210001 3210002	100 TRK0 0001	
7	Ext B B-transfer to Trk Y* (see examples)	11/18 06:22P 00:00:24 3210 0001 11/18 06:22P 00:00:40 0100 3210	3210002 3210001		
8	To Trk Y then transfer to Ext B	N/A			
9	Outcall	Log time only, no lines logged			
10	Zoomerang	11/18 06:24P 00:00:38 100 0100 11/18 06:24P 00:01:08 0001 100	3210002 3210001		
11	System Speed Dial	N/A			
12	Ext Speed Dial	N/A			
13	#35 privilege overwrite to Ext B (WG B, virtual B)	N/A			
14	B is WG B	11/18 06:25P 00:00:09 0100 100	3210001		
15	Ext B transfer to WG C	1/18 06:26P 00:00:17 100 11/18 06:26P 00:00:24 0100 111	100 3210001	0100	
16	Conference with Trunk	11/18 06:27P 00:00:15 0001 100	3210001		

E1 R2 CAS Installation

This appendix describes the configuration procedures necessary to implement E1 R2 digital signaling for European, Pacific Rim, and other emerging markets. Please carefully follow the procedures step by step

Step 1: Physical Layer

The screenshot shows the 'Triton E1 Configuration - TritonE1-0' window. It contains the following fields and controls:

- Span:** 0
- Status:** Line failure - NO SIGNAL (ALOS)
- Statistics since:** Fri 02/21/03 11:15:56
- Frame Errors:** 0
- Line Code Errors:** 3195
- OOE Errors:** 0
- Bit Errors:** 0
- Rec Frame Slips:** 1
- Xmt Frame Slips:** 0
- Clear** button
- Frame Type:**
 - ☒ No CRC
 - ☐ CRC4
- Line Code:**
 - ☐ AMI
 - ☒ HDB3
- Zero Code Suppression:** None (dropdown menu)
- CD Bits Handling:** Set CD = 01 (dropdown menu)
- ☐ System Clock Master
- T1/E1/PRI Configuration** button
- OK** button
- Cancel** button

In the **Triton E1Configuration** window, check the properties of the E1 trunk and consult your CO for the proper settings for the following fields:


- **Frame Type** - No CRC or CRC4 (a 4-bit cyclic redundancy check)
- **Line Code** - AMI or HDB3 (high-density bipolar 3)
- **Zero Code Suppression** - None, Jam Bit 8, GTE or Bell

DO NOT select the **System Clock Master** check box because CO is a clock provider, our system is synchronized to CO.

CD Bits Handling is selected to "CD = 01". If all configurations are correct, the status of trunk line should be shown as “OK.”

Step 2: Data Link Layer

In the **T1/E1 Configuration** window, the **Span type selection** should be **E1 CAS**. In the **E1 R2 setting** field, select the switch mode according to your country.

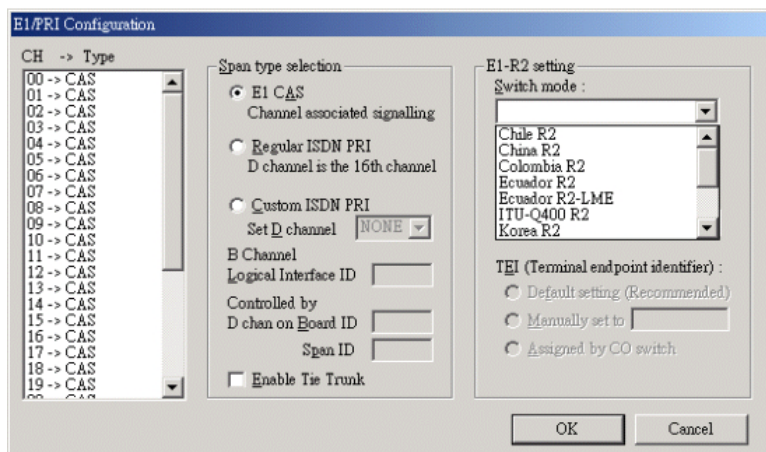

Step 3: Signaling Layer

Triton E1 Configuration - TritonE1-0

Channel: 0

T1/E1 robbed-bit Signaling

Protocol : R2MF CAS Protocol Dialing Delay : 250 ms

How to collect Caller ID and DID

Set calling party category to : 3

Add extra digits before caller ID :

☒ Incoming sequence :

DID/DNIS * Caller ID None None

☐ Or :

None None None None None

In-call signaling : (11111116)*(K)31

OK Cancel Apply to...

Depending on your country and it's corresponding trunk property, in the **Triton E1 Trunk Configuration** dialog box, configure the following fields:

- **Set Calling Party Category to** - the Calling Party Category indicates the type of calling party, (e.g. operator, pay phone, priority, ordinary subscriber). Select **1**, **2** or **3** (for ordinary subscribers, refer to Table 1). If the subscribed line is intended for other purposes, contact your CO for the proper value.
- **Add extra digits before caller ID** - consult your CO to find out if any extra digits are needed.
- **Incoming sequences** - select check box and configure the sequence according to Table 1.
- **In-call signaling** - configure the in-call signaling value according to Table 1.

Note: Consult your CO to find out if caller ID digits are provided in the lines.

Table 1: Foreign Countries/Signaling Values

Country	Signaling Values
Chile/Nacional MFC-R2	<p>Set calling part category: 1 [Assume no caller ID provided]: Incoming sequence: DID/DNIS In-call signaling (depend on how many DID digits): For 3-digit DID, set to (113)6 For 4-digit DID, set to (1113)6 For 5-digit DID, set to (11113)6 For 6-digit DID, set to (111113)6 For 7-digit DID, set to (1111113)6 For 8-digit DID, set to (11111113)6 [Assume caller ID provided]: Incoming sequence (same as above shown): DID/DNIS * Caller ID In-call signaling (depend on how many DID digits): For 3-digit DID, set to (115)*(K)36 For 4-digit DID, set to (1115)*(K)36 For 5-digit DID, set to (11115)*(K)36 For 6-digit DID, set to (111115)*(K)36 For 7-digit DID, set to (1111115)*(K)36 For 8-digit DID, set to (11111115)*(K)36</p>

Table 1: Foreign Countries/Signaling Values

Country	Signaling Values
China MFC-R2	<p>Set calling part category: 3 [Assume no caller ID provided]: Incoming sequence: DID/DNIS In-call signaling (depend on how many DID digits): For 3-digit DID, set to (113)1 For 4-digit DID, set to (1113)1 For 5-digit DID, set to (11113)1 For 6-digit DID, set to (111113)1 For 7-digit DID, set to (1111113)1 For 8-digit DID, set to (11111113)1 [Assume caller ID provided]: Incoming sequence (same as above shown): DID/DNIS * Caller ID In-call signaling (depend on how many DID digits): For 3-digit DID, set to (116)*(K)31 For 4-digit DID, set to (1116)*(K)31 For 5-digit DID, set to (11116)*(K)31 For 6-digit DID, set to (111116)*(K)31 For 7-digit DID, set to (1111116)*(K)31 For 8-digit DID, set to (11111116)*(K)31</p>
Colombia MFC-R2	<p>Set calling part category: 2 [Assume no caller ID provided] : Incoming sequence: DID/DNIS In-call signaling (depend on how many DID digits): For 3-digit DID, set to (113)6 For 4-digit DID, set to (1113)6 For 5-digit DID, set to (11113)6 For 6-digit DID, set to (111113)6 For 7-digit DID, set to (1111113)6 For 8-digit DID, set to (11111113)6 [Assume caller ID provided]: Incoming sequence (same as above shown): DID/DNIS * Caller ID In-call signaling (depend on how many DID digits): For 3-digit DID, set to (115)*(K)36 For 4-digit DID, set to (1115)*(K)36 For 5-digit DID, set to (11115)*(K)36 For 6-digit DID, set to (111115)*(K)36 For 7-digit DID, set to (1111115)*(K)36 For 8-digit DID, set to (11111115)*(K)36</p>

Table 1: Foreign Countries/Signaling Values

Country	Signaling Values
Ecuador MFC-R2	<p>Set calling part category: 1 [Assume no caller ID provided]:</p> <p>Incoming sequence: DID/DNIS</p> <p>In-call signaling (depend on how many DID digits): For 3-digit DID, set to (113)6 For 4-digit DID, set to (1113)6 For 5-digit DID, set to (11113)6 For 6-digit DID, set to (111113)6 For 7-digit DID, set to (1111113)6 For 8-digit DID, set to (11111113)6 [Assume caller ID provided] :</p> <p>Incoming sequence (same as above shown): DID/DNIS * Caller ID</p> <p>In-call signaling (depend on how many DID digits): For 3-digit DID, set to (115)*(K)36 For 4-digit DID, set to (1115)*(K)36 For 5-digit DID, set to (11115)*(K)36 For 6-digit DID, set to (111115)*(K)36 For 7-digit DID, set to (1111115)*(K)36 For 8-digit DID, set to (11111115)*(K)36</p>
Ecuador MFC-LME	<p>Set calling part category: 2 [The switch doesn't support caller ID transmission]:</p> <p>Incoming sequence: DID/DNIS</p> <p>In-call signaling (depend on how many DID digits): For 3-digit DID, set to (113)1 For 4-digit DID, set to (1113)1 For 5-digit DID, set to (11113)1 For 6-digit DID, set to (111113)1 For 7-digit DID, set to (1111113)1 For 8-digit DID, set to (11111113)1</p>
Korea MFC-R2	<p>Set calling part category: 1 [The switch doesn't support caller ID transmission]:</p> <p>Incoming sequence: DID/DNIS</p> <p>In-call signaling (depend on how many DID digits): For 3-digit DID, set to (113)6 For 4-digit DID, set to (1113)6 For 5-digit DID, set to (11113)6 For 6-digit DID, set to (111113)6 For 7-digit DID, set to (1111113)6 For 8-digit DID, set to (11111113)6</p>

Table 1: Foreign Countries/Signaling Values

Country	Signaling Values
Mexico / Teléfonos de Mexico	<p>Set calling part category: 2 [Assume no caller ID provided] :</p> <p>Incoming sequence: DID/DNIS</p> <p>In-call signaling (depend on how many DID digits): For 3-digit DID, set to (113)1 For 4-digit DID, set to (1113)1 For 5-digit DID, set to (11113)1 For 6-digit DID, set to (111113)1 For 7-digit DID, set to (1111113)1 For 8-digit DID, set to (11111113)1 [Assume caller ID provided]:</p> <p>Incoming sequence (same as above shown): DID/DNIS * Caller ID</p> <p>In-call signaling (depend on how many DID digits): For 3-digit DID, set to (116)*(K)31 For 4-digit DID, set to (1116)*(K)31 For 5-digit DID, set to (11116)*(K)31 For 6-digit DID, set to (111116)*(K)31 For 7-digit DID, set to (1111116)*(K)31 For 8-digit DID, set to (11111116)*(K)31</p>
Panamá / Nacional MFC-R2	<p>Set calling part category: 1 [Assume no caller ID provided]:</p> <p>Incoming sequence: DID/DNIS</p> <p>In-call signaling (depend on how many DID digits) : For 3-digit DID, set to (113)6 For 4-digit DID, set to (1113)6 For 5-digit DID, set to (11113)6 For 6-digit DID, set to (111113)6 For 7-digit DID, set to (1111113)6 For 8-digit DID, set to (11111113)6 [Assume caller ID provided]:</p> <p>Incoming sequence (same as above shown): DID/DNIS * Caller ID</p> <p>In-call signaling (depend on how many DID digits): For 3-digit DID, set to (115)*(K)36 For 4-digit DID, set to (1115)*(K)36 For 5-digit DID, set to (11115)*(K)36 For 6-digit DID, set to (111115)*(K)36 For 7-digit DID, set to (1111115)*(K)36 For 8-digit DID, set to (11111115)*(K)36</p>

Table 1: Foreign Countries/Signaling Values

Country	Signaling Values
Venezuela / Nacional MFC-R2	<p>Set calling part category: 1 [Assume no caller ID provided]: Incoming sequence: DID/DNIS In-call signaling (depend on how many DID digits): For 3-digit DID, set to (113)6 For 4-digit DID, set to (1113)6 For 5-digit DID, set to (11113)6 For 6-digit DID, set to (111113)6 For 7-digit DID, set to (1111113)6 For 8-digit DID, set to (11111113)6 [Assume caller ID provided]: Incoming sequence (same as above shown): DID/DNIS * Caller ID In-call signaling (depend on how many DID digits) : For 3-digit DID, set to (115)*(K)36 For 4-digit DID, set to (1115)*(K)36 For 5-digit DID, set to (11115)*(K)36 For 6-digit DID, set to (111115)*(K)36 For 7-digit DID, set to (1111115)*(K)36 For 8-digit DID, set to (11111115)*(K)36</p>

Product Repair Services & Technical Support

This appendix describes AltiGen technical support policy and procedures. It also covers repair and replacement procedures that the user should follow when returning or replacing defective equipment.

Technical Support

Before contacting Technical Support, always have the following information on hand:

- Your name
- Company name
- Product serial number
- AltiWare version number
- Number of boards in the system
- Server brand and model
- The telephone number where you can be reached
- A brief description of the problem and the procedure to reproduce the problem

Having this information ready will allow us to better assist you.

Eligibility

AltiGen provides technical support to Authorized AltiGen Dealers and Distributors only.

End User customers, please contact your Authorized AltiGen Dealer for technical support.

Direct AltiGen support is available to End User customers through E-mail only, when addressing problems that cannot be resolved by referring to the instruction manuals or by your Authorized AltiGen Dealer.

Technical Support Hours

During AltiGen's business hours (7:00 A.M. to 5:30 P.M., Pacific Standard Time, Monday through Friday except holidays), your call will be returned in the order it was received (on a first come, first serve basis), within two (2) hours under normal circumstances. Outside AltiGen business hours, only emergency calls will be returned within eight (8) hours. All other calls are returned on the next business day.

How To Reach Altigen Technical Support

Contact Altigen technical support by any of the following methods:

- **CALL 510-252-9712 and follow the prompts. This is available to Authorized Altigen Dealers and Distributors only.** Your call will be answered by one of Altigen's Technical Support Representatives or routed to the Technical Support Message Center if no one is available to answer your call. Your call will be returned promptly, within two (2) hours under normal circumstances. Please see "Tech Support on Altigen's Web site."
- **SEND EMAIL TO: support@altigen.com.** Messages are checked on a daily basis.
- **SEND A FAX TO 510-252-9738, ATTENTION: Technical Support.**

Tech Support on Altigen's Web Site

Altigen offers tech support on the web at <http://support.altigen.com>.

Unresolved Problems Escalation Procedure

The following escalation steps should be followed to report unresolved problems. Please contact the following parties in the order listed:

1. Local Authorized Dealers Service Department.
2. Altigen's Technical Support Manager at support@altigen.com.

For remaining unresolved problems or complaints, send an email to Altigen's CEO at ceo@altigen.com, or call 510-252-9712 x 120.

Repair and Replacement

This policy addresses the procedure for return of any materials to Altigen from Authorized Altigen Dealers only. It covers materials returned for any and all reasons.

Altigen Communication's Repair Program provides registered customers with replacement parts in a timely and professional manner. The Altigen Repair Program allows you to send defective Altigen manufactured hardware products (in or out of Warranty) to our factory for prompt authorized repairs.

Hardware Warranty Period

Altigen Communications hardware products are warranted for one (1) year for all parts and manufacturing labor, from the date of the first end user purchase or 14 months from the date of shipment from Altigen. **Product proof of purchase or equivalent is required.**

Products Returned Before Warranty Expiration

All repaired units remain under the Warranty period of the original product. Advance Replacement products are provided on an exchange basis; the products sent to Altigen become the property of Altigen, and Altigen provides the sender with a new product OR a repaired product that is functionally equivalent to new.

For products found to be in a non-repairable condition, at Altigen's sole discretion, the sender will be notified for further directions and disposition. If there is no response and or, no directions are provided to Altigen within 5 days, the credit card will be charged 100% of the product's then current list price, if applicable.

For Depot Repairs, the product(s) will be returned to the sender.

Products Returned After Warranty Expiration

Products returned after the Warranty Period will be repaired or replaced, at Altigen discretion, under the, then current, price schedule. Out of warranty repairs are warranted for 90 days from date of return shipment to the customer. For products found to be in a non-repairable condition, at Altigen sole discretion, the sender will be notified for further directions and disposition. If there is no response and or, no directions are provided to Altigen within 5 days, the credit card will be charged 100% of the product(s) then current list price, if applicable.

For Depot Repairs, the product(s) will be returned to the sender.

Repair Service Offerings

Standard Warranty (Depot Repair)

Altigen will use its best efforts to repair and return Altigen manufactured products within thirty (30) working days of receipt. Standard Repair price for out of Warranty products, shall be in accordance with the then current price list and/or schedule.

Altigen will apply a No Trouble Found (NTF) service charge of \$300.00 if the returned product(s), after being tested by Manufacturing and Quality Assurance (QA) evaluation, was found trouble free.

There is no charge for covered In-Warranty product repair services.

Advance Replacement

All Advance Replacement RMAs MUST be secured with a company or personal credit card.

Advance Replacements are not available or provided for the Altigen 600 phone sets.

Altigen will, at the caller's request, provide an Advance Replacement product for, In or Out of Warranty inoperable units, excluding the Altigen 600 phone. Upon receiving the Advance Replacement product, the caller will return the defective product to Altigen via the RMA number provided for the return.

DOA (Dead on Arrival) Provisions

Altigen will replace products under Warranty that fail at the initial power up or within the first 24 hours of service (DOA) with a new product on an expedited basis, at no charge, including shipping and freight charges.

Altigen will apply a No Trouble Found (NTF) service charge of \$300.00 if the returned product(s), after being tested by Manufacturing and Quality Assurance (QA) evaluation, was found trouble free.

Standard Product Warranty

Failures beyond the first 24 hours of initial power up, including Early Life Failures, shall not be considered under the DOA provisions.

- All products provided under the Standard Product provision will be new or, reconditioned to adhere to the same, form, fit and function as the product being replaced.
- Advance Replacement services are available for Out of Warranty products. A \$300.00 service fee shall apply for this service, plus the standard applicable Repair Service charges for Out of Warranty product.
- All shipping is 2nd day Air. If other shipping arrangements are requested any additional cost will be charged to the caller.
- Altigen will apply a NTF service charge of \$300.00 if the returned product(s), after being tested by Manufacturing and Quality Assurance (QA) evaluation, was found trouble free; No Trouble Found (NTF).

Product Returns

You are provided 30 days, from Altigen ship date, to return the inoperable product. If the product is not returned within 30 days, the credit card provided, will be charged 100% of the product(s) current list price. No discounts will be applied.

If the product returned is different — Product type, Serial Number, etc. —than the one requested and shipped, Altigen Communications, at its discretion, may elect to return the non-conforming product back to the sender and charge the sender, 100% of the then current list price.

The appropriate invoice will be cancelled and/or credited if the proper unit is returned within the 30 day period.

For products found to be in a non-repairable condition, at Altigen's sole discretion, the sender will be notified for further directions and disposition. If there is no response and/or no directions are provided to Altigen within 5 days, the credit card provided will be charged 100% of the product(s) then current list price.

If the returned unit is In-Warranty and the reason for failure is covered by the Product Warranty, no charge(s) will apply.

Restocking

Where as, if Altigen receives the return of the Advance Replacement product and the product is the "same product as shipped" — Product type, Serial Number, etc. — a 20% Restocking fee shall apply at the then current price and/or schedule.

Repair Procedures - For Initiating Any Repair Level Service (Standard or Advanced)

To initiate a Repair Order, either **Standard** or **Advanced**, contact the Altigen Technical Support Department at (510) 252-9712 between 8:00 AM and 5:00 PM (PT).

The following information must be provided at the time of your request:

- RMA Form (See "RMA Form" on page C-7)
- Proof of Purchase

Advanced Replacement Orders

To initiate an Advance Replacement order: Contact AltiGen Communication's Repair Technical Support Department at (510) 252-9712 between 8:00 AM and 5:00 PM (PT). If the call arrives outside of the normal working hours and a message is left, an AltiGen Communication's representative will return the calls during the next normal business day.

For same day shipments during the normal workweek, the request must be received and accepted by 3 PM PST. Requests out side of this will be shipped the next business day.

The following information must be provided to initiate an Advanced Replacement order:

- RMA Form (See "RMA Form" on page C-7)
- Proof of Purchase

What You Must Do

Once the replacement unit is received, adequately pack the defective equipment in the same packing materials and return it and ALL the component parts and documentation to the address noted in the RMA form.

Component parts, literature and documentation(s) missing from the Advance Replacement return will be charged to the credit card provided. You are provided 30 days form Altigen ship date to return the inoperable unit. If not returned in 30 days, you will be charged 100% of the unit's current list price. No discounts will be applied. See description of Advanced Replacement above.

Shipping cartons not marked with the return RMA number on the outside of the packaging will be returned to the sender.

What You Will Receive

With verification of a product defect, the AltiGen representative will issue a Return Material Authorization (RMA) number.

How to Ship Units for Repair

All materials being returned to AltiGen must have an associated RMA number. RMA numbers are issued by AltiGen Customer Service and can be obtained by calling 510-252-9738.

AltiGen reserves the right to refuse return of any material that does not have an RMA number. The RMA number should be clearly marked on the outside of the box in which the material is being returned. For example:

**Attn.: RMA # 123
AltiGen Communications, Inc.
47427 Fremont Blvd.
Fremont, CA 94538**

Terms and Conditions

1. Exceptions and Notice of Non-Repairable Equipment

Equipment returned for repair (whether in or out of Warranty), which is found to be damaged, or at AltiGen's sole discretion are, beyond economical repair, will either be returned to the user or scrapped by AltiGen at the user's option. AltiGen will notify the sender and request instruction for disposition. Test and freight charges may apply. Any unit returned for repair without a valid AltiGen serial number will be considered as Out of Warranty.

Repair and Replacement

This Repair Service does not cover PROMS, Tapes, Disks, or software items.

2. Shipping Methods, Payment and Insurance

AltiGen ships all equipment FOB (Freight on Board) from Fremont, California. AltiGen does not arrange shipment insurance or special packing, unless requested to do so by the customer. Please specify any special shipping requirements on the RMA form.

Proper care and packaging is the responsibility of the sender.

AltiGen Communications pays outbound freight on all repaired items if shipped by our standard method, which is UPS Ground, which takes from 5 to 7 days. The customer will be responsible for any special handling, overnight-NFO, and/or insurance requests beyond AltiGen's standard method of shipment. Any additional shipping charges will be applied to the provided credit card.

All shipments to AltiGen must have the freight charges pre-paid by the sender. AltiGen does not accept inbound shipments that are COD, collect, or any shipment that does not have an authorized RMA number clearly marked on the outside of the package.

All applicable charges and payments for services will be by way of, credit card (Visa, MasterCard).

3. Equipment Damaged During Shipment

PLEASE CHECK FOR SHIPPING DAMAGE WHEN YOUR EQUIPMENT IS RECEIVED.

Inspect all cartons at the time of delivery. Visible damage should be brought to the attention of the carrier at once. In the event of concealed damage, keep the shipping container, packing material and equipment intact. It is your responsibility to file any claims for damage or loss with the carrier or your insurance carrier.

4. Accounts Not Current

Customers with outstanding accounts, over sixty (60) days will be refused Repair Services until their account is in good standing.

5. Repair and or Technical Support Exclusions

Any equipment not manufactured by AltiGen Communications and/or provided by AltiGen, or software owned and/or provided by a third party, which is integrated with AltiGen Communication's products/ system, in a package for an end-user, is excluded from AltiGen's Support Services.

6. Hardware Limitations

Products, which are not manufactured by AltiGen, may not be returned to AltiGen, and should be returned directly to the original manufacturer for repair. AltiGen will not be responsible or guarantee the safekeeping of any third party equipment deliveries. AltiGen will not coordinate the repairs or the forwarding of any such equipment to other vendors.

RMA Form

One article per RMA Issued initiating any repair level service.

To initiate a repair order, contact AltiGen Communications’s Technical Support Department at (510) 252-9712 between 8:00 AM and 5:00 PM (PST) or e-mail support@altigen.com.

The following information **must be provided** at the time of your request.

In/Out of Warranty Repair Request Form

FOR ALTIGEN USE ONLY	
RMA #	Tech Support Rep:
Adv. Replacement: YES <input type="checkbox"/> NO <input type="checkbox"/>	Proof of Purchase Required:
A.R. Fee Required: YES <input type="checkbox"/> NO <input type="checkbox"/>	YES <input type="checkbox"/> NO <input type="checkbox"/>
Under Warranty: YES <input type="checkbox"/> NO <input type="checkbox"/>	Depot Repair: YES <input type="checkbox"/> NO <input type="checkbox"/>

Date: _____

End User Name: _____

Dealer Company Name: _____

Dealer Phone Number: _____ AltiGen Case Number: _____

Credit Card Number — VISA/MC:

Expiration: ____ / ____ Card Holder Name: _____

SHIP TO INFORMATION

Company Name: _____

Attn: _____

Address: _____

City/State/ZIP Code: _____

Phone Number: _____

B. Product Repair & Technical Support

RMA Form

BILL TO INFORMATION

Company Name: _____

Attn: _____

Address: _____

City/State/ZIP Code: _____

Phone Number: _____

SHIPMENT METHOD: STANDARD ☐ EXPRESS ☐

WARRANTY STATUS: UNDER WARRANTY ☐ WARRANTY EXPIRED ☐

PRODUCT INFORMATION:

Product Part Number: _____

Serial Number: _____

Chassis Model/Mfg: _____

AltOffice BTOS #: _____ Operating System: _____

Number of Boards in System: _____

Complete Description of Problem:
(including steps taken to isolate the problem to the particular product, MVIP test results, affected port number(s), etc. RMA will not be processed without this information.)

Glossary

A

AC - Alternating Current.

ADPCM - Adaptive Differential Pulse Code Modulation. A sophisticated compression algorithm for digitizing audio that stores the differences between successive samples rather than the absolute value of each sample. This method of digitization also reduces storage requirements from 64K bits/second to as low as 24K bits/second.

AltiConsole - a personal computer-based Attendant console connected to the AltiServ over the network that emulates a standard hardware-based Attendant console through software and has the flexibility of adding new features through software without changing the hardware.

AltiSpan - link from the AltiServ base to the system extension that allows for passing Caller ID.

AltiWare - the system software that is used by AltiGen's Quantum products.

AltiServ - an advanced, highly integrated business and computer telephony platform that consists of a Quantum card and AltiWare software working in a PC/Server running under Windows NT.

analog - a method of telephony transmission in which the information from the source (for example, speech in a human conversation) is converted into an electrical signal that varies continuously over a range of amplitude values.

API - Applications Programming Interface. A set of routines that an application program uses to request and carry out lower-level services performed by an operating system.

ASCII - American Standard Code for Information Interchange.

B

blocked calls - calls that cannot be immediately connected to the number dialed. A call is defined as blocked when access paths to the called station are unavailable. This is not applicable to AltiServ.

BPS - Bits Per Second. The number of bits transmitted per second.

C

card - printed circuit assembly.

CCIS - Common Channel Interoffice Signaling. A method of carrying telephone signaling information along a path different to the path used to carry voice.

Central Office (CO) - a switching system that connects lines to lines, lines to trunks, and trunks to trunks. These systems are operated by local telephone companies. The term sometimes refers to a telephone company building in which a switching system is located and sometimes includes other equipment (such as transmission system terminals).

Centrex (CTX) - a business telephone service offered by a local telephone company from a local central office. Centrex is a single line telephone service, delivered to individual desks or telephones with added features such as intercom, call forwarding, call transfer, toll restriction, out call routing, and hold on single line telephones. These features are provided by the local phone company's central office. Centrex is a leased business service serving as an option to owning a PBX or key telephone system.

channel - the smallest subdivision of a circuit capable of carrying communication service.

circuit - the physical connection of channels, conductors and equipment between two given points. Includes both transmitting and receiving capabilities.

client - a process whose threads call services provided by either a local or remote server process. In Windows NT, communication between a client and server occurs through the local procedure call (LPC) or remote procedure call (RPC) facilities.

CO - Central Office.

conference call - a call in which two or more persons speak together. Stations may be internal or external.

configure - to determine and assign the equipment cabinet or chassis contents and location of each card, as well as software parameters.

configuration databases - those databases that represent unique customer specifications relating to system and station features.

console phone - emulates a standard Attendant Console through software. It provides all the call handling features provided by a standard hardware-based console and has the flexibility of adding new features through software without changing the hardware (i.e. AltiConsole).

conversation path - the route from originating port to terminating port of a two-way communication. A conversation requires two such port-to-port paths. Transmit and receive.

CTI - Computer Telephone Integration. Or in the case of an AltiServ, Computer Telephony Internet.

D

database - a collection of related data that can be immediately accessed and operated upon by a data processing system for a specific purpose.

DC - direct current. The flow of free electrons in one direction with an electrical conductor, such as wire.

Default - the preset value from the factory or the software writer that the program or equipment comes with. In the absence of any other command from the user, it will work with default values.

DID - Direct Inward Dialing.

digit - a single whole number between 0 and 9.

disk duplexing - the procedure of copying data onto two hard drives, each using its *own* hard drive controller. If any component (hard drive controller card, cable, boot hard drive) on the first channel fails, then the second channel will boot and operate normally.

disk mirroring - the procedure of duplicating data written to two identical hard drives, where both hard drives are connected to *one* disk controller card. If one hard drive fails, then the data can be retrieved from the second hard drive.

DNIS (Dialed Number Identification Service) - is a telephone service that identifies for the receiver of a call the number that the caller dialed. It's a common feature of 800 and 900 lines. If you have multiple 800 or 900 numbers to the same destination, DNIS tells which number was called. DNIS works by passing the touch tone digits (DTMF or MF digits) to the destination where a special facility can read and display them or make them available for call center programming.

Do Not Disturb (DND) - when this feature is selected, all incoming calls to the user's extension are denied. If the station has system forwarding instructions, the calls will be automatically redirected to another extension, Attendant, or operator.

DTMF - Dual Tone Multi Frequency are the low and high frequency tones that comprise touch tone signals.

drop-down menu - a list of options that display below a menu option.

DSP - Digital Signal Processor. A microprocessor with an architecture that is particularly optimized to perform mathematical algorithms that manipulate digital signals.

Dual Tone Multi Frequency - see DTMF.

E

en-bloc dialing - dialing scheme that allows the terminal to include all the digits required to complete a call.

environmental subsystem - A protected subsystem (server) that provides an application programming interface (API) and environment - such as Win32, MS-DOS, POSIX, or OS/2 - on Windows NT.

escalation - to expand step-by-step from a limited or local issue to higher level.

Ethernet - a communications protocol used in local area networks to connect computers, terminals, printers, etc., typically located within the same building. Ethernet operates over twisted wire and over coaxial cable at speeds up to 10 megabits per second. Ethernet is a physical link and data link protocol reflecting the two lowest layers of the DNA/OSI model.

Exchange Server Integration - provides unified messaging by synchronizing the mailboxes in an Altiserv and Exchange Server, so that a user can access messages in either server. If a message is added to one server, it is automatically sent to the other server, similarly, if a message is deleted in one server it is automatically deleted from the other server.

extension number - an arbitrary number of two to five digits that matches a station to a particular user.

F

FCC - Federal Communications Commission.

feature - a special or specific capability.

field - a unit of data in a record or message and designated for a particular purpose.

file - an organized collection of related information treated as a unit.

file server - an integral part of a multi-user computer network such as a local area network (LAN). It typically is a combination of a computer, data management software, and large capacity hard disk drive. A file server directs all movement of files and data on a multi-user communications network and gives each user on the network access to files stored on the file server. It allows the user to store information, leave electronic mail messages for other users on the system and access application software on the file server such as word processors or spreadsheets.

FLASH - a sudden brief signal. Activated by depressing the flash key on the telephone pad if one has been configured, or by a quick press and release of the receiver button (switch hook).

FSK - Frequency Shift Keying. A modulation technique for data transmission.

function - a specific purpose of an entity, or its characteristic action. In computer programming, a synonym for procedure.

FXS - Foreign Exchange Subscriber. An analog interface for direct connection of a telephone set to a digital multiplexer.

G

GMT - Greenwich Mean Time. Mean solar time of the meridian at Greenwich, England, used as the basis for standard time throughout the world.

ground start - a type of start signaling on a subscriber's trunks in which the ring (minus side) is grounded (ground start) to get dial tone.

GUI - Graphical User Interface.

H

hard disk - a sealed mass storage unit used for storing large amounts of data.

hardware - a term used to describe the physical components of a machine, particularly computer equipment, and devices containing logic elements used in data processing or communication equipment.

Hertz - cycles per second. Abbreviated as Hz.

http or HTTP - Hypertext Transfer Protocol. The Internet protocol used to manage communications between Web clients (browsers) and servers.

Huntgroup - see Workgroups.

Hz - see definition for Hertz.

I

Impedance - occurs when power or signal is transferred from one circuit to another. This is known as the resistance of electrical current to alternating current and it is measured in OHMs.

IMAP4 - Internet Message Access Protocol - Version 4.

interface - the interconnections between two separate systems or pieces of equipment.

ISA - Industry Standard Architecture.

ISO - International Standards Organization.

ISP - Internet Service Provider.

J

jack - the mate for a plug. Used to connect two pieces of equipment together.

K

keyboard - system interface for communication. A group of numeric keys, alphabetic keys, or function keys used for entering information into a terminal and into the system. Usually patterned after the QWERTY keyboard layout. This term is derived from the sequence of the first six keys in the first row of alphabetic keys.

L

Language Server - allows the ability to record and play phrases in different foreign languages without requiring any software changes.

Local address - an address used in a peripheral node or station in place of a network address and transformed to or from a network address for delivery purposes.

Logoff - the procedure by which a user disconnects from a program or session.

Logon - the procedure by which a user begins a program or terminal session and gains access to the AltiServ or Quantum system.

Loop Start - a type of start signaling. A closed path or circuit over which a signal can circulate. When used on a telephone line, it tests the line, the circuit is closed and reflects received signals to the sender.

M

maintenance - any activity intended to retain a functional unit in, or to restore it to, a state in which it can perform its required function. Maintenance includes keeping a functional unit in a specified state by performing activities such as test, measurements, replacements, adjustments, and repairs.

MAPI (Messaging API) - a Component Object Model (COM)-based API that supports message-related components such as message stores, address book, and message transport.

MDMF - Multiple Data Message Format.

menu - a display of a list of available machine functions for selection by the user.

MHz - Megahertz.

MIME - Multipurpose Internet Mail Extension. A technique designed to bundle attachments within individual email files. Microsoft email protocol software format.

module - a compact assembly that is a component of a larger unit in electronics. A detachable section, compartment or unit with a specific purpose or function.

mounting panel - the panel used to mount the connection panels to a wall.

ms - millisecond.

MVIP - Multi-Vendor Integration Protocol.

N

network - A configuration of data processing and/or telecommunication devices and software connected for information exchange.

network address - An identifier for a node, station, or unit of equipment in a network.

network domain - a set of workstations and servers that share a security account manager database and can be administered as a group. A user with an account in a particular network domain can log onto and access his or her account from any system in the domain.

network server - networking software that responds to I/O or computes requests from a client machine. Windows NT network servers can be implemented either as server processes or as drivers.

numbering plan - the method of assigning NNX codes to provide a unique telephone address for each subscriber, special line, or trunk destination. In AltWare, the method of assigning extension numbers and trunk designations to local premises.

North American Numbering Plan - also known as **NPA**. Refers to the assignment and management of the area code system for North America. Administered by Bellcore, presently being expanded due to high demand for new numbers and services, requiring new area codes. Numbering sequence being changed from traditional N 1/0 X area code (center digit a 1 or a 0) to NNX, where N = numbers 1 to 9 and X = any number.

O

offhook - refers to a telephone set when the receiver is not resting in the base. This usually initiates a dial tone from the receiver.

One Number Access - a feature of AltWare that allows users to create a list of phone numbers that the system can use to track users and connect them with an incoming call if they are not at their extension desk.

onhook - the term used to describe a telephone in the idle state or with the receiver still resting in the base.

option - a selection from several possibilities.

OSI - Open Systems Interconnection. A software model defined by the International Standards Organization that standardizes levels of service and types of interaction for networked computers. The OSI reference model defines seven layers of computer communication and what each layer is responsible for.

overlap dialing - dialing scheme that allows the terminal to omit part of the digits required to complete a call, while the remaining digits are buffered.

P

PABX - Private Automatic Branch Exchange. A private branch exchange (PBX) that provides access to and from the public telephone network without operator intervention.

PBX - Private Branch Exchange. A switching system providing telephone communications between internal stations and external networks.

PCM - Pulse Code Modulation.

physical extension - is associated with a physical port and device. An extension is created, by default, as a physical extension (as opposed to a virtual or workgroup extension) unless there are no more physical ports available.

pilot number - the extension number that identifies a workgroup or distribution group.

POP3 - Post Office Protocol version 3. Protocol for retrieving email by remote client.

port - a communication channel through which a client process communicates with a protected subsystem.

POSIX - an acronym defined as “a portable operating system interface based on UNIX,” refers to a collection of international standards for UNIX-style operating system interfaces. In the mid-to-late 1980’s, government agencies began specifying POSIX as a procurement standard for government computing contracts.

Power Failure Backup - If your AC power fails, your telephone system can still operate by switching to a backup battery power supply, often called an (Uninterrupted Power Supply) UPS.

Power Failure Transfer - A telephone system feature. When the commercial AC power fails and there is no backup power source such as a battery or a generator, this feature switches some of the trunks connected to the telephone system to several single line phones that do not need external power and can draw their power from the telephone lines.

Power Supply - the part of the telephone system or a computer that converts the normal 120 or 240 volts AC power to AC and DC at the various voltages and frequencies as needed by various components and circuits of the system.

Private Network - A series of offices connected together by leased and non-leased telephone lines, with switching facilities and transmission equipment owned and operated by the user or by the carrier and leased to the user.

process - a logical division of labor in an operating system. In Windows NT, it comprises a virtual address space, an executable program, one or more threads of execution, some portion of the user’s resource quotas, and the systems resources that the operating system has allocated to the process threads. It is implemented as an object.

Protected subsystems - integral subsystems that perform important operating system functions, such as security subsystems among others.

protocol - A set of rules and conventions by which two computers pass messages across a network medium. Networking software generally implements multiple levels of protocols layered one on top of the other.

Q

Quantum - an ISA standard computer telephony board of AltiGen's AltiServ product line. It is an all-in-one platform designed with open software standards to facilitate use of enhanced applications.

queue - a collection of calls waiting to be served. Queued calls in AltiWare are handled on a first-in, first-out basis.

R

RAM - Random Access Memory. The primary memory in a computer that can be written over with new information. The contents of RAM memory are lost when the electrical power to the PC is switched off.

RAS - Remote Access Service.

retry - to resend data a prescribed number of times or until the data is finally delivered.

RJ-11 - The "common" telephone jack. Usually wired with four wires, the red and green signify the tip and ring circuits.

RJ-45 - The "common" telephone jack. Usually wired with eight wires, the red and green signify the tip and ring circuits.

ROM - Read Only Memory.

root directory - in an IBM or compatible PC, the directory that is created when the user formats a diskette that may contain subdirectories. Synonymous with system directory.

S

save - to retain data by placing it in memory or by copying it from one storage device to another.

SDMF - Single Data Message Format.

server - a process with one or more threads that accepts requests from client processes. It implements a set of services that it makes available to clients running either on the same computer or possibly on various computers in a distributed network.

slot - a numbered division of a computer in which a printed circuit card is located.

SMTP - Simple Mail Transfer Protocol. Protocol for sending Internet email.

station - any location wired to accept a telephone, sometimes referred to as an extension. Also another name for a place where a call can be answered. It may be a telephone, an Attendant console, a PC, or any other device.

subscriber - a user or connection. The line from a telephone to a switch.

System Speed Dialing - this feature allows the user to access a system wide directory of commonly called numbers that have been “condensed” into a two- or three-digit code on the telephone dial pad.

T

TAPI - Telephone Application Programming Interface. A call-processing software that allows developers to implement telephony applications that control switches from different vendors.

TCP/IP - Transfer Control Protocol/Internet Protocol. A full set of protocols used on the Internet.

TDM - Time Division Multiplexing.

telecommunications - any transmission, emission, or reception of signals, writing, images, or other information by wire, radio, or any other electromagnetic system.

Tip and Ring - the traditional telephony indication of plus and minus in electrical circuits. (See Ground start and Loop start.)

toll call - a call to a point outside of the local service calling area. Identified by greater distance and increased rates or by 1 plus dialing requirements.

toll restriction - a feature that allows the user to restrict certain station users from placing toll calls, or other non-business related locations.

traffic - a measure of the demand or use of facilities, circuits, or trunks. Measured by converting seconds and minutes into CCSs (Centum Call Seconds) and Erlangs (hours of use per hour).

transfer - this feature redirects a call to another extension, the AltiGen Voice Mail System, or operator.

trunk - one of the cables that contain numerous shared telephone circuits used to interconnect telephone switching centers.

trunk access code - the prefix digit (i.e. 9) dialed to access a trunk line and dial an external phone number.

trunk group - trunks of a common type, given an identity to distinguish between different types of connecting facilities.

U

UCA - Universal Communication Architecture.

UPS - Uninterrupted Power Supply. A backup battery module attached to a computer that allows memory contents to remain intact long enough for the operating system to perform an orderly system shutdown if a power outage occurs.

USB - Universal Serial Bus.

user(s) - the person or persons accessing the features and functions of the AltWare product.

V

virtual extension - an extension not associated with a physical port that allows for guest access to the AltGen Voice Mail System features and telephone sharing environments. Users of a virtual extension have to log in before accessing the system features assigned to it.

W

WATS - Wide Area Telephone Service. A leased service for direct long distance dialing.

Wink - a single supervisory pulse.

Windows NT (New Technology) - the high-end Windows operating system in a family of Windows operating systems.

workgroup - telephones arranged in groups within a particular organizational function (for example, marketing, sales, service, etc.). Each workgroup is assigned a pilot number. When the pilot number is dialed, the system scans the list of extensions comprising the workgroup and connects the call to the first available idle extension number. If no extensions are available, the call is placed in that workgroup's queue.

workgroup pilot number - an extension designated to a workgroup that is not associated with a physical port and may consist of up to 64 members. When the pilot number is dialed, the call is distributed to the workgroup members.

World Wide Web - A network of Internet servers that can provide browser information in the form of "web pages" to web clients such as Netscape Navigator.

Index

A

- About icon 4-4
- access
 - restriction 1-21
 - system 4-10
- access code 7-3
- account code 1-8
- ACD 1-26
 - call handling 8-45, 8-46
- adding or changing hardware 3-45
- address
 - AltiGen Communications, Inc. 1-ii
 - IP 14-6
 - network 14-2
- administration
 - AltiServ 5-1
 - remote 1-23
- Adobe Acrobat PDF 3-1
- Advanced CallRouter 20-10
 - queue announcements 20-22
 - SQL queries 20-21
- alternate mark inversion (AMI) 6-37
- AltiAdmin 1-23, 3-1
 - installation 3-44
 - login 3-45
 - menus & windows 4-1, 4-11
- AltiBackup 3-1
- AltiConsole 1-26, 1-27, G-1
- AltiContact Manager license 3-28
- AltiDB Reader 1-27
- AltiGen Communications
 - phone numbers 1-ii
- AltiGen Communications, Inc.
 - address 1-ii
- AltiGen External CDR 5-21, 5-22
- AltiGen Switching Service 3-18
- Alti-IP 600
 - phone configuration 17-1
- AltiMail
 - making a call from 1-18
- Alt-IP 600 1-28
- AltiReach 1-26
 - call management 14-37
 - call view 1-20
- AltiServ
 - administration 5-1
 - characteristics 1-5
 - hardware requirements 2-1
 - online registration 3-8
 - platform requirements 1-4
 - platform selection 2-1
- AltiServ Contact Center 1-28
- AltiServ features 1-24, 1-26
- AltiServ office solutions 1-1
- AltiView 1-27
- AltiWare
 - auto attendant features 1-13, 1-17
 - definition G-1
 - developer support 1-8
 - installation 3-1
 - Internet integration features 1-20
 - main window 4-2
 - hardware status 4-5
 - NT service 3-2
 - PBX features 1-8
 - system administration
 - features 1-21
 - T1/E1/PRI features 1-23
 - tools 1-26
 - voice messaging features 1-18
 - voice over IP features 1-23
- AltiWare Administrator 3-1, 4-1, 4-11
 - login 3-45
- AltiWare OE
 - new installations 3-10
- AltiWeb.cab 18-4
- AltiWeb.htm 18-4, 18-7, 18-11
- AltiWeb.js 18-4
- AM schedule 5-9
- AMI (Alternate Mark Inversion) 6-37
- analog G-1
- Analog board 6-4

Index

- announcement
 - time stamp 8-32
- answer options 8-43
- answering
 - huntgroup call handling 8-45
 - workgroup call handling 8-46
- applet subdirectory 18-3
- applet subdirectory files 18-4
- apply to 1-21
- Apply to, and trunks 7-3
- Apply To, multiple extensions 8-3, 8-21
- area code, on trunk 7-3
- area codes 1-23, 5-26
 - system home 5-3
- attributes
 - trunk 7-3, 7-5
- audio peripheral 11-1
- auto attendant
 - actions 10-8
 - beginning prompt 10-8
 - configuration 10-1–10-13
 - features 1-13, 1-17
 - 9-level menu 1-17
 - dial by name 1-17
 - direct station transfer 1-17
 - multiple attendant support 1-17
 - name directory 1-17
 - menu items, nesting 10-7
 - prompts, phrase management 10-11
 - push web URL 10-8
 - system callback 1-13
- Auto Attendant Select 10-5
- Auto Attendant Select icon 4-4
- Auto Attendant, configuring 18-17
- automatic call distribution 1-26, 8-45, 8-46
- automatic login/logout 8-25
- Average Jitter 4-10

B

- B Channel 6-41
- B8ZS (Binary 8 Zero

- Substitution) 6-37
- backing up
 - files 12-2
- backup 3-2
 - database 3-46
 - system data 12-1
- bandwidth
 - WAN 6-8
- Basic CallRouter 1-28, 20-1
- Bell 6-38
- binary 8 zero substitution (B8ZS) 6-37
- blocking all outgoing calls 5-14
- blocking calls 5-13
- board
 - Boards window 6-25
 - options 2-9
 - Quantum 6-2
 - Triton Analog Extension 6-4
 - Triton Resource 6-2
 - Triton T1/PRI 6-29
 - Triton VoIP 6-7
- board configuration 6-1
- boards
 - Triton 1-6
- Boards view window 4-5
- bridge
 - conference 5-4
- business hours 1-8, 5-8
 - 24-hour business hour setup 5-9
- busy call handling 8-39, 8-43
- Bytes Received 4-10
- Bytes Sent 4-10

C

- call
 - accounting report 5-22
 - call management setup in AltiReach 14-37
 - from AltiMail 1-18
- call accounting
 - codes A-17
 - tables A-1
- call control 5-14
- call detail reporting 1-22, A-1–A-17

- call forwarding 1-9
 - from voice mail 1-18
- call handling 8-39, 8-43
 - incoming 8-39
- Call Log view window 4-9
- call log window 4-9
- call park 1-9, 1-12, 1-26
 - system 1-12
- call parking 5-4
- call pickup 1-10
 - workgroup 1-15
- call recording options 8-10
- call reports 5-17
- call reports, external 5-20
- call restrictions 5-12, 8-36
- call restrictions, extension 8-37
- call route request data 20-7, 20-17
- call route response data 20-7, 20-17
- Call Router
 - testing 20-27
- Call Router Advanced 20-9
- call routing 1-15, 7-20
- call view 1-20
- call waiting 1-12, 1-26
 - distinctive 1-10, 8-32
 - multiple 1-11, 8-43
- callback number 8-32
- caller ID 1-9
 - collecting 7-17
 - signal format 8-17
 - T1 1-23
- caller ID receive, on trunk 7-7
- CallRouter
 - Advanced 19-1, 20-1
 - Basic 1-28, 19-1, 20-1
- calls, blocking all outgoing 5-14
- card ID 4-6
- CDR 1-22, 5-17, A-1–A-17
 - session A-17
- CDR Search 1-16
- central office G-2
- Centrex G-2
- Centrex transfer 7-5
- change hardware 3-46
- change password 4-11
- changing hardware 3-45
- changing password 4-11
- channel 4-7
- channel service unit 6-31, 6-32
- child windows 4-5, 4-10
- circuit G-2
- client setup 14-9
- clock configuration 11-4
- CO switch 6-44
- code
 - access 7-3
 - area 7-3
- codec
 - G.711 1-24
 - G.723.1 1-24
- collecting caller ID and DID
 - digits 1-23, 7-17
- COM Server 3-18
- conference
 - bridge option 5-4
- conference call 1-9, G-2
 - limits 2-18
- configurable caller name/DNIS
 - display 1-9
- configurable emergency
 - number 1-22
- configuration 8-36
 - apply to feature 1-21
 - audio peripheral 11-1
 - firewall 6-9
 - IP extension 8-11
 - music on hold & recorded
 - announcements 11-2
 - network 6-28
 - overhead paging 11-3
 - Quantum board 6-2
 - system
 - business hours 5-8
 - call restrictions 5-12
 - extension length 5-5
 - numbering plan 5-4
 - work days 5-9
 - system speed dialing 5-11
 - TCP/IP 14-5
 - Triton Analog Extension
 - Board 6-4
 - Triton T1/PRI Board 6-29

Index

- Triton VoIP Board 6-7
- configure
 - firewall 6-9
 - network for VoIP 6-8
 - WAN router 6-9
- configuring
 - Alti-IP 600 17-1
- confirm callback number 8-32
- connection difficulty 6-28
- contact.htm 18-4, 18-10, 18-14
- contactaltigen.htm 18-4, 18-6, 18-9
- cooling fan
 - installation 2-13
- Country 5-3
- creating
 - NT Emergency Repair Disk 3-44
- CSU 6-31, 6-32
- CSU installation 6-44
- CSU/DSU Requirements 6-31, 6-32
- cumulative IP traffic statistics 13-3
- current traffic statistics
 - refresh interval 4-10
- customerid.htm 18-4, 18-12

D

- D channel 6-41
- data collection fields, altering 18-9, 18-14
- data service unit 6-31, 6-32
- database
 - backup 3-46
- dealer installation ID 3-7
- dealer registration ID 3-7
- default
 - gateway 14-6
- default routes 9-4
- desktop 4-2
- developer support 1-8
- device driver 6-28
- Diagnostic menu 4-3
- dial last caller 1-9
- dialed digits 6-28
- dialing delay
 - T1 signaling 7-16
- dialing pattern routing 9-6

- dialing scheme
 - trunk 7-5
- DialPad, displaying 18-9, 18-14
- DID 7-7
 - collecting 7-17
 - T1 1-23
- DID number
 - extension 8-7
- Digit Manipulation 9-3
- DINA Manager 1-27, 19-9
- directory
 - dial by name 1-17
 - name directory 1-17
- directory structure 18-3
- directory, verifying location 18-3
- directory.htm 18-4
- distinctive call waiting 1-10, 8-32
- distinctive ringing 1-10, 5-3
- distribution list 5-36
- DNIS
 - in call routing 5-31
- Do Not Disturb 8-44, G-3
- docs subdirectory 18-3
- documents 3-1
- domain name 14-5
- downgrade AltiWare 3-47
- DSU 6-31, 6-32
- DTMF
 - remote carriage 1-24

E

- E&M 6-30
- echo cancellation 1-24
- echo suppression 1-24
- email 5-25, 14-9
 - client setup 14-9
 - forwarding 1-21
 - integration with Exchange server 5-26
 - Internet 14-4
 - name 8-10
 - setup 14-4
- email messaging options 5-25
- email services 5-25
- emergency numbers 5-14

Emergency Repair Disk for Windows NT 3-44

enable

- multiple call waiting 8-43
- One Number Access 8-45

enable distinctive ring 5-3

enable intercom 8-8

enable live call handling 1-11, 8-43

enbloc dialing 5-31, 7-5

en-bloc trunks

- reducing dialing delay for 9-8

error messages 18-7, 18-11, 18-20

ESF (Extended Superframe Format) 6-37

Exchange

- email synchronization 5-26
- integration 1-20

Exchange Server 14-10–14-28

Exchange Server, synchronizing an extension 8-32

Exchange synchronization 5-26

Extended Superframe Format (ESF) 6-37

extension

- calling options 8-36
- configuration
 - apply to multiple extensions 1-21
- definition G-4
- DID number 8-7
- email name 8-10
- general settings 8-3
- incoming call handling 8-39
- information only mailbox 8-31
- length 5-5
- message notification 8-34
- monitor list 8-51
- One Number Access 8-48
- outgoing call restrictions 8-36
- physical extension 8-1, G-8
- send notification 8-36
- speed dial 8-28
- types defined 8-1
- virtual 1-13, 8-1
 - definition G-11
- workgroup pilot number 8-1

extension configuration 8-1

Extension Configuration icon 4-4

Extension view window 4-6

external logging 5-20

F

failover routing 1-17, 10-10

faststart enable 7-14

FCC statement 1-xv

feature access 5-6

feature tips 1-10

- enabling/disabling 11-5

features

- AltiServ 1-24, 1-26

file

- server G-4

files

- backup 12-2

firewall 6-28

- configuration 6-9

first digit 5-4

first time login 4-10

flash G-4

foreign exchange subscriber (FXS) 7-16

form data 18-5

form data, altering 18-9, 18-14

formats

- CDR A-1–A-17

forwarding

- mail 1-21

FSK 7-10, 8-16

FSK-based message waiting 1-10

functional specification 2-4

FXS G-4

FXS (Foreign Exchange Subscriber) 7-16

G

G.711 1-24, 7-14

G.711 channel 6-9

G.723.1 1-24, 6-8, 6-9, 7-14

G711 jitter buffer range 7-14

G711 RTP packet length 7-15

Index

- G723 jitter buffer range 7-15
- gateway 14-6
- glossary G-1–G-11
- greeting
 - personal 1-19
- greeting prompts 11-3
- ground start 7-7, G-5
- grounding 2-3
- GTE 6-37

H

- H.323 1-24, 6-10
 - configuration 7-14
- hands free intercom mode 1-10
- hands free manual answer mode 1-10
- hardware
 - adding or changing 3-45
 - basic requirements 2-1
 - hardware status 4-5
 - installation 2-1
 - cooling fan 2-13
 - heat factor 2-13
 - operating environment 2-3, 2-15, 2-16, 2-17
 - system requirements 2-1
 - uninterrupted power supply 2-3
- Help menu 4-3
- helper applications 14-3
- hold
 - music on hold 1-11
- Holiday Routine 5-1
- Holiday Routing 1-13, 1-14
- home area code 5-3
- hop off
 - enabling 5-15
- huntgroup 1-14
 - answer handling 8-45
- huntgroup configuration 8-1
- huntgroup, see workgroup G-5

I

- icons, toolbar 4-4, 4-10
- images subdirectory 18-3

- impedance 7-7, G-5
- incoming call handling 7-20
- incoming ring type 7-7
- information only mailbox 1-18, 8-31
- install
 - previous version 3-47
- installation
 - AltiAdmin 3-44
 - cooling fan 2-13
 - hardware 2-1
 - heat factor 2-13
 - operating environment 2-3, 2-15, 2-16, 2-17
 - Windows NT Emergency Repair Disk 3-44
- installation requirements 18-1
- installation, AltiWare 3-1
- installing a Channel Service Unit (CSU) 6-44
- installing AltiWeb 18-2
- integrating Exchange Server 14-10–14-28
- integration
 - administration 1-25
 - Exchange 1-20
 - VoIP gateway 1-25
- intercom
 - distinctive call waiting 1-10
 - hands free mode 1-10
- intercom call 1-10
- Internet 14-4
 - domain name 14-5
 - email 14-4
 - MIME G-6
 - service provider 14-4
- Internet integration
 - features 1-20
- Intranet 6-8
- IP address 14-6
- IP Cumulative Traffic Statistics
 - window 13-3
- IP dialing table 6-26
- IP extension 8-11
- IP extensions 1-24, 8-2
- IP Phone Service 1-24
- IP trunk

- access code 6-25
- appearance 6-28
- configuration 6-26
- number code 5-6
- IP Trunk Access 5-7
- IP trunk current traffic statistics
 - screen 4-9
- IP trunk traffic window 4-9
- IP trunk, number plan 5-6
- ISDN setting
 - TEI 6-43
- ISP 6-8
- Item Name 10-7
- IVR data 18-5
- IVR_top.htm 18-4
- IVRApplet.htm 18-4

J

- Jam Bit 8 6-37
- jitter
 - average 4-10
 - average statistic 13-4
 - buffer 1-25
- Jitter Buffer 6-9
- jitter buffer 7-14, 7-15

K

- keys, CDR data elements A-1–A-17

L

- liability 1-xv
- limitations 2-11
- line properties
 - Quantum 8-15
- link session ID number A-2
- live call handling 1-11, 8-43
- location format 4-7
- log entries 4-9
- log level 13-3
- login
 - first time 4-10
 - workgroup 1-16
- Login and Logout icons 4-3
- login, logout 4-1

- logout
 - workgroup 1-16
- logout reason code 5-38
- loop current 2-3
- loop start 7-7, G-6

M

- mail forwarding 1-21
- mailbox
 - information only 1-18, 8-31
 - size 8-33
- mailbox capacities 8-33
- main menu 4-2, 4-3
- main number 5-3
- making a connection
 - difficulty 6-28
- making calls
 - from AltMail 1-18
 - from voice mail 8-38
- Management menu 4-3
- management menu
 - audio peripheral
 - configuration 11-1
- Manager Extension 5-3
- managing
 - messages 5-24
- manual online registration 3-7
- MDMF (Multiple Data Message Format) 7-9, 8-17
- menu, AltAdmin main 4-3
- message
 - length 8-33
 - maximum number of 8-33
 - notification 1-19, 8-34
 - for email messages 8-34
 - schedule 8-36
 - notification type 8-35
 - playback 8-32
 - retention 8-33
- message notification 1-26
- message waiting
 - FSK-based 7-10, 8-16
 - tone-based 8-16
 - voltage-based 8-16
- messaging 5-22

Index

- management 5-24
- mixed-media 14-3
- Microsoft CRM integration 1-28
- Microsoft Exchange Server
 - integration 14-10–14-28
- Microsoft SQL 5-20
- MIME 14-3, G-6
- mixed-media messaging 14-3
 - helper applications 14-3
 - MIME 14-3
- Monitor Available 8-52
- monitor list 1-22, 8-51
- mounting panel G-6
- moving system 3-46
- multilink 6-9
- multiple call waiting 1-11, 8-43
- multiple data message format (MDMF) 7-9, 8-17
- multiple workgroup
 - membership 1-14
- music on hold 1-11
 - configuration 11-2
- MVIP G-6
- MVIP clock configuration 11-4
- MVIP clock master, and T1
 - Clocking 6-38
- MVIP Test Tool 1-27, 19-4
- MWI enable, message waiting indicator enable 7-14

N

- NAT 6-10
- navigating AltAdmin 4-1, 4-11
- NetMeeting.htm 18-4
- network
 - address 14-2
 - client setup 14-9
 - configuration 6-28
 - definition 14-1, G-6
 - domain name 14-5
 - email 14-4
 - Internet
 - service provider 14-4
 - local address 14-3
 - mixed-media messaging 14-3

- helper applications 14-3
- multiple AltServ systems 1-24
- protocol 14-1
 - IMAP4 14-2
 - TCP/IP 14-2, 14-5
 - transport 14-1
- quality of service 6-8
- server side setup 14-4
- Network Address Translation (NAT) 6-10
- network configuration for VoIP 6-8
- networking
 - MIME 14-3
 - protocol
 - POP3 14-2
 - SMTP 14-2
- new installations
 - AltWare OE 3-10
- no answer handling 8-44
- node ID A-2, A-9, A-11, A-13
- North American Numbering Plan G-7
- notification
 - message 8-34
 - email 8-34
 - schedule 8-36
- notification type and timing 8-36
- Nsapplet.zip 18-4
- Nsplugin.zip 18-4
- NT service
 - AltWare 3-2
- number plan 6-25
- numbering plan 5-4

O

- offline registration 3-44
- old versions 3-3
- One Number Access 1-11, 1-26, 8-45, 8-48, G-7
- online help 4-3
- online license registration
 - procedures 3-28, 3-37
- Operator Extension 5-4
- operator group 5-4
- optional add-on software 1-27

- options
 - boards 2-9
 - out call routing
 - configuration 9-1–9-7
 - dialing pattern 9-6
 - out call routing configuration
 - default routes 9-4
 - outgoing calls, blocking all 5-14
 - overhead paging 1-11, 11-3
 - by trunk 7-4
 - overlap dialing 5-31, 7-5
- P**
- Packets Lost 4-10
 - Packets Received 4-10
 - Packets Sent 4-10
 - pager notification 8-35
 - paging 1-11, 7-4, 11-3
 - Party1PAD A-9
 - password 3-45, 4-1
 - changing 4-11
 - extension 8-6
 - password, change 4-11
 - PBX
 - features
 - account code 1-8
 - business hours 1-8
 - call forwarding 1-9
 - call park 1-9, 1-12
 - call pickup 1-10
 - call waiting 1-12
 - caller ID 1-9
 - conference call 1-9
 - distinctive ringing 1-10
 - do not disturb 1-10
 - FSK-based message
 - waiting 1-10
 - music on hold 1-11
 - One Number Access 1-11
 - overhead paging 1-11
 - power failure transfer 1-12
 - remote call forwarding 1-9
 - system and station speed
 - dial 1-12
 - toll restrictions 1-9
 - virtual extension 1-13
 - workgroup call routing 1-15
 - PCI Plug and Play 6-8
 - phone display options 8-19
 - phone number
 - trunk 7-4
 - phrase
 - for auto attendant 10-11
 - phrases recorded 10-12
 - physical and IP extensions
 - licenses 3-28
 - physical extension 8-1, G-8
 - pilot number G-8
 - ping 6-28
 - platform
 - for Altiserv 1-4
 - selection 2-1
 - selection guidelines 2-12
 - playback message 8-32
 - playing music from a file 11-2
 - PM schedule 5-9
 - poor voice quality 6-27
 - POP3 5-25, 14-2, G-8
 - POP3 service 5-25
 - port 4-6
 - port specifications 6-8
 - Postmaster Extension 5-25
 - power
 - backup G-8
 - on-board telephony power
 - supply 2-5
 - power failure transfer 1-12, G-8
 - uninterrupted power supply 2-3
 - prefix
 - system prohibited 5-13
 - toll call 5-14
 - pre-recorded prompts 10-12
 - PRI 6-31
 - channel assignment 6-32
 - equipment information 6-31
 - service request information 6-31
 - service requirements 6-31
 - with Voice 6-31
 - PRI ISDN Numbering Plan 6-42
 - productid.htm 18-4, 18-12
 - prompt

Index

- auto attendant 10-8
- prompts 10-11
 - greeting and update 11-3
 - multiple workgroup prompts 1-14
- protocol 14-1
 - definition 14-1
 - IMAP4 14-2
 - POP3 14-2, G-8
 - SMTP 14-2
 - TCP/IP 14-2, 14-5
 - TCP/IP configuration 14-5
 - transport protocol 14-1
- PSTN 6-25
- push web URL 10-8

Q

- quality of service (QoS) 6-8
- Quantum
 - line properties 8-15
 - trunk properties 7-6
- Quantum Board
 - configuration 6-2
- Quantum board
 - specifications 2-4
 - trunk seizure 7-7
- queue
 - multiple announcements 1-14
- queue announcements 20-22
- queue overflow 8-25
- Quick Access toolbar 4-4, 4-10

R

- readme.txt 3-1
- Realtime Transport Control Protocol (RTP/RTCP)
 - definition 6-28
- recorded announcements 11-2
- recorded phrases 10-12
- recording options 5-24
- recording tone 8-9
- reducing dialing delay for en-bloc trunks 9-8
- refresh interval 4-10

- registration
 - manual online 3-7
- registration methods 3-7
- reminder calls 1-19
- remote
 - call forwarding 1-9
- remote locations 5-31
- remote systems 3-44
- report
 - cumulative IP traffic statistics 13-3
 - system summary 13-1
- Reports menu 4-3
- reports, call logs 5-17
- reports, system 13-1–13-4
- requirements
 - basic Altiserv platform 2-1
- requirements, system hardware 2-1
- Reset button 4-6, 4-8
- resetting cumulative statistics 13-4
- Resource Board 6-2
- restore files 3-47
- Restoring files 12-4
- restricting tie trunk calls 5-15
- restrictions
 - call 8-37
 - outgoing call 8-36
- return policy C-5
- ring all available members 8-45, 8-46
- ring back 5-4
- ring first available member 8-45, 8-46
- ring longest idle member 8-46
- ring no answer (RNA) 8-45
- ring-back tone generation 1-25
- ringing
 - distinctive 5-3
- RMA C-5
- RNA Log Out 8-45
- route access 5-7, 9-1–9-7
- route access, number plan 5-6
- route definition 9-1
- router 6-9
- RTM External Logger 1-22
- RTP & RTCP 6-28

- RTP/RTCP
 - definition 6-28
- run AltAdmin 3-45
- S**
 - safety 1-xviii
 - electricity 1-xx
 - sales_cid.htm 18-4
 - sales_pid.htm 18-4
 - scenarios 18-6, 18-10
 - scheduling backup 12-3
 - send notification 8-36
 - server
 - Exchange 5-26
 - Exchange integration 1-20
 - file G-4
 - server IP address 5-30
 - ServerIP, changing 18-9, 18-14
 - service level 4-8
 - service level threshold 8-47
 - service parameters 6-31
 - service provider
 - Internet 14-4
 - services
 - NT 3-2
 - SMTP/POP3 5-25
 - services menu
 - system data management 12-1
 - session
 - CDR records A-17
 - session ID number A-2, A-9
 - sessions
 - licenses 3-28
 - setting up 8-28
 - business hours 5-8
 - email 14-4
 - emergency numbers 5-14
 - LAN email 14-4
 - server side 14-4
 - system numbering plan 5-4
 - trunk attributes 7-3
 - setting up extensions 8-3
 - SF (Superframe Format) 6-37
 - Shutdown Switching 3-18
 - shutting down AltIServ 3-45
 - signaling protocol
 - T1 7-16
 - silence detection 1-25
 - silence suppression 1-25, 7-14
 - single data message format (SDMF) 7-9, 8-17
 - slot 4-7
 - SMDR Report Format A-15
 - SMTP 5-25, 14-2
 - SMTP service 5-25
 - SMTP/POP3 3-1
 - software license
 - activation 3-5
 - registration 3-5
 - Span Types 6-41
 - specifications
 - functional 2-4
 - Quantum board 2-4
 - Triton Analog Station board 2-5
 - Triton Resource board 2-7
 - Triton T1/E1/PRI board 2-7
 - speed dial 1-12
 - station 8-28
 - speed dialing 1-26
 - configuration 5-11
 - split area codes 1-23, 5-26
 - SQL 5-20
 - SQL queries 20-21
 - station speed dialing 8-28
 - statistics 6-27
 - IP traffic 4-9
 - status bar 4-10
 - Stop Switching Service 4-11
 - stop/start
 - AltWare services 4-11
 - Superframe Format (SF) 6-37
 - switching service 3-2, 3-18
 - switching, shutting down 3-45
 - synchronization
 - email servers 5-26
 - system
 - area codes 1-23, 5-26
 - business hours 5-8
 - call park 1-12
 - call restrictions 5-12
 - callback from auto

Index

- attendant 1-13
- data management 12-1
- distinctive ringing 5-3
- DNIS in call routing 5-31
- email 5-25
- emergency numbers 5-14
- extension length 5-5
- home area code 5-3
- main number 5-3
- messaging 5-22
- numbering plan 5-4
- summary report 13-1
- work days 5-9
- system administration
 - features 1-21
- system call park 5-4
- system callback 1-26
- system clock master 6-38
- System Configuration icon 4-3
- System Help icon 4-4
- System ID 5-2
- system key 2-1
- system limitations 2-11
- System Log icon 4-4
- system numbering 5-4
- system password 3-45
- system reports 13-1–13-4
- system requirements 2-1, 18-1
- System Summary icon 4-4

T

T1

- caller ID 1-23
- channel assignment 6-31
- DID 1-23
- equipment information 6-29
- service parameters 6-29
- service request information 6-29
- signaling protocol 7-16
- types of services 6-30
- with Voice 6-30
- T1 clock 6-38
- T1 service 6-29
- T1 signaling
 - dialing delay 7-16

- T1/E1/PRI
 - features 1-23
- T1/PRI
 - troubleshooting 6-44
- T1/PRI configuration button 6-38
- T1/PRI features
 - ANI/DNIS Transport over Tie Trunks 1-23
 - hop off calls over Tie Trunks 1-10
- TAPI
 - definition G-10
 - support 1-8
- TCP fragmentation 6-9
- TCP/IP 14-2, 14-5
- technical support
 - escalation procedures C-2
- TEI (terminal endpoint identifier) 6-43
- tenant selection
 - trunk 7-5
- tenant service 1-23
- tenant table 5-33
- terminal endpoint identifier (TEI) 6-43
- testing
 - Call Router 20-27
- Third party applications 3-3
- tie trunk 7-5
- tie trunks 5-15
- toll call prefix 5-14
- toll prefix 5-14
- toll restrictions 1-9, 5-12
- toolbar 4-4, 4-10
- tools 18-1
- Top.htm 18-4
- traffic statistics 4-9, 6-27
- Transfer Predial String 7-5
- transfer system 3-46
- transport protocol 14-1
- Triton
 - T1 board 1-6
 - T1/PRI trunk properties 7-15
- Triton Analog Extension Board
 - configuration 6-4
- Triton Analog Station board

- specifications 2-5
 - Triton Analog Station Line Properties
 - dialog box 8-17
 - Triton Analog trunk LS/GS
 - properties 7-11
 - Triton Analog trunk properties 7-9
 - Triton Resource Board 6-2
 - Triton Resource board
 - specifications 2-7
 - Triton T1/E1/PRI board
 - specifications 2-7
 - Triton T1/PRI (see also T1/PRI)
 - Triton T1/PRI Board
 - configuration 6-29
 - Triton VoIP
 - trunk properties 7-13
 - Triton VoIP Board
 - configuration 6-7
 - Triton VoIP board (see also VoIP)
 - troubleshooting 18-20
 - cannot make connection 6-28
 - loop-back test 6-27
 - poor voice quality 6-27
 - VoIP board 6-27–6-29
 - troubleshooting T1/PRI 6-44
 - trunk
 - access code 7-3
 - attributes 7-5
 - Centrex 7-5
 - configuration
 - apply to multiple trunks 1-21
 - dialing scheme 7-5
 - direction of transmission 7-4
 - ground start G-5
 - impedance G-5
 - incoming call routing 7-20
 - loop start G-6
 - phone number 7-4
 - tenant selection 7-5
 - type A-4
 - trunk access 5-7
 - trunk access code 1-24
 - trunk configuration 7-1
 - Trunk Configuration icon 4-4
 - Trunk Configuration window 4-7
 - trunk interface
 - loop/ground/wink start 1-13
 - Trunk Monitor Enable 8-52
 - trunk properties
 - Quantum 7-6
 - Triton T1/PRI 7-15
 - Triton VoIP 7-13
 - VoIP 7-13
 - trunk seizure
 - Quantum 7-7
 - trunk traffic, IP statistics 4-9
 - trunk view 6-28
 - Trunk View window 7-1
 - Trunk view window 4-7
 - trunk, number plan 5-6
 - trunks
 - setting up attributes 7-3
 - trunks, tie 5-15
- ## U
- UDP 6-9
 - unanswered calls 8-44
 - uninstall AltiWare 3-47
 - uninstalling AltiWeb 18-21
 - uninterrupted power supply (UPS) 2-3
 - update prompts 11-3
 - upgrading
 - AltiWare OE 3-17
 - UPS 2-3
 - URL history 18-5
 - User Account 3-2
 - user interface 4-1, 4-11
- ## V
- View menu 4-3
 - view window
 - call log 4-9
 - View windows 4-5, 4-10
 - virtual extension 8-1
 - definition G-11
 - voice
 - compression 1-24
 - encoding 1-24
 - quality 1-24, 6-27

Index

- voice mail
 - call forwarding from 1-18
 - distribution list 1-19, 1-23
 - forwarding 1-21
 - making calls from 8-38
- voice messaging 5-22
 - features 1-18
 - message notification 1-19
 - reminder calls 1-19
 - zoomerang 1-20
- voice over IP
 - features 1-23
- voicemail playing order 8-32
- VoIP 7-13
 - integrated gateway 1-25
 - trunk properties 7-13
- VoIP troubleshooting 6-27–6-29
- voltage based call indicator 7-10, 8-16

W

- wait 4-8
- waiting time 4-8
- WAN
 - bandwidth 6-8
 - router configuration 6-9
- warranty 1-xxxiii
 - extended warranty 1-xxxiii
 - how to get service 1-xxxiii
- windows
 - view (boards, trunks, etc.) 4-5, 4-10
- Wink Start 7-7
- Wizard.htm 18-4
- work days 5-9
- workgroup
 - agent login/logout 1-16
 - answer handling 8-46
 - barge in 1-16
 - call pickup 1-15
 - call routing 1-15
 - CDR Search 1-16
 - defined 8-1
 - log off reason codes 1-16
 - multiple membership of 1-14

- multiple queue
 - announcements 1-14
 - pilot number 8-1, G-8
 - silent monitoring 1-16
- workgroup configuration 8-1
- Workgroup view window 4-8

Z

- zero code suppression 6-37
 - Bell 6-38
 - GTE 6-37
 - Jam Bit 8 6-37
- Zoomerang 1-26

Readers Comment Form

AltiWare OE Release 4.6
AltiServ System Installation and Administration Manual

Please use this form to provide comments about this publication, its organization, or the subject matter. Suggestions for improvement or enhancements to our documentation are always welcome.

On a scale of 1 to 5, **1 is the lowest** score and **5 is the highest** score. Please complete the following questionnaire.

Question	Rating Scale 1 - 5
Did you find the information to be:	
Well-organized by subject matter?	
Organized for convenient use?	
Accurate?	
Well illustrated?	
Written for your technical level?	
Complete? (If not, what's missing?)	
Your occupation or job title:	
Do you use this publication as:	Place an "X" in the column.
A reference for hardware information?	
A reference for software information?	
Mixed-media messaging or network information?	
Other	

COMMENTS:

Mail to:

AltiGen Communications, Inc.
47427 Fremont Blvd.
Fremont, CA 94538

Or

Call us at: (510) 252 - 9712

Fax us at: (510) 252 - 9738

E-Mail us at: docs@altigen.com